

**FLUKE**®

**Hart Scientific**®

# **1620 “DEWK”**

*Thermo-Hygrometer  
User’s Guide*

**Fluke Corporation**

**Hart Scientific Division**

799 E. Utah Valley Drive American Fork, UT 84003-9775 USA

Phone: +1.801.763.1600

Telefax: +1.801.763.1010

Email: [support@hartscientific.com](mailto:support@hartscientific.com)

**[www.hartscientific.com](http://www.hartscientific.com)**

Subject to change without notice. Copyright © 2005 Printed in USA

# Table of Contents

<b>1</b>	<b>Before You Start</b>	<b>1</b>
1.1	Symbols Used	1
1.2	Safety Information	2
1.2.1	Warnings	2
1.2.2	Cautions	3
1.3	Authorized Service Centers	3
<b>2</b>	<b>Introduction</b>	<b>7</b>
<b>3</b>	<b>Specifications and Environmental Conditions</b>	<b>9</b>
3.1	Specifications	9
3.2	Environmental Conditions	10
3.3	Warranty	10
<b>4</b>	<b>Quick Start</b>	<b>13</b>
4.1	Unpacking	13
4.2	Use Proper Care	13
4.3	Learn About the Features and Components	13
4.4	Install the Battery	13
4.5	Connect the Sensor	14
4.6	Connect the Power Source	14
4.7	Switch the Power On	14
4.8	Measure Temperature	14
<b>5</b>	<b>Parts and Controls</b>	<b>15</b>
5.1	Front Panel	15
5.2	Top Panel	16
5.3	Right Side Panel	16
5.4	Left Side Panel	17
5.5	Back Panel	18
5.6	Quick Buttons	18
5.7	Configurations	19
5.8	Accessories	19
<b>6</b>	<b>General Operation</b>	<b>21</b>

6.1	DC Power Source . . . . .	21
6.2	Battery . . . . .	21
6.3	Sensor Configuration . . . . .	22
6.4	Power Switch . . . . .	22
6.5	Power On Self-Test . . . . .	22
6.6	Display Contrast . . . . .	22
6.7	Display . . . . .	23
6.8	Alarm Screen . . . . .	23
6.9	Measuring . . . . .	23
6.10	Unit of Temperature . . . . .	23
6.11	Recording Measurements . . . . .	23
6.12	Sensors . . . . .	23
6.12.1	Sensor Accuracy . . . . .	24

## **7 Menu Functions. . . . . 27**

7.1	Channel Menu . . . . .	28
7.1.1	Channel Setting . . . . .	28
7.1.2	Sensor ID . . . . .	29
7.1.3	Sensor Lock . . . . .	30
7.1.4	Sensor Cal. . . . .	31
7.2	Display Menu . . . . .	33
7.2.1	Display Setting . . . . .	33
7.2.2	Display Layout . . . . .	34
7.2.3	Field Data . . . . .	36
7.2.4	Graph Scale . . . . .	38
7.2.5	Display Reset . . . . .	40
7.3	Data Menu . . . . .	40
7.3.1	Data Record . . . . .	41
7.3.1.1	Record Setting . . . . .	42
7.3.1.2	Data View . . . . .	44
7.3.1.3	Data Print . . . . .	45
7.3.1.4	Data Storage . . . . .	46
7.3.1.5	Data Clear . . . . .	47
7.3.2	Daily Stats. . . . .	48
7.3.2.1	Stats Setting . . . . .	49
7.3.2.2	Stats View . . . . .	50
7.3.2.3	Stats Print . . . . .	50
7.3.2.4	Stats Reset . . . . .	51
7.3.2.5	Stats Clear . . . . .	52
7.3.3	Data Card . . . . .	53
7.3.3.1	File Write . . . . .	54
7.3.3.2	File View . . . . .	54
7.4	Alarm Menu . . . . .	56
7.4.1	Alarm Setting . . . . .	56
7.4.2	Sensor Alarm . . . . .	57
7.4.3	System Alarm . . . . .	58
7.4.4	Alarm View . . . . .	59

7.5	System Menu . . . . .	60
7.5.1	System Setting . . . . .	61
7.5.2	Date Time . . . . .	62
7.5.3	Comm Setting . . . . .	64
7.5.3.1	Serial . . . . .	65
7.5.3.2	IR . . . . .	67
7.5.4	Password . . . . .	67
7.5.5	System Info . . . . .	69

## 8 Digital Communications Interface . . . . . 71

8.1	Overview . . . . .	71
8.2	Communications . . . . .	71
8.2.1	Serial Wiring . . . . .	71
8.3	Interface Commands . . . . .	72
8.3.1	Command Summary . . . . .	72
8.3.2	Command Syntax . . . . .	72
8.4	Commands . . . . .	80
8.4.1	Alarm Commands . . . . .	81
8.4.1.1	ALARm:BATTeRy? . . . . .	81
8.4.1.2	ALARm:BATTeRy:ENABle? . . . . .	81
8.4.1.3	ALARm:BATTeRy:ENABle <bool> . . . . .	82
8.4.1.4	ALARm:BEEP? . . . . .	82
8.4.1.5	ALARm:BEEP <bool> . . . . .	82
8.4.1.6	ALARm:CLEAr . . . . .	82
8.4.1.7	ALARm:DATE:FIRSt? . . . . .	82
8.4.1.8	ALARm:DATE:LAST? . . . . .	82
8.4.1.9	ALARm:DISPlay? . . . . .	83
8.4.1.10	ALARm:DISPlay <bool> . . . . .	83
8.4.1.11	ALARm:POWeR? . . . . .	83
8.4.1.12	ALARm:POWeR:ENABle? . . . . .	83
8.4.1.13	ALARm:POWeR:ENABle <bool> . . . . .	83
8.4.1.14	ALARm:RHUMidity<chn>:LOWer? . . . . .	84
8.4.1.15	ALARm:RHUMidity<chn>:LOWer:ENABle? . . . . .	84
8.4.1.16	ALARm:RHUMidity<chn>:LOWer:ENABle <bool> . . . . .	84
8.4.1.17	ALARm:RHUMidity<chn>:LOWer:LIMit? [MINIMAXIDeF] . . . . .	84
8.4.1.18	ALARm:RHUMidity<chn>:LOWer:LIMit <float> MINIMAXIDeF . . . . .	85
8.4.1.19	ALARm:RHUMidity<chn>:RATE? . . . . .	85
8.4.1.20	ALARm:RHUMidity<chn>:RATE:ENABle? . . . . .	85
8.4.1.21	ALARm:RHUMidity<chn>:RATE:ENABle <bool> . . . . .	85
8.4.1.22	ALARm:RHUMidity<chn>:RATE:LIMit? [MINIMAXIDeF] . . . . .	85
8.4.1.23	ALARm:RHUMidity<chn>:RATE:LIMit <float> MINIMAXIDeF . . . . .	86
8.4.1.24	ALARm:RHUMidity<chn>:SENSor? . . . . .	86
8.4.1.25	ALARm:RHUMidity<chn>:SENSor:ENABle? . . . . .	86
8.4.1.26	ALARm:RHUMidity<chn>:SENSor:ENABle <bool> . . . . .	86
8.4.1.27	ALARm:RHUMidity<chn>:UPPeR? . . . . .	87
8.4.1.28	ALARm:RHUMidity<chn>:UPPeR:ENABle? . . . . .	87
8.4.1.29	ALARm:RHUMidity<chn>:UPPeR:ENABle <bool> . . . . .	87
8.4.1.30	ALARm:RHUMidity<chn>:UPPeR:LIMit? [MINIMAXIDeF] . . . . .	87
8.4.1.31	ALARm:RHUMidity<chn>:UPPeR:LIMit <float> MINIMAXIDeF . . . . .	87
8.4.1.32	ALARm:TEMPurature<chn>:LOWer? . . . . .	88
8.4.1.33	ALARm:TEMPurature<chn>:LOWer:ENABle? . . . . .	88
8.4.1.34	ALARm:TEMPurature<chn>:LOWer:ENABle <bool> . . . . .	88
8.4.1.35	ALARm:TEMPurature<chn>:LOWer:LIMit? [MINIMAXIDeF] . . . . .	88
8.4.1.36	ALARm:TEMPurature<chn>:LOWer:LIMit <float> MINIMAXIDeF . . . . .	89
8.4.1.37	ALARm:TEMPurature<chn>:RATE? . . . . .	89
8.4.1.38	ALARm:TEMPurature<chn>:RATE:ENABle? . . . . .	89
8.4.1.39	ALARm:TEMPurature<chn>:RATE:ENABle <bool> . . . . .	89
8.4.1.40	ALARm:TEMPurature<chn>:RATE:LIMit? [MINIMAXIDeF] . . . . .	90

8.4.1.41	ALARm:TEMPurature<chn>:RATE:LIMit <float> MIN MAX DEF . . . . .	90
8.4.1.42	ALARm:TEMPurature<chn>:SENSor? . . . . .	90
8.4.1.43	ALARm:TEMPurature<chn>:SENSor:ENABle? . . . . .	90
8.4.1.44	ALARm:TEMPurature<chn>:SENSor:ENABle <bool>. . . . .	91
8.4.1.45	ALARm:TEMPurature<chn>:UPPer? . . . . .	91
8.4.1.46	ALARm:TEMPurature<chn>:UPPer:ENABle? . . . . .	91
8.4.1.47	ALARm:TEMPurature<chn>:UPPer:ENABle <bool> . . . . .	91
8.4.1.48	ALARm:TEMPurature<chn>:UPPer:LIMit? [MIN MAX DEF] . . . . .	91
8.4.1.49	ALARm:TEMPurature<chn>:UPPer:LIMit <float> MIN MAX DEF. . . . .	92
8.4.1.50	ALARm:TIME:FIRST? . . . . .	92
8.4.1.51	ALARm:TIME:LAST? . . . . .	92
8.4.2	Measurement Commands . . . . .	92
8.4.2.1	CALCulate:AVERAge:CLEar . . . . .	92
8.4.2.2	CALCulate<chn>:DEWPoint? . . . . .	93
8.4.2.3	CALCulate<chn>:HINdex? . . . . .	93
8.4.2.4	CALCulate<chn>:PARAmeter<num>:AVERAge<type>? . . . . .	93
8.4.2.5	CALCulate[<chn>]:PARAmeter[<num>]:AVERAge[<type>]:CLEar . . . . .	93
8.4.2.6	CALCulate[<chn>]:PARAmeter[<num>]:AVERAge[<type>]:DATA? . . . . .	93
8.4.2.7	CALCulate[<chn>]:PARAmeter<num>:AVERAge<type>:TYPE? . . . . .	93
8.4.2.8	CALCulate<chn>:PARAmeter<num>:RATE? . . . . .	94
8.4.2.9	CALCulate[<chn>]:PARAmeter[<num>]:RATE:TIME? [MIN MAX DEF]. . . . .	94
8.4.2.10	CALCulate[<chn>]:PARAmeter[<num>]:RATE:TIME <num> MIN MAX DEF . . . . .	94
8.4.2.11	CALCulate[<chn>]:PARAmeter<num>:RESolution? [MIN MAX DEF] . . . . .	94
8.4.2.12	CALCulate[<chn>]:PARAmeter<num>:RESolution <num> MIN MAX DEF. . . . .	95
8.4.2.13	FETCh? [<chn>] . . . . .	95
8.4.2.14	FORMat:TDST:STATe? . . . . .	96
8.4.2.15	FORMat:TDST:STATe <bool> . . . . .	96
8.4.2.16	MEASure? [<chn>]. . . . .	96
8.4.2.17	READ? [<chn>]. . . . .	97
8.4.3	Data Commands . . . . .	97
8.4.3.1	DATA:DStatistics:ENABle? . . . . .	97
8.4.3.2	DATA:DStatistics:ENABle <bool>. . . . .	97
8.4.3.3	DATA:DStatistics:HOuR? [MIN MAX DEF] . . . . .	97
8.4.3.4	DATA:DStatistics:HOuR <num> MIN MAX DEF . . . . .	98
8.4.3.5	DATA:DStatistics:RENABle? . . . . .	98
8.4.3.6	DATA:DStatistics:RENABle <bool> . . . . .	98
8.4.3.7	DATA:DStatistics:RHouR? [MIN MAX DEF] . . . . .	98
8.4.3.8	DATA:DStatistics:RHouR <num> MIN MAX DEF . . . . .	98
8.4.3.9	DATA:DStatistics:RECOrd:BTIME? [<num>] . . . . .	99
8.4.3.10	DATA:DStatistics:RECOrd:CLEar . . . . .	99
8.4.3.11	DATA:DStatistics:RECOrd:COUNt? [<MAX>] . . . . .	99
8.4.3.12	DATA:DStatistics:RECOrd:DATE? [<num>]. . . . .	99
8.4.3.13	DATA:DStatistics:RECOrd:ETIME? [<num>] . . . . .	99
8.4.3.14	DATA:DStatistics:RECOrd:FIND? (<year>,<month>,<day>) . . . . .	100
8.4.3.15	DATA:DStatistics:RECOrd:VALue? <num>,<chn>,<type> . . . . .	100
8.4.3.16	DATA:RECOrd:CLEar . . . . .	100
8.4.3.17	DATA:RECOrd:FEED:RHUMidity<chn>? . . . . .	100
8.4.3.18	DATA:RECOrd:FEED:RHUMidity<chn> <bool>. . . . .	100
8.4.3.19	DATA:RECOrd:FEED:TEMPerature<chn>? . . . . .	101
8.4.3.20	DATA:RECOrd:FEED:TEMPerature<num> <bool> . . . . .	101
8.4.3.21	DATA:RECOrd:FREE? . . . . .	101
8.4.3.22	DATA:RECOrd:OPEN? . . . . .	101
8.4.3.23	DATA:RECOrd:OPEN [(<year>,<month>,<day>,<hour>,<minute>,<second>),(<year>,<month>,<day>,<hour>,<minute>,<second>)] . . . . .	102
8.4.3.24	DATA:RECOrd:READ? [<num>] . . . . .	102
8.4.3.25	DATA:RECOrd:TIME? [MIN MAX DEF]. . . . .	102
8.4.3.26	DATA:RECOrd:TIME <num> MIN MAX DEF . . . . .	102
8.4.4	Measurement Control Commands . . . . .	103
8.4.4.1	INITiate . . . . .	103
8.4.4.2	INITiate:CONTInuous? . . . . .	103
8.4.4.3	SENSor:AVERAge? . . . . .	103
8.4.4.4	SENSor:AVERAge <bool> . . . . .	103
8.4.4.5	SENSor<chn>:LOCK? . . . . .	103
8.4.4.6	SENSor<chn>:LOCK <bool>. . . . .	104

8.4.4.7	SENsOr<chn>:IDENtification?	104
8.4.4.8	SENsOr<chn>:IDENtification <str>	104
8.4.4.9	SENsOr<chn>:STATe?	104
8.4.4.10	TRIGger:TIMer? [MIN MAX DEF]	105
8.4.4.11	TRIGger:TIMer <num> MIN MAX DEF	105
8.4.5	Channel Commands	105
8.4.5.1	ROUTe:CLOSe? <chn>	105
8.4.5.2	ROUTe:CLOSe <chn>	106
8.4.5.3	ROUTe:OPEN? <chn>	106
8.4.5.4	ROUTe:OPEN <chn>	106
8.4.6	Calibration Commands	106
8.4.6.1	CALibrate<chn>:ALERT?	106
8.4.6.2	CALibrate<chn>:ALERT <bool>	106
8.4.6.3	CALibrate<chn>:DATE:CALibrate?	107
8.4.6.4	CALibrate<chn>:DATE:CALibrate (<year>,<month>,<day>)	107
8.4.6.5	CALibrate<chn>:DATE:DUE?	107
8.4.6.6	CALibrate<chn>:DATE:DUE (<year>,<month>,<day>)	107
8.4.6.7	CALibrate<chn>:EXPIred?	107
8.4.6.8	CALibrate<chn>:PARAmeter:OFFSet<num>?	108
8.4.6.9	CALibrate<chn>:PARAmeter:OFFSet<num> <float>	108
8.4.6.10	CALibrate<chn>:PARAmeter:SCALe<num>?	108
8.4.6.11	CALibrate<chn>:PARAmeter:SCALe<num> <float>	108
8.4.7	System Commands	109
8.4.7.1	*IDN?	109
8.4.7.2	*OPT?	109
8.4.7.3	*RST	109
8.4.7.4	SYSTem:BOOT:VERSion?	109
8.4.7.5	SYSTem:ERRor?	110
8.4.7.6	SYSTem:CODE:VERSion?	110
8.4.7.7	SYSTem:VERSion?	110
8.4.7.8	UNIT:TEMPerature?	110
8.4.7.9	UNIT:TEMPerature <unit>	110
8.4.8	Communication Interface Commands	110
8.4.8.1	SYSTem:COMMunicate:IR:MODE?	111
8.4.8.2	SYSTem:COMMunicate:IR:MODE <num>	111
8.4.8.3	SYSTem:COMMunicate:SERial:BAUD? [MIN MAX DEF]	111
8.4.8.4	SYSTem:COMMunicate:SERial:BAUD <baud> MIN MAX DEF	111
8.4.8.5	SYSTem:COMMunicate:SERial:FDPlex?	111
8.4.8.6	SYSTem:COMMunicate:SERial:FDPlex <bool>	112
8.4.8.7	SYSTem:COMMunicate:SERial:FEED?	112
8.4.8.8	SYSTem:COMMunicate:SERial:FEED <bool>	112
8.4.8.9	SYSTem:COMMunicate:SERial:LINefeed?	112
8.4.8.10	SYSTem:COMMunicate:SERial:LINefeed <bool>	112
8.4.8.11	SYSTem:COMMunicate:SERial:TIME? [MIN MAX DEF]	112
8.4.8.12	SYSTem:COMMunicate:SERial:TIME <num> MIN MAX DEF	113
8.4.8.13	SYSTem:KLOCKout?	113
8.4.8.14	SYSTem:KLOCKout <bool>	113
8.4.8.15	SYSTem:POWer:BATTerY?	113
8.4.9	Date and Time Commands	113
8.4.9.1	SYSTem:DATE?	114
8.4.9.2	SYSTem:DATE (<year>,<month>,<day>)	114
8.4.9.3	SYSTem:DATE:FORMat? [MIN MAX DEF]	114
8.4.9.4	SYSTem:DATE:FORMat <num> MIN MAX DEF	114
8.4.9.5	SYSTem:DECimal:FORMat? [MIN MAX DEF]	114
8.4.9.6	SYSTem:DECimal:FORMat <num> MIN MAX DEF	115
8.4.9.7	SYSTem:TIME?	115
8.4.9.8	SYSTem:TIME (<hour>,<minute>,<second>)	115
8.4.9.9	SYSTem:TIME:DAYLight? [MIN MAX DEF]	115
8.4.9.10	SYSTem:TIME:DAYLight <num> MIN MAX DEF	116
8.4.9.11	SYSTem:TIME:FORMat? [MIN MAX DEF]	116
8.4.9.12	SYSTem:TIME:FORMat <num> MIN MAX DEF	116
8.4.10	Password Commands	116
8.4.10.1	SYSTem:PASSword:ALARm?	116

8.4.10.2	SYSTem:PASSword:ALARm <bool>	117
8.4.10.3	SYSTem:PASSword:CDISable	117
8.4.10.4	SYSTem:PASSword:CENable <pass>	117
8.4.10.5	SYSTem:PASSword:CENable:STATe?	117
8.4.10.6	SYSTem:PASSword:NEW <pass> DEF	117
8.4.10.7	SYSTem:PASSword:RECORD?	118
8.4.10.8	SYSTem:PASSword:RECORD <bool>	118
8.4.10.9	SYSTem:PASSword:SENsor?	118
8.4.10.10	SYSTem:PASSword:SENsor <bool>	118
8.4.10.11	SYSTem:PASSword:STATistics?	118
8.4.10.12	SYSTem:PASSword:STATistics <bool>	119
8.4.10.13	SYSTem:PASSword:TIME?	119
8.4.10.14	SYSTem:PASSword:TIME <bool>	119
8.4.11	Status Commands	119
8.4.11.1	*CLS	119
8.4.11.2	*ESE?	119
8.4.11.3	*ESE <num> MINIMAX DEF	120
8.4.11.4	*ESR?	120
8.4.11.5	*SRE?	121
8.4.11.6	*SRE <num> MINIMAX DEF	121
8.4.11.7	*STB?	121
8.4.11.8	*TST? [<bool>]	122
8.4.11.9	STATus:ALARm?	124
8.4.11.10	STATus:ALARm:CONDition?	124
8.4.11.11	STATus:ALARm:ENABle?	125
8.4.11.12	STATus:ALARm:ENABle <num> MINIMAX DEF	125
8.4.11.13	STATus:MEASure?	125
8.4.11.14	STATus:MEASure:CONDition?	126
8.4.11.15	STATus:MEASure:ENABle?	126
8.4.11.16	STATus:MEASure:ENABle <num> MINIMAX DEF	126
8.4.11.17	STATus:OPERation?	127
8.4.11.18	STATus:OPERation:CONDition?	127
8.4.11.19	STATus:OPERation:ENABle?	128
8.4.11.20	STATus:OPERation:ENABle <num> MINIMAX DEF	128
8.4.11.21	STATus:QUESTionable?	128
8.4.11.22	STATus:QUESTionable:CONDition?	129
8.4.11.23	STATus:QUESTionable:ENABle?	129
8.4.11.24	STATus:QUESTionable:ENABle <num> MINIMAX DEF	129
8.4.12	Port Numbers	130
8.4.13	Date and Time Formats	130

## 9 Calibration Procedure . . . . . 131

9.1	Equipment	131
9.2	Preparation	131
9.3	Calibration Points	131
9.4	Temperature and Humidity Measurement Errors	132
9.5	Temperature and Humidity Adjustments	133

## 10 Maintenance . . . . . 135

## 11 Troubleshooting . . . . . 137

11.1	Troubleshooting	137
11.1.1	Incorrect temperature or humidity reading	137
11.1.2	Missing or Scattered Graph Data	137
11.1.3	Blank screen	137



11.1.4	Error message at power up. . . . .	137
11.1.5	Self-Test Error Messages . . . . .	138
11.1.6	Start-up Error Messages . . . . .	138
11.1.7	Error Messages during Normal Operation. . . . .	138
11.2	Downloading Recorded Data . . . . .	139
11.3	Placement of IR Dongle for Transfer of Data . . . . .	140
11.4	CE Comments . . . . .	140
11.4.1	EMC Directive . . . . .	140
11.4.1.1	Immunity Testing . . . . .	140
11.4.1.2	Emission Testing . . . . .	141
11.4.2	Low Voltage Directive (Safety) . . . . .	141
11.5	Frequently Asked Questions . . . . .	141

# Figures

Figure 1	Front Panel . . . . .	15
Figure 2	Top Panel . . . . .	16
Figure 3	Right and Left Side View . . . . .	17
Figure 4	Back Panel . . . . .	18
Figure 5	Main Display . . . . .	27
Figure 6	Main Menu . . . . .	27
Figure 7	Channel Menu . . . . .	28
Figure 8	Channel Setting . . . . .	29
Figure 9	Sensor ID. . . . .	30
Figure 10	Sensor Lock . . . . .	31
Figure 11	Sensor Cal . . . . .	32
Figure 12	Sensor Channel Select . . . . .	32
Figure 13	Display Menu . . . . .	33
Figure 14	Display Setting . . . . .	34
Figure 15	Display Layout . . . . .	35
Figure 16	Field Data . . . . .	38
Figure 17	Graph Scale . . . . .	39
Figure 18	Graph Scale , Select Zone . . . . .	39
Figure 19	Display Reset. . . . .	40
Figure 20	Data Menu . . . . .	41
Figure 21	Data Record . . . . .	42
Figure 22	Record Setting . . . . .	43
Figure 23	Data View, Begin Time. . . . .	44
Figure 24	Data View, Numeric Format . . . . .	44
Figure 25	Data Print. . . . .	46
Figure 26	Data Clear . . . . .	47
Figure 27	Data Storage . . . . .	47
Figure 28	Daily Stats . . . . .	48
Figure 29	Stats Setting . . . . .	49
Figure 30	Stats View . . . . .	50
Figure 31	Stats Print . . . . .	51
Figure 32	Stats Clear . . . . .	52
Figure 33	Stats Reset . . . . .	52
Figure 34	Data Card. . . . .	53
Figure 35	File Write. . . . .	54
Figure 36	File View . . . . .	55
Figure 37	Alarm. . . . .	56
Figure 38	Alarm Setting . . . . .	57
Figure 39	Sensor Alarm. . . . .	58
Figure 40	System Alarm . . . . .	59

Figure 41	Alarm View . . . . .	60
Figure 42	System Menu. . . . .	61
Figure 43	System Setting . . . . .	62
Figure 44	Date Time . . . . .	63
Figure 45	Comm Setting . . . . .	65
Figure 46	Serial . . . . .	66
Figure 47	IR. . . . .	67
Figure 48	Password . . . . .	68
Figure 49	System Info . . . . .	69
Figure 50	Serial Cable Wiring . . . . .	71

# Tables














Table 1	International Electrical Symbols . . . . .	1
Table 2	Statistics Zone Field Types. . . . .	36
Table 3	Approximate Data Storage Capacity. . . . .	43
Table 4	Alphabetical List Commands . . . . .	73
Table 4	Alphabetical List Commands continued . . . . .	74
Table 4	Alphabetical List Commands continued . . . . .	75
Table 4	Alphabetical List Commands continued . . . . .	76
Table 4	Alphabetical List Commands continued . . . . .	77
Table 4	Alphabetical List Commands continued . . . . .	78
Table 4	Alphabetical List Commands continued . . . . .	79




# 1 Before You Start

## 1.1 Symbols Used

Table 1 lists the International Electrical Symbols. Some or all of these symbols may be used on the instrument or in this manual.

**Table 1** International Electrical Symbols

Symbol	Description
	AC (Alternating Current)
	AC-DC
	Battery
	CE Complies with European Union Directives
	DC (Direct Current)
	Double Insulated
	Electric Shock
	Fuse
	PE Ground
	Hot Surface (Burn Hazard)
	Read the User's Manual (Important Information)
	Off
	On

Symbol	Description
	Canadian Standards Association
CAT II	OVERVOLTAGE (Installation) CATEGORY II, Pollution Degree 2 per IEC1010-1 refers to the level of Impulse Withstand Voltage protection provided. Equipment of OVERVOLTAGE CATEGORY II is energy-consuming equipment to be supplied from the fixed installation. Examples include household, office, and laboratory appliances.
	C-TIC Australian EMC Mark
	The European Waste Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) mark.

## 1.2 Safety Information

Use this instrument only as specified in this manual. Otherwise, the protection provided by the instrument may be impaired.

The following definitions apply to the terms "Warning" and "Caution".

- "Warning" identifies conditions and actions that may pose hazards to the user.
- "Caution" identifies conditions and actions that may damage the instrument being used.

### 1.2.1 Warnings

To avoid personal injury, follow these guidelines.

- **DO NOT** use this unit in environments other than those listed in the User's Guide.
- Follow all safety guidelines listed in the User's Guide.
- Calibration equipment should only be used by trained personnel.
- The AC adapter can present safety concerns if misused or damaged. To avoid the risk of electric shock or fire, do not use the AC adapter outdoors or in a dusty, dirty, or wet environment. If the cord, case, or plug of the adapter is damaged in any way, discontinue its use immediately and have it replaced.
- Never disassemble the AC adapter. Use only the AC adapter provided with the instrument or equivalent adapter recommended by the manufacturer of this instrument.
- The AC adapter has circuits with high voltage inside that could present danger of electrical shock or fire if exposed. If the AC adapter is damaged in any way or becomes hot, discontinue its use immediately, disconnect it from any AC supply, and have it replaced. Do not attempt to open, repair, or continue using a damaged or defective AC adapter.

- The instrument battery can present danger if not handled properly. To avoid the risk of exposure to dangerous substances or explosion, immediately remove the battery and discontinue use if it leaks or becomes damaged. Never allow the battery to be shorted, heated, punctured, or dropped. If the instrument is physically damaged, immediately remove the battery to insure that it does not become shorted. While removed from the instrument, store the battery in a location so that it will not come into contact with metal or fluids that might short circuit the battery and where it is safe from excessive temperatures.
- Used batteries must be disposed of properly. Check your local regulations for additional information. Never dispose of batteries in fire which may result in explosion with the possibility of personal injury or property damage.

## 1.2.2

### Cautions

- If the instrument is dropped, struck, or handled in a way that causes internal or external physical damage, immediately unplug the AC adapter, remove the battery, discontinue use, and contact an Authorized Service Center. Do not attempt to disassemble or repair the instrument, battery, or AC adapter. Refer repairs or replacement components to an Authorized Service Center.
- The instrument and sensors are sensitive and can be easily damaged. Always handle these devices with care. DO NOT allow them to be dropped, struck, stressed, or overheated.
- Sensors are fragile devices which can be damaged by mechanical shock, overheating, and exposure to fluids. Damage may not be visibly apparent but can cause drift, instability, and loss of accuracy. Observe the following precautions:
  - **DO NOT** allow sensors to be dropped, struck, or stressed.
  - **DO NOT** overheat sensors beyond their recommended temperature range.
  - Keep the sensors clean and away from fluids and dust.

## 1.3

### Authorized Service Centers

Please contact one of the following authorized Service Centers to coordinate service on your Hart product:

#### **Fluke Corporation, Hart Scientific Division**

799 E. Utah Valley Drive  
American Fork, UT 84003-9775  
USA

Phone: +1.801.763.1600

Telefax: +1.801.763.1010  
E-mail: support@hartscientific.com

**Fluke Nederland B.V.**

Customer Support Services  
Science Park Eindhoven 5108  
5692 EC Son  
NETHERLANDS

Phone: +31-402-675300  
Telefax: +31-402-675321  
E-mail: ServiceDesk@fluke.nl

**Fluke Int'l Corporation**

Service Center - Instrimpex  
Room 2301 Sciteck Tower  
22 Jianguomenwai Dajie  
Chao Yang District  
Beijing 100004, PRC  
CHINA

Phone: +86-10-6-512-3436  
Telefax: +86-10-6-512-3437  
E-mail: xingye.han@fluke.com.cn

**Fluke South East Asia Pte Ltd.**

Fluke ASEAN Regional Office  
Service Center  
60 Alexandra Terrace #03-16  
The Comtech (Lobby D)  
118502  
SINGAPORE

Phone: +65 6799-5588  
Telefax: +65 6799-5588  
E-mail: antng@singa.fluke.com

When contacting these Service Centers for support, please have the following information available:



- Model Number
- Serial Number
- Voltage
- Complete description of the problem

## 2 Introduction

Fluke's Hart Scientific Division's 1620 is a low-cost, high-accuracy, digital thermo-hygrometer. Its unique combination of features makes it suitable for a wide variety of applications from laboratory to industrial ambient measurement. Features of the thermo-hygrometer include:

- Two channels measure ambient temperature to  $\pm 0.125$  C and %RH to  $\pm 1.5\%$
- Two sensors, each measuring temperature and relative humidity; each is detachable, cable-extendable, and interchangeable, with self-contained calibration; each may be assigned a unique 16-character identification
- Display resolution is user selectable up to 0.001 C and 0.01% RH
- On-board memory holds up to 400,000 time/date-stamped readings
- Removable data card option for additional data storage and ease of data transfer to and from a PC.
- Visual and audio alarms for various alarm or fault conditions
- May be wall mounted or set on a bench top
- Detachable sensors contain their own calibration data for easy recalibrations
- Optional software logs in real-time or shows graphical/statistical data from data card (Data card is optional and not needed to run the software for real-time logging.)
- Password protection of settings
- Large, monochrome LCD, displays temperature and humidity data graphically, numerically, and statistically; 16 pre-defined, user-changeable screen setups; display viewable in bright or dim lighting
- Serial RS-232 and IR interface standard
- Power 12 VDC from external 110-240 VAC to DC converter.
- Uses a standard 9V battery backup to allow continued measuring during power interruptions.
- Certificate of NIST-traceable temperature and humidity calibration with three each temperature and humidity points

## 3 Specifications and Environmental Conditions

### 3.1 Specifications

<b>Temperature Range</b>	0°C to 50°C
<b>Temperature Accuracy ("H" Model)</b>	16°C to 24°C: $\pm 0.125^\circ\text{C}$ (calibrated) 0°C to 16°C, 24°C to 50°C: $\pm 0.5^\circ\text{C}$ (uncalibrated typical)
<b>Temperature Accuracy ("S" Model)</b>	15°C to 35°C: $\pm 0.25^\circ\text{C}$ (calibrated) 0°C to 15°C, 35°C to 50°C: $\pm 0.5^\circ\text{C}$ (uncalibrated typical)
<b>Delta Temperature Accuracy</b>	$\pm 0.025^\circ\text{C}$ for $\pm 1^\circ\text{C}$ changes within 15°C to 35°C
<b>Temperature Display Resolution</b>	User selectable up to 0.001°C (0.01°C recorded)
<b>RH Range</b>	0% to 100% RH
<b>RH Accuracy ("H" Model)</b>	20% to 70% RH: $\pm 1.5\%$ RH (calibrated) 0% to 20% RH, 70% to 100% RH: $\pm 3\%$ RH (uncalibrated, typical)
<b>RH Accuracy ("S" Model)</b>	20% to 70% RH: $\pm 2\%$ RH (calibrated) 0% to 20% RH, 70% to 100% RH: $\pm 3\%$ RH (uncalibrated, typical)
<b>Delta Humidity Accuracy</b>	$\pm 1.0\%$ for $\pm 5\%$ changes within 20% to 70% RH
<b>RH Display Resolution</b>	User selectable up to 0.01% (0.1% recorded)
<b>Inputs</b>	Two sensors, each measuring temperature and relative humidity; each is detachable, cable-extendable, and interchangeable, with self-contained calibration; each may be assigned a unique 16-character identification
<b>Display</b>	240 x 128 graphics monochrome LCD, displays temperature and humidity data graphically, numerically, and statistically; 16 pre-defined, user-changeable screen set-ups are included
<b>Memory</b>	400,000 typical individual time-stamped readings (excluding data card storage)
<b>Alarms</b>	Visual and audio alarms for temperature, temperature rate, RH, RH rate, and fault conditions
<b>Communications</b>	RS-232 and IR
<b>Data Card Interface</b>	Removable data card for transferring data to a computer; data can likewise be uploaded from a data card into the DewK for graphical and statistical display
<b>Enclosure</b>	The DewK may be wall-mounted (hardware included) or set on a benchtop
<b>Power</b>	12V DC from external 100-240V AC power supply
<b>Battery Backup</b>	Standard 9V battery to allow continued measuring during power disruptions
<b>Operating Range</b>	0°C to 50°C
<b>Size (DewK)</b>	4.9" H x 8.3" W x 2.0" D (125 x 211 x 51 mm)
<b>Size (Probes)</b>	3.1" H x 0.75" dia. (79 x 19 mm)
<b>Weight</b>	1.5 lb. (0.7 kg)
<b>Calibration</b>	Certificate of NIST-traceable temperature and humidity calibration included; supplied data includes three each temperature and humidity points

## 3.2 Environmental Conditions

Although the instrument has been designed for optimum durability and trouble-free operation, it must be handled with care. The instrument should not be operated in an excessively dusty, dirty, or wet environment. Maintenance and cleaning recommendations can be found in the Maintenance section of this manual.

- For full accuracy, operate the instrument within the calibrated temperature and relative humidity range of the sensors.

### 1620 DewK

- Operating Temperature: 0°C to 50°C (32°F to 122°F)
- Relative Humidity: 0% to 70% RH

### 2626-H/S

- Operating Temperature: 0°C to 50°C (32°F to 122°F)
- Relative Humidity: 0% to 100% RH

### AC Adapter

- Operating Temperature: 0°C to 40°C (32°F to 104°F)
- Relative Humidity: 5% to 90% non-condensing de-rating from 40°C linearly to 50% at 70°C

### General to all

- Pressure: 75 kPa-106 kPa
- Vibration should be minimized
- Altitude less than 2,000 meters
- Indoor use only

## 3.3 Warranty

Fluke Corporation, Hart Scientific Division. (Hart) warrants this product to be free from defects in material and workmanship under normal use and service for a period as stated in our current product catalog from the date of shipment. This warranty extends only to the original purchaser and shall not apply to any product, which, in Hart's sole opinion, has been subject to misuse, alteration, abuse or abnormal conditions of operation or handling.

Software is warranted to operate in accordance with its programmed instructions on appropriate Hart products. It is not warranted to be error free.

Hart's obligation under this warranty is limited to repair or replacement of a product, which is returned to Hart within the warranty period and is determined, upon examination by Hart, to be defective. If Hart determines that the defect or malfunction has been caused by misuse, alteration, abuse or abnormal

conditions or operation or handling, Hart will repair the product and bill the purchaser for the reasonable cost of repair.

To exercise this warranty, the purchaser must forward the product after calling or writing a Hart Authorized Service Center (see Section 1.3). The Service Center assumes NO risk for in-transit damage.

THE FOREGOING WARRANTY IS PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE. HART SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR LOSS WHETHER IN CONTRACT, TORT, OR OTHERWISE.

## 4 Quick Start

This section briefly explains the basics of setting up and operating your thermo-hygrometer.

### 4.1 Unpacking

Carefully unpack the thermo-hygrometer and inspect the instrument to make sure all components are present and in satisfactory condition. Verify that the following items are present:

- 1620 Thermo-Hygrometer
- AC adapter and power cord
- Serial cable
- Manual
- Report of calibration
- Wall mount bracket
- Sensor
- 9V battery

If all items are not present, call your Hart Scientific Authorized Service Center. See Section 1.3.

### 4.2 Use Proper Care

First and most important is to understand the safety issues related to the thermo-hygrometer. Carefully read Section 1.2, Safety Information.

The thermo-hygrometer and sensors used with it are sensitive instruments that can be easily damaged. Always handle these devices with care. DO NOT allow them to be dropped, struck, stressed, or over-heated.

### 4.3 Learn About the Features and Components

Familiarize yourself with the features and accessories of the thermo-hygrometer by reading Section 5, Parts and Controls.

### 4.4 Install the Battery

To maintain uninterrupted measurement when power outages occur, you must install the included battery into the rear battery compartment. A standard 9V alkaline battery (NEDA 1604A or IEC 6LR61) is recommended. With a fresh alkaline battery installed, the thermo-hygrometer will continue to measure and record temperature and relative humidity during a power outage for up to 16

hours, typically. However, without external power, the display will be inoperable.

## 4.5 Connect the Sensor

The sensor for channel 1 connects to the socket at the top-right, and the sensor for channel 2, if used, connects to the socket on the right side. Either sensor may be used with an optional extension cable up to 100 feet (30 meters) in length.

## 4.6 Connect the Power Source

The thermo-hygrometer draws power from the provided power adapter. Plug the adapter into a wall outlet of the appropriate voltage and insert the DC plug into the DC power input of the thermo-hygrometer.

## 4.7 Switch the Power On

Power is turned on and off with the power switch located below the stand on the back panel. To switch the power on, toggle the power switch to the ‘ I ’ position. To switch power off, toggle the power switch to the ‘ O ’ position. The instrument takes a few seconds to power up, initialize, and begin normal operation. A self-test is performed, displaying the channel configuration and status of the system, calibration, % battery power, memory, and buttons. If the thermo-hygrometer calibration has expired and the alert message is enabled, the user is notified and must press the Enter button to continue initialization. If an error message is displayed on power up see Section 11, Troubleshooting.

## 4.8 Measure Temperature

After initialization, the temperature and relative humidity measurements for the enabled channels are displayed. If recording is enabled, the measurements will be automatically stored in memory. The display can be configured to display the measurements in a variety of numerical and graphical formats. For information on the various modes of operation of the thermo-hygrometer, see Section 7, Menu Functions.

## 5 Parts and Controls

The functions of the various features of the thermo-hygrometer are described below.

### 5.1 Front Panel

The front panel buttons Enter/Menu, Up/Down/Left/Right Arrows, and Exit are used to select and alter the functions of the thermo-hygrometer (see Figure 1).



**Figure 1** Front Panel

The buttons have different functions depending on whether the main screen or the menu system is displayed.

The functions of each of the buttons from the main screen are as follows:

Enter/Menu - This button is used to display the menu options.

Exit - This button is used to display the alarm window. With the alarm window displayed the Exit button can be used to return to the main screen while preserving the alarm events or the Enter button can be used to clear the alarm events and return to the main screen.

◀▶ - These buttons are used to move among enabled display layouts.

▲▼ - These buttons are used to adjust the display contrast, ▲ for darker and ▼ for lighter.

The functions of each of the buttons within the menu system are as follows:



Enter/Menu - This button is used to select a menu item, to accept a choice, or save changes to a parameter.

Exit - This button is used to return from a menu or window or cancel changes to a parameter. Pressing the Exit button for a second or so returns from most any menu, menu function, or window back to the main screen.

▲▼ - These buttons are used to move among menu items or parameters. When editing some numeric or alpha-numeric parameters, these buttons are used to change a digit or character.

◀▶ - These buttons are used to change a value or option when editing a parameter. When editing some numeric or alpha-numeric parameters, these buttons are used to move among digits or characters.

IR Port - The infrared window provides a means for communicating with the thermo-hygrometer using infrared serial communications (IR COMM mode) or printing measurements and daily statistics to a IrDA-compatible printer (IRDA mode).

## 5.2 Top Panel

The top panel contains the port for attaching the sensor for Channel 1. An optional extension cable may be used to allow the sensor to be placed in a remote location.



*Figure 2 Top Panel*

## 5.3 Right Side Panel

The right side panel contains the port for attaching the sensor for Channel 2.

An optional extension cable may be used to allow the sensor to be placed in a remote location.



**Figure 3** Right and Left Side View

## 5.4 Left Side Panel

The left side panel consists of the DC power socket, the RS-232 port and the data card slot.

12V DC Power Socket - The DC plug of the AC adapter plugs into the 12V DC power socket to power the instrument.

RS-232 Port Connector - This socket is for interfacing the thermo-hygrometer to a computer or terminal using serial RS-232 communications.

Data Card Slot - An optional data card is installed in this slot for additional memory storage and data transfer with a computer.

## 5.5 Back Panel

The back panel contains the stand, power switch, battery compartment, and product information, including serial number.

Stand - The stand can be used to prop up the thermo-hygrometer on a flat surface.

Battery Compartment - The battery compartment holds a 9V alkaline battery used as a backup power source to maintain continuous measurement during a power outage (see Section 6.2, Battery).

Power Switch - The power switch turns the power on and off to the thermo-hygrometer, including power from the battery. Before disconnecting the AC adapter from the instrument, switch the power off to prevent draining the backup battery.

Serial Label - The serial label shows the instrument model and serial number.



Figure 4 Back Panel

## 5.6 Quick Buttons

When the main screen is displayed, the buttons have the following functions:

Enter/Menu - This button is used to display the menu options.

Exit - This button is used to display the alarm window. With the alarm window displayed the Exit button can be used to return to the main screen while preserving the alarm events or the Enter button can be used to clear the alarm events and return to the main screen.

◀▶ - These buttons are used to move among enabled display layouts.

▲▼ - These buttons are used to adjust the display contrast, ▲ for darker and ▼ for lighter.

## 5.7 Configurations

- Model 1620-H includes a 1620-H Thermo-Hygrometer readout, a high accuracy sensor (Model 2626-H), a thermo-hygrometer readout wall mount bracket, power supply (Model 2361), and an RS-232 cable.
- Model 1620-S includes a 1620-S Thermo-Hygrometer readout, a standard accuracy sensor (Model 2626-S), a thermo-hygrometer readout wall mount bracket, power supply (Model 2361), and an RS-232 cable.

## 5.8 Accessories

The following accessories are available to compliment either the high accuracy or standard thermo-hygrometer readout.

- Model 2626-S Spare Sensor/Standard Accuracy
- Model 2627-S Spare Sensor Kit includes a standard accuracy probe (Model 2626-S), sensor case (Model 2607), sensor wall mount bracket (Model 2630), and 25-foot (7.6 m) extension cable (Model 2628)
- Model 2626-H Spare Sensor/High Accuracy
- Model 2627-H Spare sensor Kit includes a high accuracy sensor (Model 2626-H), sensor case (Model 2607), sensor wall mount bracket (Model 2630), and 25-foot (7.6 m) extension cable (Model 2628)
- Model 2607 Spare Sensor Protective Case
- Model 2628 Extension cable, 25-foot (7.6 m)
- Model 2629 Extension cable, 50-foot (15.2 m)
- Model 2630 Sensor wall mount bracket
- Model 2632-64MB data card (PC Card), 64 MB
- Model 9328 Protective Case (includes space for a 1620 Thermo-Hygrometer, two sensors, RS-232 cable, and power cord)
- Model 2361 Spare Power Supply, 100-240 VAC to 12 VDC
- Model 9936 LogWare III, single-PC license
- Model LIC-9936 LogWare III, license (for additional PCs)

## 6 General Operation

This section explains basic operation of the thermo-hygrometer. Detailed operation of the thermo-hygrometer is explained in Sections 7 and 8. Section 7 explains the menu structure and the functions available in the menu structure and Section 8 explains the communications interface for operating the thermo-hygrometer remotely.

### 6.1 DC Power Source

The thermo-hygrometer requires 12V DC to operate. The AC adapter is provided to produce the DC power from an AC mains supply.



**Caution:** For CE compliance and for proper performance, use only the AC adapter shipped with the instrument by Hart Scientific. If the AC adapter needs to be replaced, contact Hart Scientific Authorized Service Center. The AC adapter has circuits with high voltages inside that could present danger of electric shock or fire if exposed. If the AC adapter is damaged in any way or becomes hot, discontinue use immediately, disconnect the adapter from any AC supply, and replace the adapter. Do not attempt to open, repair, or continue using a damaged or defective AC adapter.

The DC output from the AC adapter plugs into the 12 V DC power input on the left side of the instrument (see Figure 3 on page 17).

### 6.2 Battery

The thermo-hygrometer uses a 9V battery to maintain continuous measurement and recording during power outages. The recommended battery type is a standard 9V alkaline battery (NEDA 1604A or IEC 6LR61). During a power outage, or when the AC adapter is disconnected, the display will be inoperable but measuring will continue if the 9V battery is installed. If the alarm is enabled, the beeper will sound periodically to alert the user of the loss of external power. With a fresh alkaline battery, measuring will continue during a power outage for typically about 16 hours. During normal operation, the battery charge is regularly checked, and if the low battery alarm is enabled, the user will be alerted when the battery charge drops below approximately 50%. The battery charge level can be viewed with a display layout that includes a stat type zone with one of the fields set to BATT. To prevent inadvertent battery drain, remember to switch the power switch off when external power is disconnected and the thermo-hygrometer is not in use.

To install or replace the battery, follow these steps:

1. Switch the power off and unplug the DC power cord.



2. Turn the thermo-hygrometer over to access the rear battery compartment. Press down slightly on the battery cover and slide it out to remove it.
3. Remove the old battery if one is in place by lifting it up at the bottom and pulling it out.
4. Slide the new battery in at an angle, observing the proper polarity so the terminals mate correctly, then press the bottom of the battery down into the holder.
5. Replace the battery cover.
6. Replace the DC power cord and switch the power on.

Used batteries must be disposed of properly. See Section 1.2.1, Warnings.

## 6.3 Sensor Configuration

The thermo-hygrometer can be used with one or two sensors of either type attached at either of the two ports. Extension cables can be used with the sensors to allow the sensors to be placed at remote locations. The extension cables can be up to 30m (100 ft.) in length. When a sensor is attached, the thermo-hygrometer detects the sensor automatically, reads its calibration parameters, and begins to measure if the channel is enabled (see Section 6.9, Measuring).



## 6.4 Power Switch

To operate the thermo-hygrometer, slide the rear power switch to the ON (  ) position. When the thermo-hygrometer is not being used, slide the power switch to the OFF (  ) position before disconnecting the power source to preserve the battery.

## 6.5 Power On Self-Test

When power is turned on, the thermo-hygrometer performs a self-test, checking the system, sensors, sensor calibration parameters, memory, and buttons. If an error occurs, an error message is displayed. See Section 11, Troubleshooting for additional information on error messages.

## 6.6 Display Contrast

If the display appears too dark or too light, you can use the  and  buttons at the main screen to adjust the contrast. The contrast can also be adjusted from the DISPLAY SETTING menu (see Section 7.2.1, Display Setting).

## 6.7 Display

The thermo-hygrometer display is originally configured with six default display layouts enabled. The user can enable and configure any of the 16 display layouts to show a variety of data in numerical or graphical format (see Section 7.2.2, Display Layout). Enabled display layouts can be quickly selected from the main screen using the ◀ and ▶ buttons.

## 6.8 Alarm Screen

The Alarm Screen can be accessed from the main screen by pressing Exit or by entering the Alarm Menu (see Section 7.4, Alarm Menu). If enabled, the alarm screen will appear automatically when an alarm event occurs. When an alarm is displayed the event can be either hidden by pressing Exit or cleared by pressing Enter.

## 6.9 Measuring

The thermo-hygrometer will automatically make measurements on enabled channels at the set period when a sensor is attached. Channels are enabled using the CHANNEL SETTING function in the CHANNEL menu (see Section 7.3.1.1, Record Setting). The measurement period is also set with this function.

## 6.10 Unit of Temperature

The thermo-hygrometer is capable of displaying temperature in Celsius (C) or Fahrenheit (F). The unit of temperature applies to temperature measurements on either channel that are displayed, recorded, or printed. Recorded data is viewed, printed, or written to a data card file with the currently set unit of temperature. The unit of temperature is set using the DISPLAY SETTING function in the DISPLAY menu (see Section 7.2.1, Display Setting) or the SYSTEM SETTING function in the SYSTEM menu (see Section 7.5.1, System Setting).

## 6.11 Recording Measurements

The thermo-hygrometer will automatically record measurements on enabled channels at the set period. Recording is enabled using the RECORD SETTING function in the DATA RECORD sub-menu in the DATA menu (see Section 7.3.1.1, Record Setting). The record period is also set with this function.

## 6.12 Sensors

The standard-accuracy sensor and high-accuracy sensor are used to measure temperature and relative humidity. The sensors attach to the thermo-hygrometer by plugging into the top or side panel of the instrument.

The sensor contains a memory device that stores information about the sensor and automatically transfers this data to the thermo-hygrometer when the sensor is attached. This ensures that the settings used to measure and calculate temperature and humidity always match the sensor being used.



**Caution:** *Sensors are fragile devices that can be easily damaged by mechanical shock, overheating, and exposure to fluids or dust. Damage may not be visibly apparent but nevertheless can cause drift, instability, and loss of accuracy. Observe the following precautions:*

- **DO NOT** allow sensors to be dropped, struck, or stressed.
- **DO NOT** overheat sensors beyond their recommended temperature range.
- **DO NOT** expose sensors to harmful vapors, fumes, dust, or condensation.
- **DO NOT** allow sensors to come into direct contact with any fluids.

### 6.12.1 Sensor Accuracy

To achieve full accuracy with the thermo-hygrometer sensors, a few precautions should be noted.

First, consider that the sensor actually measures its own temperature, not necessarily the temperature of the air around it. Ideally, the sensor's temperature will be the same as the air, but they might be different under less than ideal conditions.

One such condition is when there is a source of radiated heat that is "seen" by the sensor. Radiated heat tends to heat up the sensor higher than the air around it (try shining a flashlight on the sensor from some distance away). Some sources of radiated heat to avoid are incandescent lamps, space heaters, and other high-temperature devices. If such objects cannot be eliminated, consider using a heat shield between the heat source and the thermo-hygrometer sensor.

The sensor can also be heated by warm objects close by, perhaps a wall that is slightly warmer than the air in the room or even another sensor placed next to it. For best results, allow adequate distance between the sensor and any objects that might be at a different temperature than the air.

Other considerations relate to the self-heating of the sensor. Since the sensor contains electronic circuits that release a small amount of heat, the sensor will naturally be slightly warmer than the air around it. The calibration of the sensor takes this self-heating into account and compensates for it. But, factors that alter the natural self-heating can cause errors in the measurement.

Self-heating does depend somewhat on the velocity of the air around the sensor. The sensor is calibrated in nearly still air. Different air velocities can cause differences in the measured temperature of the sensor: as much as  $\pm 0.06^{\circ}\text{C}$  for velocities ranging from 0 to 10 cm/s. High velocities can cause even greater errors that can be as large as  $0.15^{\circ}\text{C}$  below the temperature measured at low veloci-



ties. Thus, it is recommended that the sensor be located where there is minimal air currents.

The self-heating of the sensor could also be altered by nearby objects that insulate the sensor from the air. Keep adequate air space around the sensor.

The self-heating of the sensor takes a few minutes to stabilize after the power to the thermo-hygrometer is switched on or the sensor is attached. For best results, allow 15 minutes for the sensor to settle after applying power.

The sensor takes some time to respond to large changes in temperature or humidity, such as, for instance, when the sensor is brought from a cold or humid location to a warm or dry one. Depending on the difference, the sensor can take several minutes to more than an hour to reach full accuracy after conditions have changed.

Finally, moisture condensing within the sensor can cause erroneous or invalid measurements. Condensation can occur if the sensor is brought from a warm, high-humidity environment to a colder temperature. This can be avoided by first moving the sensor into low-humidity air at the same temperature for about 30 minutes before it is placed at the lower temperature. If condensation does occur, the sensor should recover once it dries out. This may take several hours.

## 7 Menu Functions



Figure 5 Main Display

Selecting the **Enter/Menu** button from the front panel accesses the main menu of the thermo-hygrometer. The main menu consists of the submenus: **CHANNEL**, **DISPLAY**, **DATA**, **ALARM**, and **SYSTEM**. Most of the menu options may be password-protected to prevent them from being changed (see Section 7.5.4, PASSWORD)



Figure 6 Main Menu

Each submenu has its own set of functions. The **Enter/Menu** button is used to select and execute menu choices. The **▲▼** buttons are used to scroll through the functions. The **Exit** button is used to return from a function to the previous menu. The **Exit** button may be pressed and held to quickly return to the main screen.

## 7.1 Channel Menu

The CHANNEL menu provides functions for selecting the channel, setting the sensor identification, setting the sensor lock, and setting the sensor calibration. The functions that appear in the CHANNEL menu are CHANNEL SETTING, SENSOR ID, SENSOR LOCK, and SENSOR CAL.



Figure 7 Channel Menu

### 7.1.1 Channel Setting

The CHANNEL SETTING function allows you to turn the channels on or off, set the measurement period, turn averaging on or off, and set the time over which the rate of change is calculated for measurements.

These settings may be password-protected to prevent them from being changed (see Section 7.5.4, PASSWORD).

The channels are turned on or off by selecting the channel and then the ON or OFF setting using the **◀▶** buttons.

MEA PER, measurement period, is the time interval at which the measurements are updated on the display. You may select between 1, 2, 5, 10, 15, and 30 seconds, 1, 2, 5, 10, 15, 20, and 30 minutes, or 1 hour for the measurement period. AVERAGE may be turned to ON or OFF. When average is on, the temperature

and humidity values displayed are averaged over the measurement period. When average is off, the displayed values are instantaneous measurements.

RATE T, rate time, determines the time interval over which the measurements are used to calculate the rate of change, and is selectable between 30 seconds, 1, 2, 5, 10, 15, 20, 30, 45 minutes, or 1 hour. The temperature rate is displayed in the RATE T field of a STATS display zone. The humidity rate is displayed in the RATE H field of a STATS display zone. (See Section 7.2.3.) If RATE T is 5 minutes or less, the rate of change is calculated as the average rate of change using all the measurements obtained during the past RATE T time. If RATE T is greater than 5 minutes, the rate of change is calculated using the most recent measurement and the measurement obtained RATE T time ago. If there are as yet insufficient measurements to calculate the rate of change, only dots are displayed in the RATE T or RATE H field.

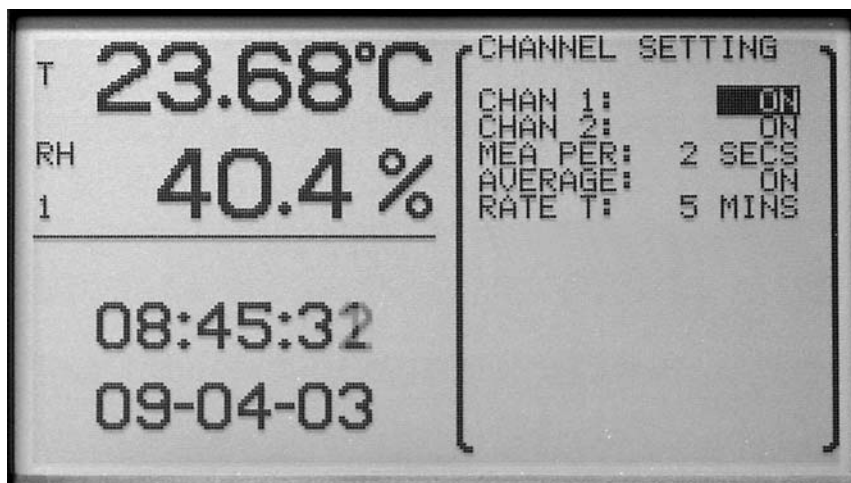


Figure 8 Channel Setting

Use the ▲▼ buttons to select the setting to change. The ◀▶ buttons are used to change the setting parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.1.2 Sensor ID

The SENSOR ID function allows each sensor to be uniquely identified. This may be password-protected to prevent it from being changed (see Section 7.5.4, PASSWORD). The model number and serial number are displayed here but

cannot be edited. The sensor ID cannot be set for a channel without a sensor attached. The sensor ID is stored in the sensor, not in the thermo-hygrometer.

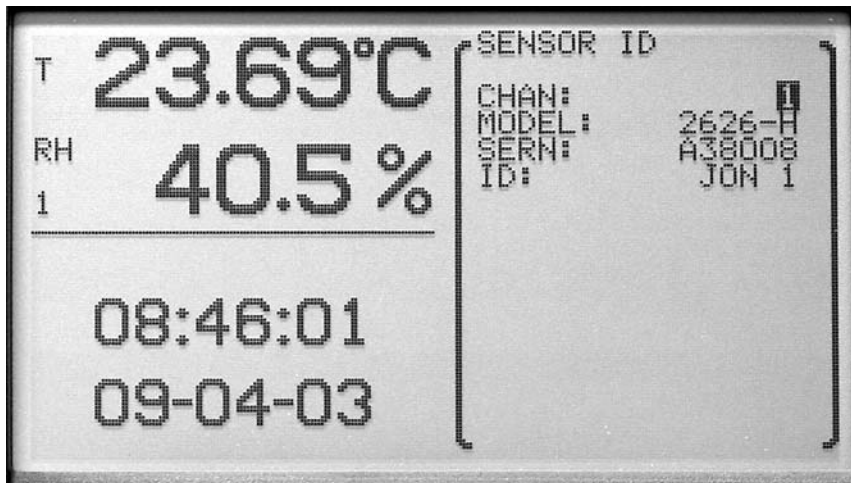


Figure 9 Sensor ID

Use the ◀▶ and ENTER buttons to select the sensor identification to change. The ◀▶ buttons are used to move among character positions and the ▲▼ buttons are used to change the character. Letters, numeric digits, space and underscore can be used. Press the **Enter** button to save the setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.1.3 Sensor Lock

The SENSOR LOCK function locks each sensor individually and prohibits the user from switching sensors on the locked channels. This may be password-protected (see Section 7.5.4, PASSWORD). The sensor lock is set to ON or OFF. After selecting ON, a screen is displayed showing the sensor channel number, serial number, and the message 'NOW LOCKED'. When the sensor lock is ON, the thermo-hygrometer measures only on that channel using the sensor that was attached when sensor lock was set ON. This can be used to prevent inadvertent attachment of an uncalibrated sensor or one that is not in the

desired location. It uses the sensor serial number to identify the sensor. To exchange a different sensor, the sensor lock must be set to OFF.

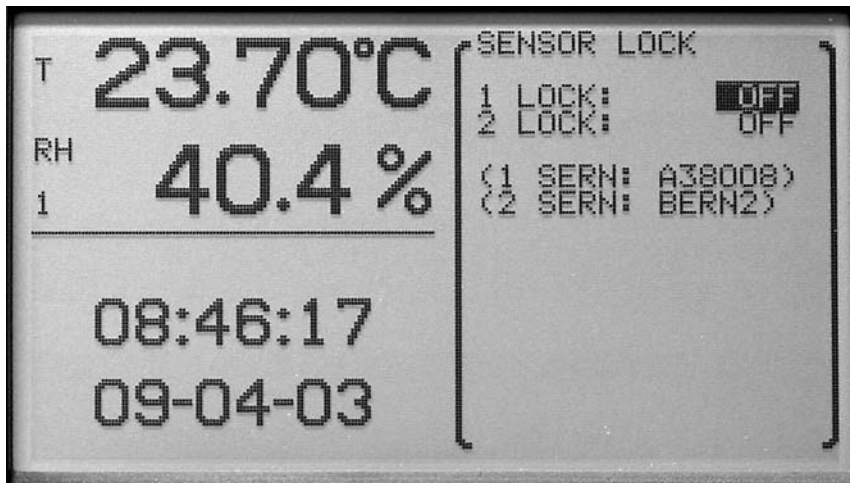


Figure 10 Sensor Lock

Use the ▲▼ buttons to select the sensor to lock. The ◀▶ buttons are used to select ON or OFF. Press the **Enter** button to save the setting and exit. Press the **Exit** button to cancel any changes and exit to the menu.

#### 7.1.4 Sensor Cal

The SENSOR CAL function allows the sensor parameters to be edited. This function is always password-protected (see Section 7.5.4, PASSWORD). If an incorrect password or no password is entered, the parameters are displayed but cannot be edited. If a correct password is entered, the channel, sensor model, sensor serial number, and sensor ID are displayed. Select the sensor channel of the parameters to edit and then select the **Enter** button. The sensor parameters are displayed for editing.



**Caution:** The sensor calibration parameters are critical to the accuracy of the sensor. Do not change them (see Section 9, Calibration Procedure).

The ◀▶ buttons are used to select a channel. Press the **Enter** button to save



the setting and exit. Press the **Exit** button to cancel any changes and exit to the menu.

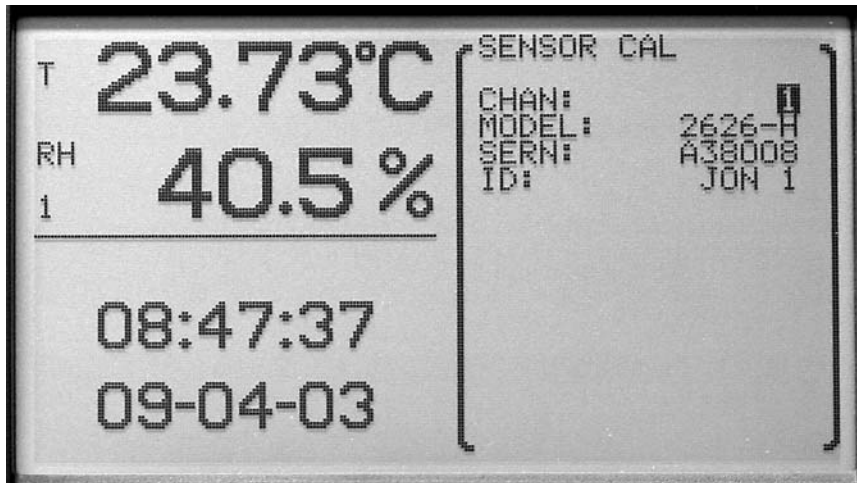


Figure 12 Sensor Channel Select

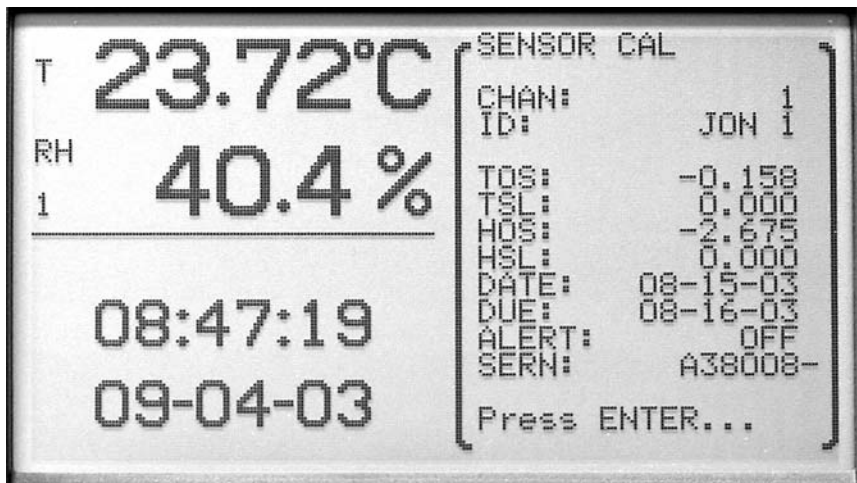


Figure 11 Sensor Cal

The ◀▶ buttons are used to edit the parameter value. The ▲▼ buttons are used to move between parameters. Press the **Enter** button after all of the pa-

parameters have been edited. The message 'STORE VALUES' is displayed. Press the **Enter** button to save the new settings. The values are stored in the sensor. Press the **Exit** button to cancel any changes and exit to the menu.

## 7.2 Display Menu

The DISPLAY menu provides functions for configuring the display. The functions that appear in this menu are DISPLAY SETTING, DISPLAY LAYOUT, FIELD DATA, GRAPH SCALE, and DISPLAY RESET.



Figure 13 Display Menu

### 7.2.1 Display Setting

The DISPLAY SETTING function allows you to select the temperature display resolution (T RES), humidity display resolution (H RES), decimal preference, unit of temperature and display contrast. These settings may be password-protected (see Section 7.5.4, Password).

The temperature and humidity display resolutions are selectable between 0, 0.1, 0.01, and 0.001. These settings do not affect the resolution of recorded or printed data. Recorded and printed data are fixed at 0.01°C or °F and 0.1% RH.

The decimal preference is selectable between a period (.) and a comma (,).

The available units of measure are degrees C and degrees F.

The contrast can be adjusted here using the ◀▶ buttons. Setting the adjustment number more negative lightens the screen and setting it more positive



darkens the screen. The contrast may also be adjusted from the main screen by using the ▲▼ buttons (see Section 5.1, Front Panel).



Figure 14 Display Setting

The ◀▶ buttons are used to select the parameter setting. The ▲▼ buttons are used to scroll between each parameter. Press the **Enter** button to change and save the new settings. Press the **Exit** button to cancel any changes and exit to the menu.

## 7.2.2 Display Layout

The DISPLAY LAYOUT function allows you configure any of the 16 different display layouts. These settings may be password-protected (see Section 7.5.4, Password). A display layout can be enabled or disabled by choosing ON or OFF. ON allows the display to be selected from the main screen using the ◀▶ buttons. The number of zones is selectable from 1 to 4. Each zone can display one of the following zone types: blank screen, time, stats, temperature and humidity numerically, or temperature and humidity graphically. Once the number of zones is selected, you can select what is to be displayed in each zone.

The ◀▶ buttons are used to select the parameter setting. The ▲▼ buttons are used to move between each parameter. Press the **Enter** button to change and save the new settings. Press the **Exit** button to cancel any changes and exit to the menu.

The enabled layouts can be viewed by pressing the ◀▶ buttons when the main screen is displayed.

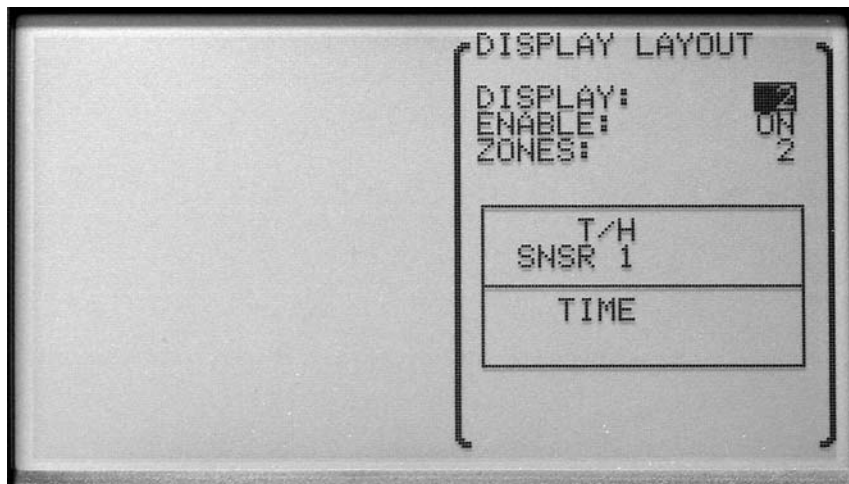


Figure 15 Display Layout

Except for blank and time types, zones require that a sensor number be selected. Data for the specified sensor number is displayed in the zone. The options for the zone type and descriptions for each follow:

**Blank:** No data is displayed.

**TIME:** The current time and date are displayed.

**STATS:** Various statistical values are displayed numerically for the given sensor. Statistical values to display can be selected using the FIELD DATA menu function (Section 7.2.3).

**T/H:** Temperature and humidity are displayed numerically for the given sensor.

**T GRAPH:** Temperature history is displayed on a graph for the given sensor. The temperature (vertical) scale, time (horizontal) scale, and number of grid divisions can be set for the zone using the GRAPH SCALE menu function (Section 7.2.4).

**H GRAPH:** Relative humidity history is displayed on a graph for the given sensor. The relative humidity (vertical) scale, time (horizontal) scale, and number of grid divisions can be set for the zone using the GRAPH SCALE menu function (Section 7.2.4).

Graphs include time tick marks that occur at hourly intervals for time scales 24 hours or less or at daily intervals for time scales greater than 1 day. Time tick marks are labeled at intervals with the hour or day, labels being placed below

and to the right of tick marks. Tick marks with labels are drawn with short continuous lines, and tick marks without labels are drawn with dotted lines.

Graphs are replotted when a different display layout is selected, a display layout's settings are changed, or graph scale settings are changed. Data for the graphs are extracted from recorded data in memory. If recording is disabled, graphs cannot be replotted and will appear empty until new data is collected.

### 7.2.3 Field Data

The FIELD DATA function allows you to select a type of statistic for any of the fields in a STAT type zone. This may be password-protected (see Section 7.5.4, Password). Select the display layout on which to adjust the statistics field type and then select the zone to adjust. This function can only be used with display layouts that contain STATS zones. There are eight fields per zone. Any field can be set to the following field types: DATE, TIME, ID, SERN, TEMP, T RATE, T AVE, T STD, T MIN, T MAX, T SPR, T N, T RMAX, T ALAR, T DELT, RHUM, H RATE, H AVE, H STD, H MIN, H MAX, H SPR, H N, H RMAX, H ALAR, H DELT, DEWP, HEAT, REC CH, BATT, MEAS, or BLANK. See Table 2 for a definition of each of these parameters.

Statistics fields show running statistics of the measurements taken since the last statistics reset. The statistics are reset automatically after power up, when the STATS RESET function is used (see Section 7.3.2.4), or when the time reaches the RESTIM hour and AUT RES is enabled for the DAILY STATS (see Section 7.3.2, Daily Stats).

**Table 2** Statistics Zone Field Types

Field Type	Description
Blank	blank field
DATE	current date
TIME	current time
ID	sensor identification
SERN	sensor serial number
TEMP	most recent temperature measurement
T RATE	temperature rate of change
T AVE	temperature statistical mean
T STD	temperature standard deviation
T MIN	minimum temperature
T MAX	maximum temperature
T SPR	temperature spread (maximum minus minimum)
T N	number of temperature statistical samples

<b>Field Type</b>	<b>Description</b>
T RMAX	maximum temperature rate of change
T ALAR	temperature alarm count
T DELT	temperature delta (difference from the other channel)
RHUM	most recent relative humidity measurement
H RATE	humidity rate of change
H AVE	relative humidity statistical mean
H STD	relative humidity standard deviation
H MIN	minimum relative humidity
H MAX	maximum relative humidity
H SPR	relative humidity spread (maximum minus minimum)
H N	number of humidity statistical samples
H RMAX	maximum relative humidity rate of change
H ALAR	relative humidity alarm count
H DELT	relative humidity delta (difference from the other channel)
DEWP	dew point (see ALT parameter in Section 7.1.1, Channel Setting)
HEAT	heat index (apparent temperature as felt by humans)
REC CH	recording channel/measurement type enable status
BATT	battery level
MEAS	seconds to next measurement
-----	separating line

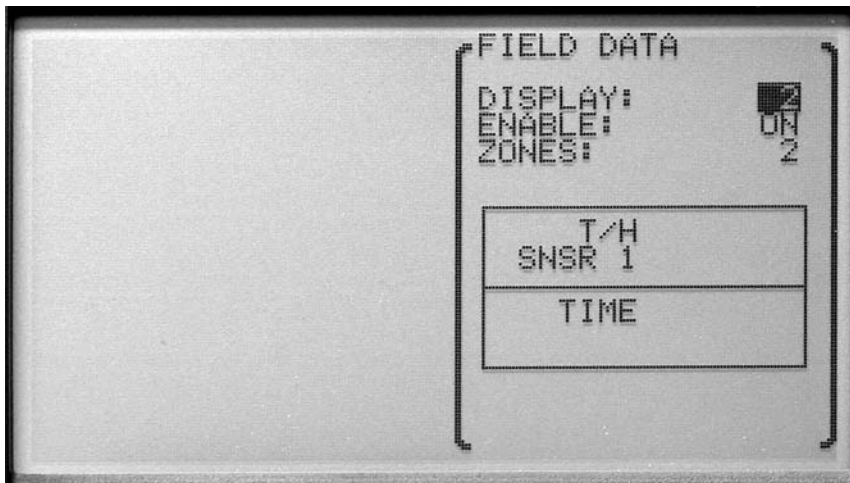


Figure 16 Field Data

Use the ◀▶ buttons to change each of the settings. Press **Enter** to save and continue to the next parameter. Press the **Exit** button to cancel any changes and exit to the menu.

## 7.2.4 Graph Scale

The GRAPH SCALE function allows the selection of the graph settings for each zone (1, 2, 3, or 4). Graph settings for each zone are used in common among all display layouts. This may be password-protected (see Section 7.5.4, Password). For each zone you may set the center of the vertical axes for the temperature graphs (T CENT), the temperature scale for the axes (T SCAL), the center of the vertical axes for the humidity graphs (H CENT), the humidity scale for the axes (H SCAL), the time axis scale (time), and the number of grid divisions for the graph (DIVS). Following is the range for each setting:

T CENT from 100.000 to -40.000

T SCAL from 100.000 to 0.100

H CENT from 100.000 to 0.000

H SCAL from 100.000 to 1.000

TIME from 1, 4, 10, 24 hours and 2, 5, 7, 15, 30 days

DIVS from 1, 2, 4, 6, 8, 10

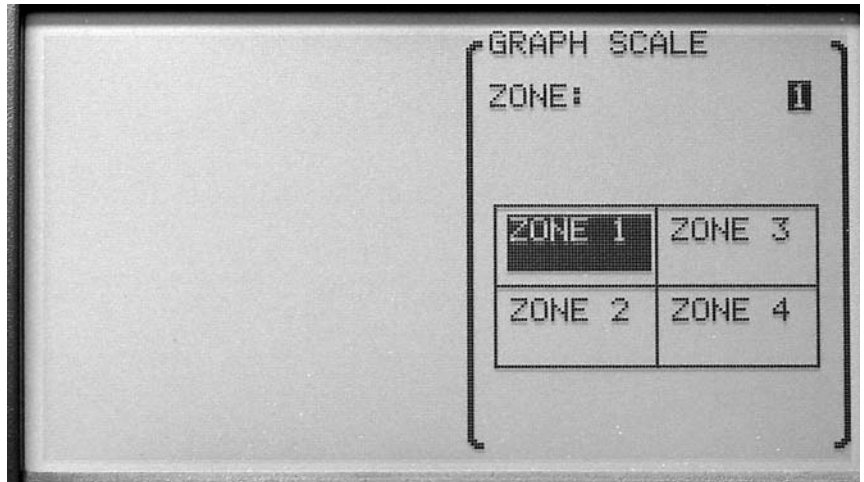


Figure 18 Graph Scale , Select Zone

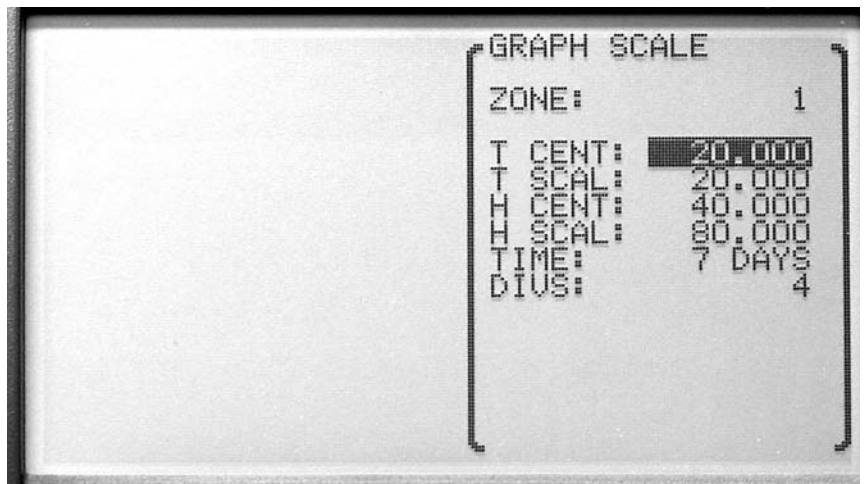


Figure 17 Graph Scale

Use the **Enter** button to edit and save the new setting. Press **Exit** button to cancel any changes and exit to the menu. On the last parameter, press the **Enter** button to exit to the menu.

## 7.2.5 Display Reset

The DISPLAY RESET function allows all display layouts, field data settings and graph scale settings to be reset to original settings. This may be password-protected (see Section 7.5.4, Password).



*Figure 19 Display Reset*

Use the **Enter** button to reset the display settings. Press the **Exit** button to cancel any changes and exit to the menu.

## 7.3 Data Menu

The DATA menu contains functions for recording measurement data and statistics as well as transferring data to the data card.



The functions that appear in this menu are DATA RECORD, DAILY STATS, and DATA CARD.

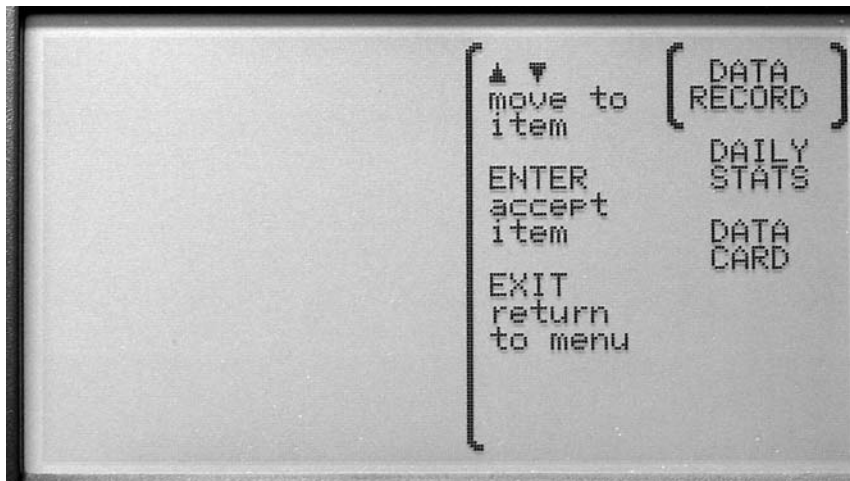


Figure 20 Data Menu

Use the ▲▼ buttons to select the menu. Press the **Enter** button to select the menu. Press the **Exit** button to cancel any changes and exit to the menu.

When recording is enabled, measurements are stored in memory at the set period. The data is highly compressed digitally to achieve a high storage density. This is done by storing data in blocks, headed by product and sensor identification and time information that applies to subsequent measurements up to the start of the next data block. A new data block is started when the thermo-hygrometer is powered on, when record setting parameters are changed, and when data is printed or written to a file. A new data block is also started when the date or time is set, when the date changes, and at regular intervals depending on the record period. Thus data blocks may contain various quantities of measurements.



**Caution:** When data recording memory fills up, the earliest block of data is automatically discarded so recording of the most recent data can continue.

### 7.3.1 Data Record

The DATA RECORD function allows the setting of the data recording features.



The functions that appear in this menu are RECORD SETTING, DATA VIEW, DATA PRINT, DATA STORAGE, and DATA CLEAR.

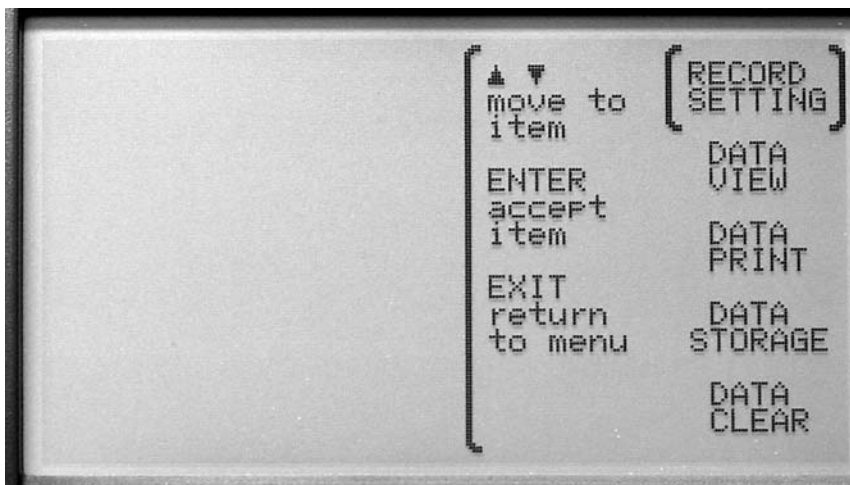


Figure 21 Data Record

Use the ▲▼ buttons to select the menu. Press the **Enter** button to select the menu. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.3.1.1 Record Setting

The RECORD SETTING function allows you to select what is to be recorded and how often the recording occurs. This may be password-protected (see Section 7.5.4, Password). The temperature and humidity from each channel can be recorded and the recording period is selectable.

To record the temperature on sensor channel 1, set REC 1/T to ON.

To record the humidity on sensor channel 1, set REC 1/H to ON.

To record the temperature on sensor channel 2, set REC 2/T to ON.

To record the humidity on sensor channel 2, set REC 2/H to ON.

The REC PER recording period is set by selecting 1, 2, 5, 10, 15, or 30 seconds, 1, 2, 5, 10, 20, or 30 minutes, or 1 hour for the REC PER.



**Note:** It is recommended that REC PER be set to 5 minutes or more; otherwise, the memory may fill up quickly and redrawing graphs may be slow. Also note that graphs can only be redrawn if the measurement for the channel is being recorded, as the graph data is obtained from recorded data. The recording period affects the observable time resolution of graphs.




**Caution:** When the memory has been filled, the oldest block of data will be discarded to allow new data to be recorded.

Measurement storage capacity can range between 28 hours and 2 years depending on the record period and enabled channels. Refer to Table 3, Approximate Data Storage Capacity.

**Table 3** Approximate Data Storage Capacity

Record period	Storage, 1 channel	Storage, 2 channels
1 second	56 hours	28 hours
10 seconds	20 days	10 days
1 minute	18 weeks	9 weeks
5 minutes	20 months	10 months
10 minutes	24 months	20 months
30 minutes	24 months	24 months
1 hour	24 months	24 months

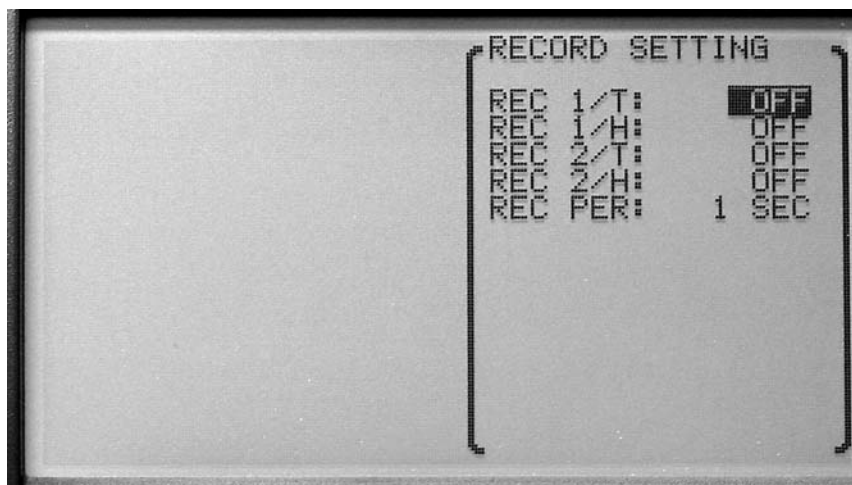

**Figure 22** Record Setting

Use the ▲▼ buttons to select the setting to change. The ◀▶ buttons are used to change the setting parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.3.1.2 Data View

The DATA VIEW function allows viewing recorded data in NUMERIC or GRAPHIC format.

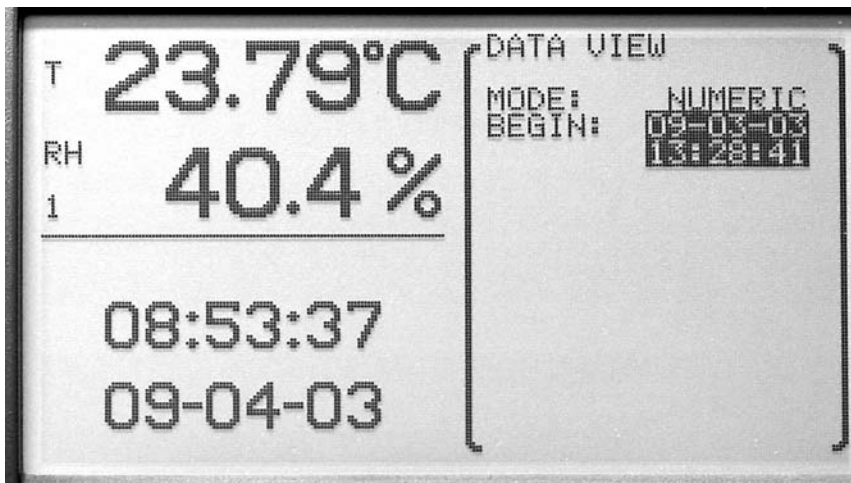


Figure 23 Data View, Begin Time

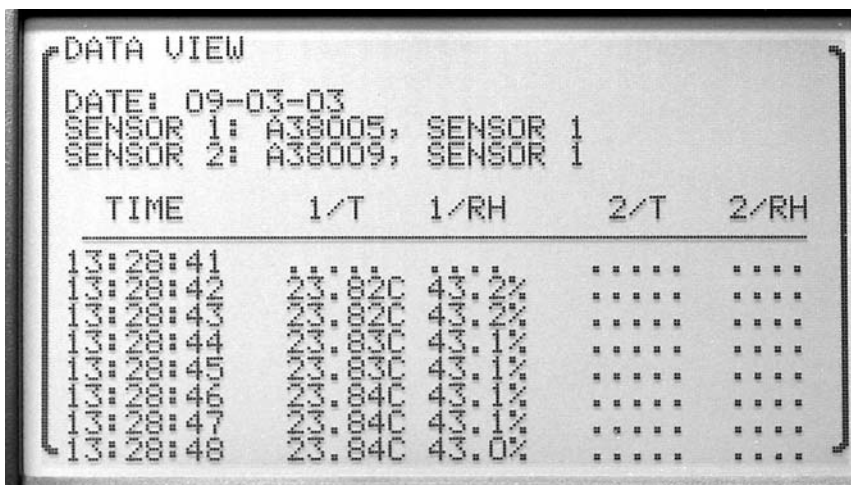


Figure 24 Data View, Numeric Format

The numeric mode displays the data in a numeric format. The BEGIN parameter specifies the starting date and time of the data to display. Use the ◀▶ but-

tons to adjust the start date and time. The format of the start date is according to D FORM in the SYSTEM, DATE-TIME menu function (see Section 7.5.2, Date Time). The format of the start time is 24 hour format.

Press the **Enter** button to display the data for the selected starting date and time. Use the ▲▼ buttons to scroll through the data (you can go back two screens) and the ◀▶ buttons to scroll among data blocks. Press the **Exit** button to cancel any changes and exit to the menu.

The graphic mode displays the data in a graphic format. The CHAN parameter allows you to select the channel from which to view the data. T CENT sets the center of the vertical axis for temperature. T SCAL sets the scale. H CENT sets the center of the vertical axes for humidity. H SCAL sets the scale. The TIME parameter is the length of data to display and may be set to 1, 4, 10, or 24 hours, 2, 5, 7, 15, or 30 days. The DIVS parameter is the number of divisions for the graph, and may be set to 1, 2, 4, 6, 8, or 10. The BEGIN parameter sets the start date and the start time. The format of the start date is according to the D FORM in the SYSTEM, DATE-TIME menu (see Section 7.5.2, Date Time). The format of the start time is 24 hour format.

Press the **Enter** button to display the data for the selected starting date and time in graphical format. Press the **Exit** button to cancel any changes and exit to the menu.

Every recorded measurement within the time span of a graph appears as a dot at the appropriate time location. If the time scale is small and the recording interval is large, dots will be separated.

Graphs include time tick marks that occur at hourly intervals for time scales 24 hours or less or at daily intervals for time scales greater than 1 day. Time tick marks are labeled at intervals with the hour or day, labels being placed below and to the right of tick marks. Tick marks with labels are drawn with short continuous lines, and tick marks without labels are drawn with dotted lines.

Dashed vertical cursor lines appear in the center of the graphs after they are plotted. The cursor can be moved left or right using the [left] or [right] buttons. Holding a button in moves the cursor quickly. Pressing ENTER locates the latest data point on or to the left of the cursor and causes the temperature, relative humidity, time, and date of the data point to be displayed. Press EXIT to quit and return to the menu.

### 7.3.1.3 Data Print

The DATA PRINT function allows recorded data to be printed over the serial or IR port. The PORT parameter is selectable between SERIAL and IRDA/IRCOMM, depending on the IRMODE setting (see Section 7.5.3.2, IR). The FORMAT parameter may be set to BINARY or TEXT for the serial port or IRCOMM port. The BEGIN parameter sets the start date and the start time from which to start printing. The format of the start date is according to D

FORM in SYSTEM, DATE-TIME (Section 7.5.2). The format of the start time is 24 hour format.

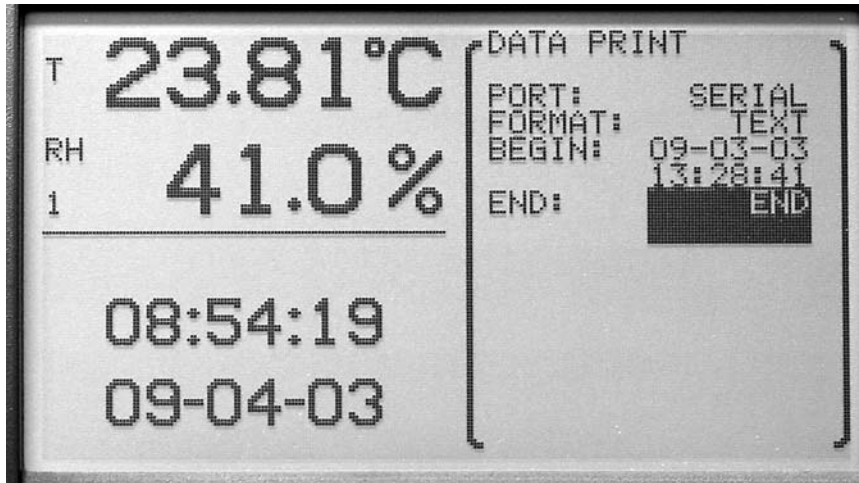


Figure 25 Data Print

The ◀▶ buttons are used to change the parameters. Press the **Enter** button to save the new setting.

Press the **Exit** button to cancel any changes and exit to the menu.

#### 7.3.1.4 Data Storage

The DATA STORAGE function allows viewing the status of the data memory. The FILLED parameter shows the percentage of storage space used. The BYTES parameter shows the number of bytes stored. The CAP parameter shows storage capacity, in bytes. The INDEX parameter shows percentage of

space used in the record block index. The BEGIN parameter is the date of the earliest data. The END parameter is the date of the latest data.



Figure 27 Data Storage

Press the **Enter** or **Exit** button to exit.

### 7.3.1.5 Data Clear

The DATA CLEAR function clears the data collected. This function may be password protected (see Section 7.5.4, Password).



Figure 26 Data Clear



Press the **Enter** button to clear the data. Press the **Exit** button to cancel any changes and exit to the menu.



**Caution:** Using this function will erase all recorded data and make it irretrievable.

### 7.3.2 Daily Stats

The DAILY STATS menu can be used to record measurement statistics, such as average, maximum, minimum, maximum rate, etc., for each day. Up to 60 days of statistics are stored. Earliest statistics are erased automatically if needed to store another day's statistics. DAILY STATS can be set up to automatically store the running statistics on any hour of the day and automatically reset the statistics on any hour. Measurement statistics are kept as measurements are made. The current statistics can be displayed in any STATS type zone (see Sections 7.2.2 and 7.2.3). The statistics can also be stored automatically at the end of the day and reset automatically at the beginning of the next day. The DAILY STATS menu options are STATS SETTING, STATS VIEW, STATS PRINT, STATS RESET, and STATS CLEAR. The DAILY STATS can be password-protected (see Section 7.5.4, Password).

STATS PRINT, STATS RESET, and STATS CLEAR. The DAILY STATS can be password-protected (see Section 7.5.4, Password).



Figure 28 Daily Stats

The ▲▼ buttons are used to select the menu option. The ◀▶ buttons are used to change the setting parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.3.2.1 Stats Setting

The STATS SETTING function sets the daily statistics recording options. The AUT REC enables (ON) or disables (OFF) automatic recording of the statistics. The REC TIM may be set from 00:00 to 23:00. The REC TIM function sets the hour just prior to which the statistics are automatically recorded when AUT REC is ON. If REC TIM is 00:00, the statistics are recorded after the last measurement of the day.

AUT RES enables (ON) or disables (OFF) automatic reset of the statistics and may be set from 00:00 to 23:00. RES TIM sets the hour when the statistics are automatically reset if AUT RES is ON. If RES TIM is 00:00, the statistics are reset just prior to the first measurement of the day.

For example, to automatically store statistics for each day for measurements made in a laboratory only between 8:00 in the morning and 5:00 (17:00) in the afternoon, set the AUT REC to ON, REC TIM to 17:00, AUT RES to ON, and RES TIM to 08:00. Note that statistics can also be manually reset using the STATS RESET function (see Section 7.3.2.4). **DO NOT** manually reset the statistics if automatic recording is desired. The DAILY STATS settings and STATS RESET can be password-protected to prevent inadvertent resetting of the statistics (see Section 7.5.4, Password). DAILY STATS cannot be manually stored.



Figure 29 Stats Setting

The ◀▶ buttons are used to change the setting parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and to exit to the menu.



### 7.3.2.2 Stats View

The STATS VIEW function is used to view daily statistics. Select a date and measurement channel and type. The average, standard deviation, minimum, maximum, spread, number, maximum rate, and alarm are displayed for the channel and measurement type.

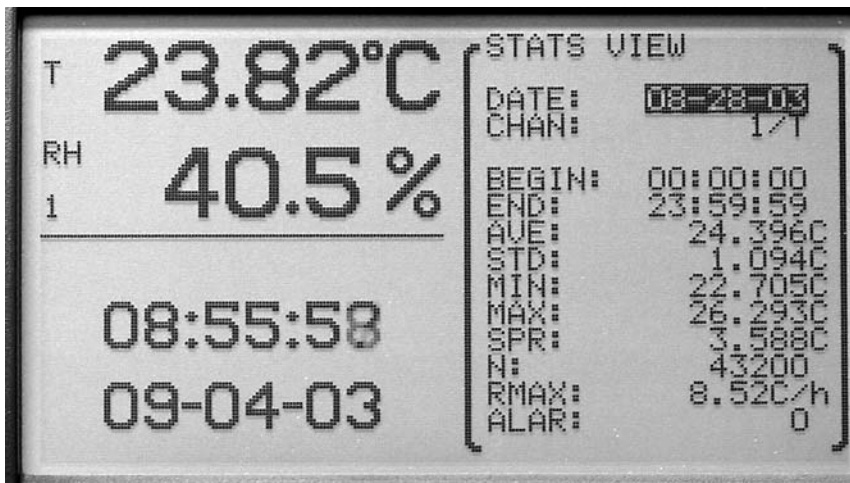


Figure 30 Stats View

The ◀▶ buttons are used to change the setting parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.3.2.3 Stats Print

The STATS PRINT function allows daily statistics to be printed over serial or IR. The PORT setting may be set to SERIAL or IRDA/IR COMM). Either

IRDA or IR COMM is available for the IR port depending on the IR MODE setting (see Section 7.5.3.2, IR).

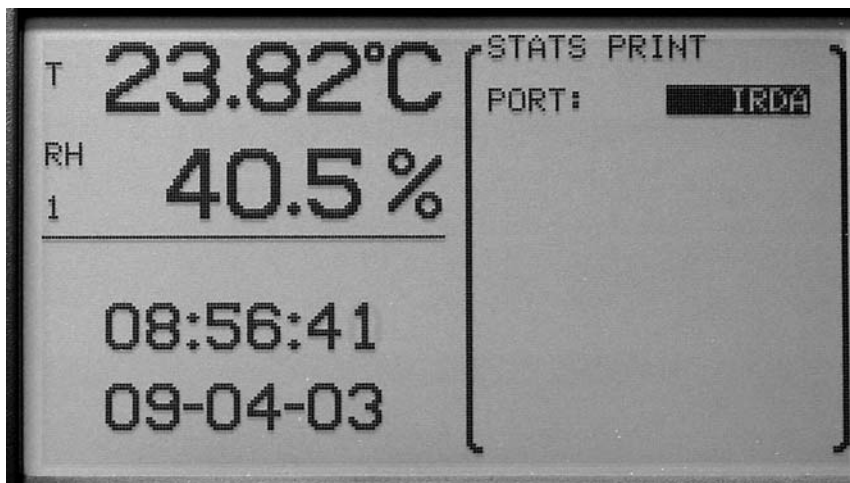


Figure 31 Stats Print

Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

#### 7.3.2.4 Stats Reset

The STATS RESET function resets current statistics. Statistics will then be based on measurements made from this time forward. After pressing the **Enter** button, a WARNING message will appear requesting a confirmation of the op-

eration. If the **Enter** button is pressed the stats are reset. If the **Exit** button is pressed the operation is canceled.



Figure 33 Stats Reset

### 7.3.2.5 Stats Clear

The STATS CLEAR function clears all daily statistics stored in memory. After pressing the **Enter** button, a WARNING message will appear requesting a confirmation of the operation. If the **Enter** button is pressed the stats are cleared. If the **Exit** button is pressed the operation is canceled.


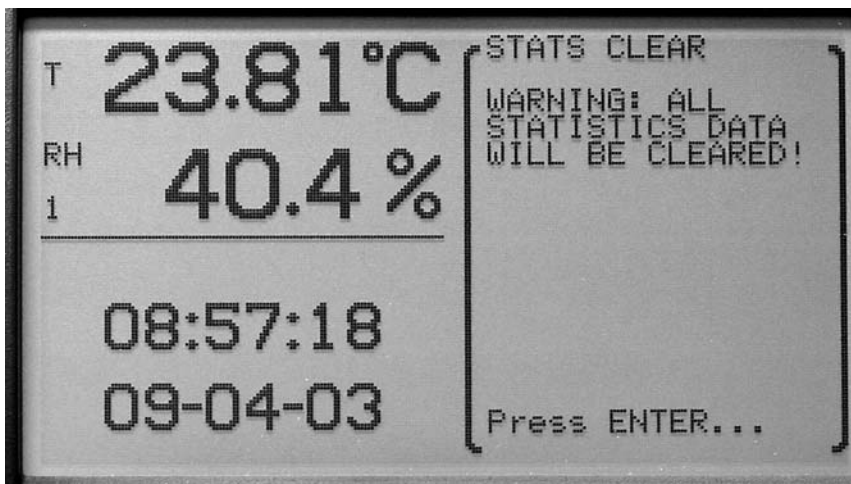


Figure 32 Stats Clear

### 7.3.3 Data Card

The DATA CARD function allows data to be written to a file on a data card or data in a binary (.rec) file to be viewed. The DATA CARD options are FILE WRITE and FILE VIEW.

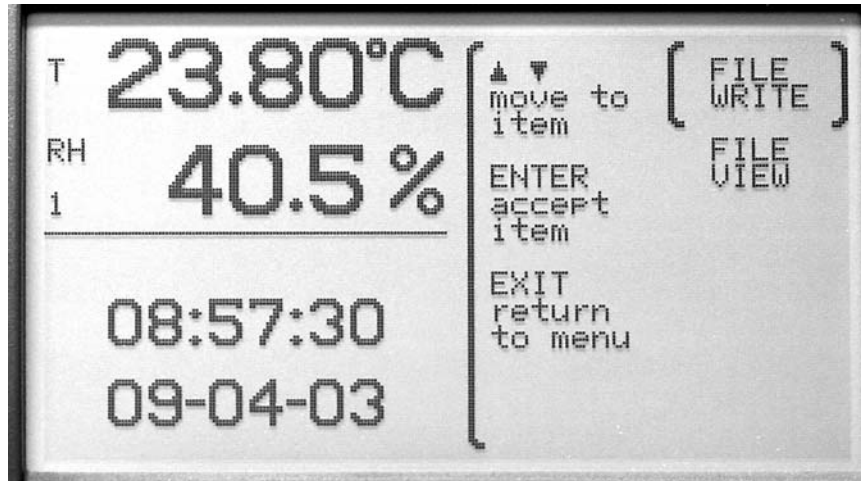

*Figure 34 Data Card*

The ▲▼ and Enter buttons are used to select the menu function.

### 7.3.3.1 File Write

The FILE WRITE function allows the user to write data to a data card. The FORMAT parameter is selectable between TEXT and BINARY.

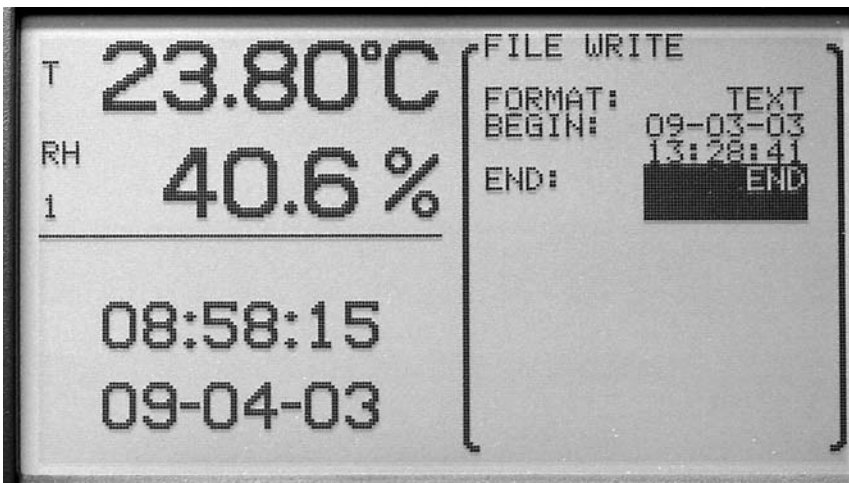


Figure 35 File Write



*Note:* In order to view the data using the thermo-hygrometer or the LogWare III software, the data must be saved in BINARY format.

Set the BEGIN parameter to the beginning date and time of the data that is to be written to a data card. Set the END parameter to the ending time and date of the data that is to be written to a data card. Choosing END for the END parameter will automatically select the most recent reading as the END parameter.


After the BEGIN and END parameters are entered and the **Enter** button is pressed, a message is displayed stating READY, the FILE NAME, and the number of DATA BYTES to be written.

The **Enter** button is used to save the data to the file. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.3.3.2 File View

The FILE VIEW function is used to view data from a binary (.rec) file on a data card. In order to view the data using the thermo-hygrometer or the LogWare III software, the data must be saved in BINARY format. If no binary

(.rec) files are found on the data card, a NO FILES FOUND message will be displayed.

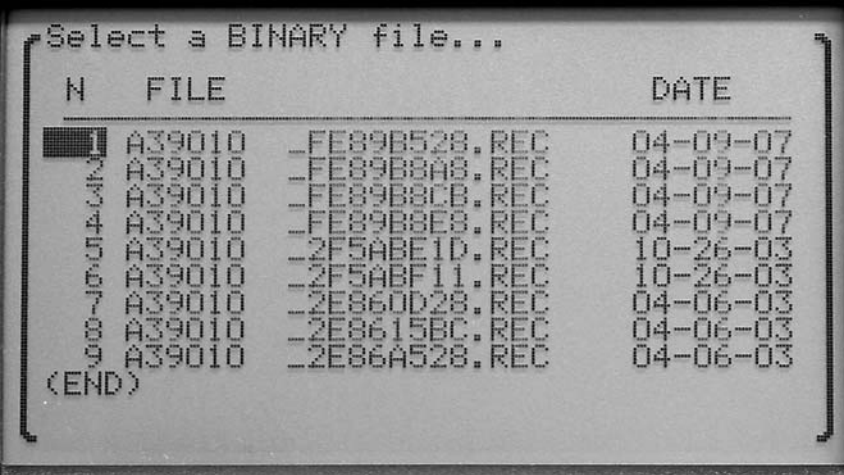

N	FILE	DATE
1	A39010 _FE89B528.REC	04-09-07
2	A39010 _FE89B8A8.REC	04-09-07
3	A39010 _FE89B8CB.REC	04-09-07
4	A39010 _FE89B8E8.REC	04-09-07
5	A39010 _2F5ABE1D.REC	10-26-03
6	A39010 _2F5ABF11.REC	10-26-03
7	A39010 _2E860D28.REC	04-06-03
8	A39010 _2E8615BC.REC	04-06-03
9	A39010 _2E86A528.REC	04-06-03

(END)

Figure 36 File View

To view a file select the file to open by using the ▲▼ buttons and press **Enter**. You may choose between numeric and graphic format. To view data in numeric format, select NUMERIC in the mode field using the ▲▼ buttons and press **Enter**. Select a date to search for in the file, and then press **Enter**. If data for the given date can be located in the file it will be displayed. Use the ▼▲ buttons to scroll through the data (you can go back three screens) and the ◀▶ buttons to scroll among data blocks.

To view data in graphic format, select GRAPHIC in the mode field using the ▲▼ buttons and press **Enter**. The GRAPHIC mode displays the data in a graphic format. The CHAN parameter allows you to select the channel from which to view the data. Use T CENT, T SCAL, H CENT, and H SCAL to set the vertical axis center and scale for the temperature and relative humidity graphs. The TIME parameter is the length of data to display and may be set to 1, 4, 10, or 24 hours, 2, 5, 7, 15, or 30 days. The DIVS parameter is the number of divisions for the graph, and may be set to 1, 2, 4, 6, 8, or 10. The BEGIN parameter sets the start date and the start time. The format of the start date is according to the D FORM in the SYSTEM, DATE-TIME menu (see Section 7.5.2, Date Time). The format of the start time is 24 hour format.

Every recorded measurement within the time span of a graph appears as a dot at the appropriate time location. If the time scale is small and the recording interval is large, dots will be separated.

Graphs include time tick marks that occur at hourly intervals for time scales 24 hours or less or at daily intervals for time scales greater than 1 day. Time tick marks are labeled at intervals with the hour or day, labels being placed below



and to the right of tick marks. Tick marks with labels are drawn with short continuous lines, and tick marks without labels are drawn with dotted lines.

## 7.4 Alarm Menu

The ALARM menu allows the setting and viewing of alarms. The functions that appear in this menu are ALARM SETTING, SENSOR ALARM, SYSTEM ALARM, and ALARM VIEW. Alarm settings may be password protected (see Section 7.5.4, Password).



Figure 37 Alarm

The ▲▼ buttons are used to select the menu option. The ◀▶ buttons are used to change the parameter setting. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes made and exit to the menu.

### 7.4.1 Alarm Setting

The ALARM SETTING function is used to enable or disable visible and audible alarm notifications. The parameters are BEEP and DISPLAY.

When the BEEP parameter is ON, the thermo-hygrometer emits an audible beep during an alarm condition. For the power alarm it is four short beeps every 20 seconds. For the battery alarm it is three short beeps every minute.

For the sensor disconnect alarm it is two short beeps every measurement period. For measurement alarms it is one long beep every measurement period.

When the DISPLAY parameter is ON, an alert message is displayed when an alarm condition occurs.

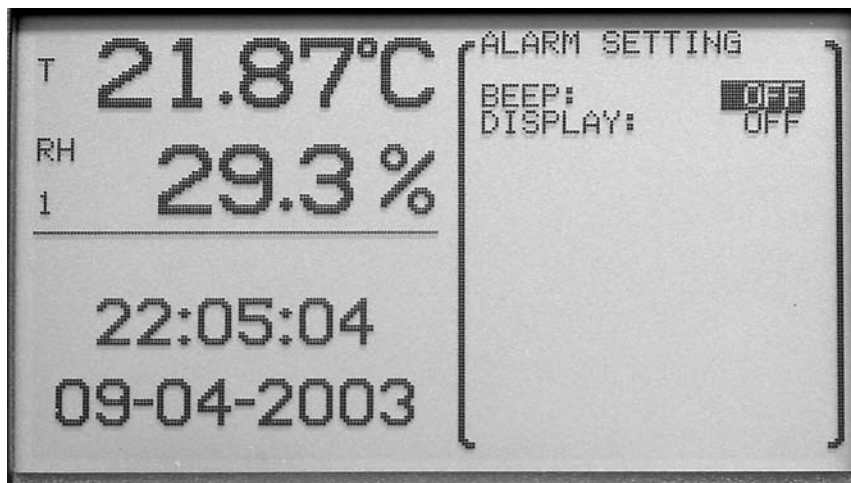


Figure 38 Alarm Setting

The ▲▼ buttons are used to select the menu option. The ◀▶ buttons are used to change the parameter setting. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

## 7.4.2 Sensor Alarm

The SENSOR ALARM function allows the setting of the alarm parameters for each channel.



To set alarm parameters, a channel number and measurement type (T or H) must first be selected using ◀▶ and ENTER buttons.

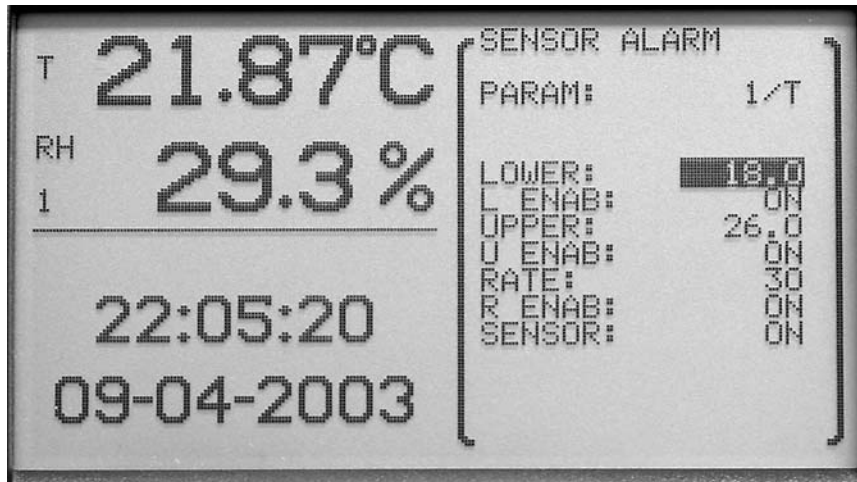


Figure 39 Sensor Alarm

The PARAM parameter is selectable between 1/T, 1/H, 2/T, 2/H. The 1 and 2 refer to the channel selected, T is temperature and H is humidity.

The ▲▼ buttons are used to select the menu option. The ◀▶ buttons are used to change the parameter setting. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

Once an option is selected, the parameters LOWER, L ENAB, UPPER, U ENAB, RATE, R ENAB, and SENSOR for the given channel (1 or 2) and measurement type (T or H) are displayed. The LOWER parameter is the lower limit alarm. The L ENAB parameter is used to turn the lower limit alarm ON or OFF. The UPPER parameter is the upper limit alarm. The U ENAB parameter is used to turn the upper limit alarm ON or OFF. The RATE parameter is the upper limit of the absolute value of the rate of change expressed in degrees/hour or %RH/hour. The R ENAB parameter is used to turn the rate alarm ON or OFF. The SENSOR parameter is used to turn the sensor fault alarm ON or OFF.

The ▲▼ buttons are used to select the menu option. The ◀▶ buttons are used to change the parameter setting. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.4.3 System Alarm

The SYSTEM ALARM function allows the battery or power alarms to be turned ON or OFF.

When the BATTERY alarm is turned ON, an alarm occurs when the battery charge is low.

When the POWER alarm is ON and a battery is installed, an alarm occurs when the power is disconnected. This alarm will continue to sound every 20 seconds until power is restored or the battery is discharged.

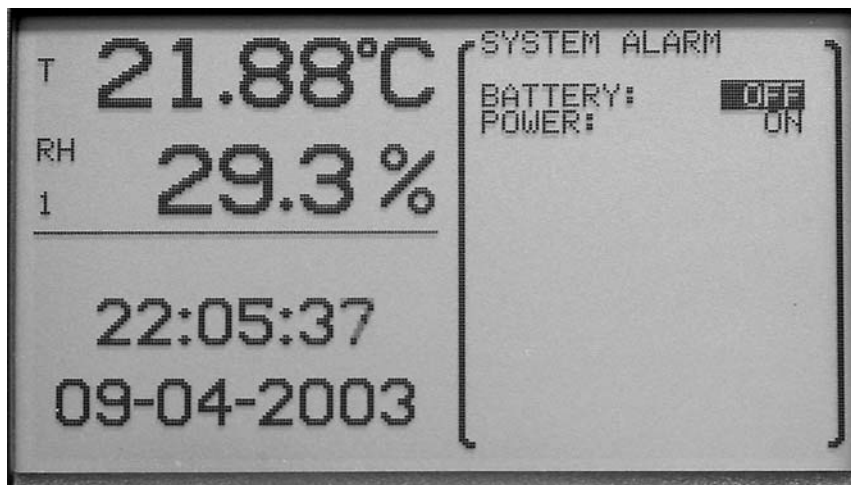


Figure 40 System Alarm

The ▲▼ buttons are used to select the menu option. The ◀▶ buttons are used to change the parameter setting. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

#### 7.4.4 Alarm View

The ALARM VIEW function displays alarm occurrences. The word ALARM

flashes at the top of the display and any alarm condition is displayed with the time and date that the alarm occurred.



*Figure 41 Alarm View*

Press the **Enter** button to clear the alarms. Press the **Exit** button to retain any alarms and exit to the menu.

## 7.5 System Menu

The SYSTEM menu provides access to the general settings for the system such as temperature unit, date and time, the communication port settings, password settings, and viewing the system information. The functions that appear in this

menu are SYSTEM SETTING, DATE TIME, COMM SETTING, PASS-WORD, and SYSTEM INFO.

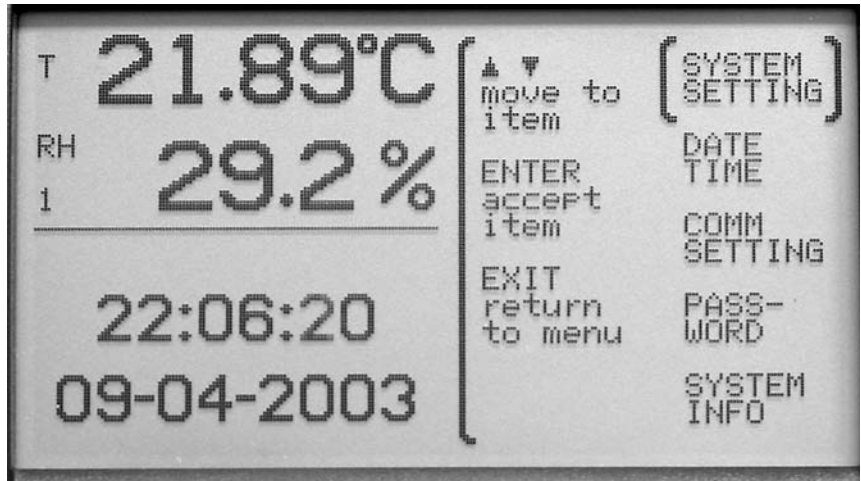


Figure 42 System Menu


The ▲▼ buttons are used to select the menu option. The ◀▶ buttons are used to change the parameter settings. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.5.1 System Setting

The SYSTEM SETTING function allows you to change the temperature measurement unit.

The UNIT parameter switches between C (Celsius) or F (Fahrenheit). This may be password protected with the SENSOR password parameter (see Section 7.5.4, Password).

When the measurement unit is changed and the **Enter** button is selected, the next measurement is displayed in the new measurement unit.

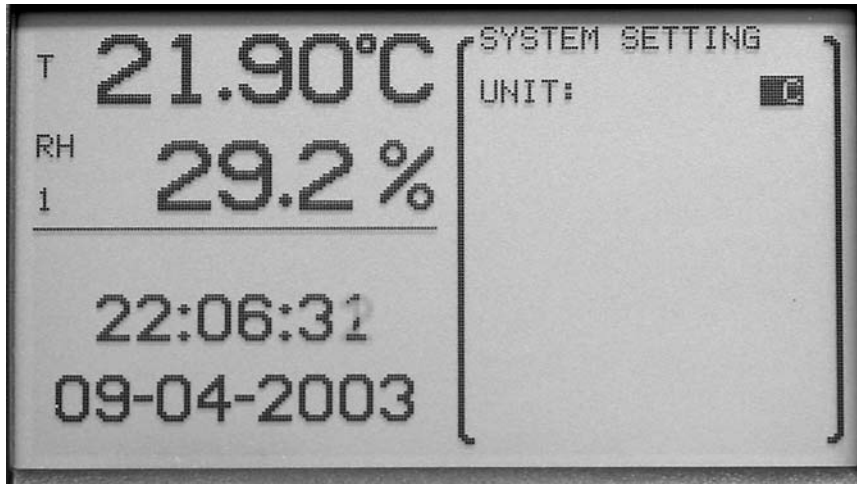

*Figure 43 System Setting*

The ◀▶ buttons are used to change the setting parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

## 7.5.2 Date Time

The DATE TIME function is used for setting the time-of-day clock, time format, date, and date format. This may be password protected using the TIME password parameter in the PASSWORD menu function (see Section 7.5.4, Password).

When this function is selected available parameters are HOUR, MINUTE, SECOND, T FORM, DAY, MONTH, YEAR, D FORM, and DAYL S.

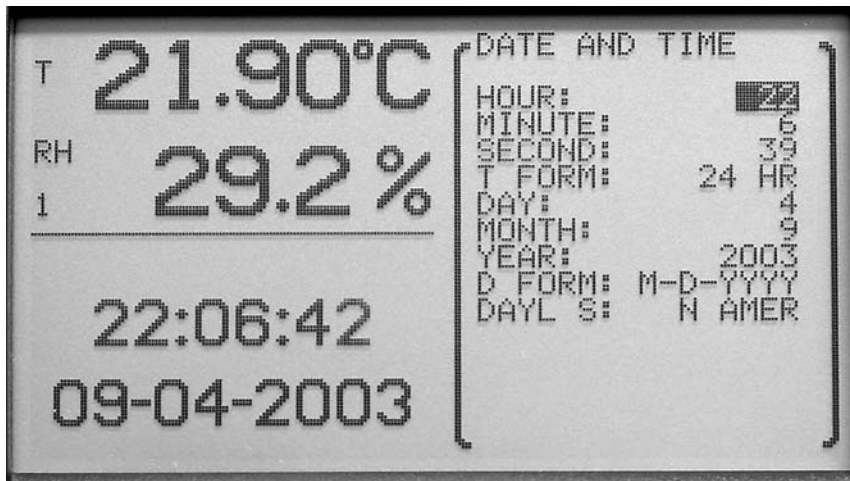


Figure 44 Date Time

The HOUR parameter allows the user to set the time-of-day clock hour (0 through 23).

The MINUTE parameter allows the user to set the time-of-day clock minutes (0 through 59).

The SECOND parameter allows the user to set the time-of-day clock seconds (0 through 59).

The T FORM parameter allows the user to set the time format used for displaying the time. The choices are 12-hour format or 24-hour format.

The DAY parameter allows the user to set the current day of the month (1-31).

The MONTH parameter allows the user to set the current month (1 - 12).

The YEAR parameter allows the user to set the current year (1999 through 9999).

The D FORM parameter allows the user to set the date format used when displaying the date. The choices are M-D-YY, M-D-YYYY, D/M/YY, and D/M/YYYY.

The DAYL S parameter allows the user to set the clock to automatically adjust for daylight saving shifts in the spring and fall. The choices are N AMER (United States and Canada), EUROPE, or OFF.

Be aware that automatic time changes due to the daylight saving time shift feature, and also manual time changes for that matter, will cause discontinuities in the time that may have unusual effects that should be noted.

One possible effect is with recorded daily stats. If the record time is reached twice within one day due to a time shift backwards, daily stats will be recorded twice for the same date. This can happen if the daily stats record time is set to 00:00, the daylight saving mode is set to Europe, and a fall backwards time shift occurs. Since the time 00:00 occurs twice for one day, two daily stats records will be created for the same day. It can also occur with the North America daylight saving mode if the daily stats record time is 01:00, since this time will occur twice in one day.

Another effect is with viewing data on a graph in real time. Data is plotted on the graph sequentially as measurements are made and the graph is scrolled uniformly. No adjustment is made to the real-time graph when the time changes. However, when a graph is redrawn (using recorded data, as a result of changing the display layout or cycling the power) in preparation to resume real-time plotting, the thermo-hygrometer attempts to accurately plot measurement points at the appropriate time locations. Thus, a one-hour spring daylight saving time shift will appear as a one-hour gap in the data on the graph. When a jump backwards is found in the recorded data, such as occurs during the fall daylight saving time shift, the thermo-hygrometer makes no attempt to plot the data prior to the time shift; there will appear to be missing data on the left side of the graph.

Graphs drawn using the DATA VIEW function behave similarly when time discontinuities occur in recorded data. A one-hour jump forward in time causes a one-hour gap in the data on the graph. However, a one-hour jump backwards in time produces a graph that also includes the data prior to the time shift. The repeated hour of data is also plotted but is compressed into one time point, the time just prior to the time shift. In other words, the data prior to the time shift is plotted first. Then when data for the first hour after the one-hour shift backwards is encountered, the data is plotted as if it all occurred at the instant of the time change. Then when the hour's data has passed, plotting resumes normally and the data is plotted to the right of the time shift.

Note that in any case data is recorded to memory as would be expected, with a one hour time gap or a repeated hour when a daylight saving time shift occurs. The effects of the automatic daylight saving time shifts should cause minimal inconvenience, as they occur early Sunday morning. To prevent confusion and time ambiguity problems, avoid running environment-sensitive operations during the daylight saving time shift. Also consider temporarily suspending data recording for days on which daylight saving time shifts occur. But if you do this, be sure to resume data recording when you need it!

The ▲▼ buttons are used to select the menu parameter. The ◀▶ buttons are used to change the parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.5.3 Comm Setting

The COMM SETTING function is used to setup the communication parameters for the communication ports. Communications ports are used for communicating with a computer, printer, or other equipment. The thermo-hygrometer in-



cludes a serial (RS-232) port and IR port. To edit the settings for a specific port it must first be selected. The selections are SERIAL, IR, and ERRORS.

The ERRORS setting allows the user to view any error messages stored in the error queue. Once an error has been viewed, it is removed from the error queue.

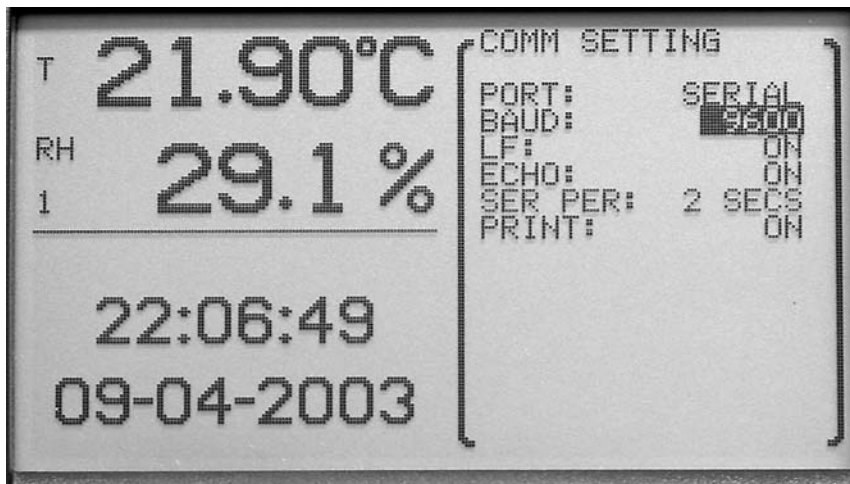


Figure 45 Comm Setting

The ◀▶ buttons are used to change the parameter setting. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.5.3.1 Serial

When the SERIAL port is selected, the parameters for the serial port are dis-



played beneath the PORT selection. These parameters are: BAUD, LF, ECHO, SER PER, and PRINT.

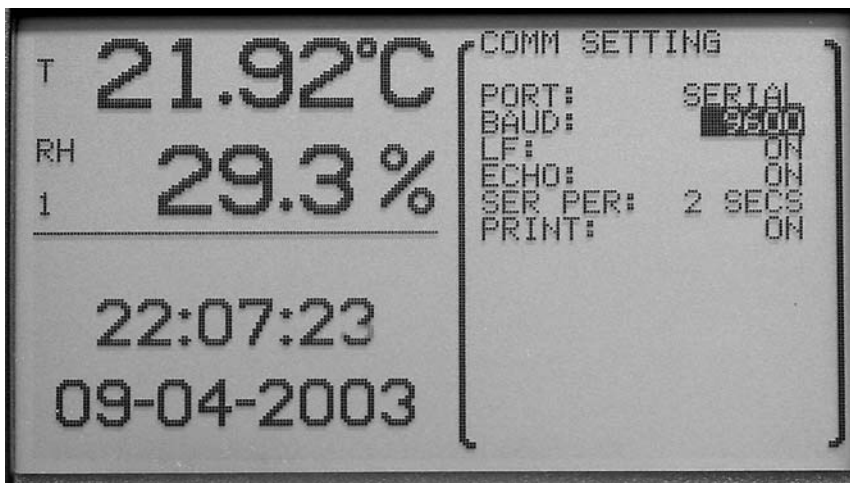


Figure 46 Serial

The BAUD parameter allows the user to select the baud rate for communications on this port. The user may choose between 1200, 2400, 4800, 9600, 19200, 38400, and 57600. The default baud rate is 9600.

The LF parameter allows the user to specify whether a linefeed character (ASCII 0A hex or 10 decimal) is appended to the end of each line transmitted over the serial port. Selecting ON sends both a carriage return (ASCII 0A hex or 13 decimal) and a linefeed. Selecting OFF sends only a carriage return.

The ECHO parameter allows the user to set the echo (duplex) mode. Selecting ON enables echoing so that all characters received on the serial port are echoed back over the serial port. Echo mode ON is useful when using terminal emulation software on a computer to communicate with the instrument. Selecting OFF disables echoing. Echo mode OFF is commonly used when using control software on the computer.

The SER PER parameter allows the user to select the interval at which measurements are automatically transmitted over the serial port. The user may choose between 1, 2, 5, 10, 15, and 30 seconds, 1, 2, 5, 10, 15, 20, and 30 minutes, and 1 hour.

The PRINT parameter allows the user to enable automatic printing of measurements over the serial port. Selecting ON enables printing and selecting OFF disables printing.

Press the ◀▶ buttons to change a parameter setting. Use the ▲▼ buttons to move between parameters. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and exit to the menu.

### 7.5.3.2 IR

When the IR port is selected, the MODE parameter for the IR port is displayed beneath the PORT selection. The MODE parameter allows the user to select the protocol used by the IR port to transmit and receive data. The selections are COMM, IRDA, and OFF.

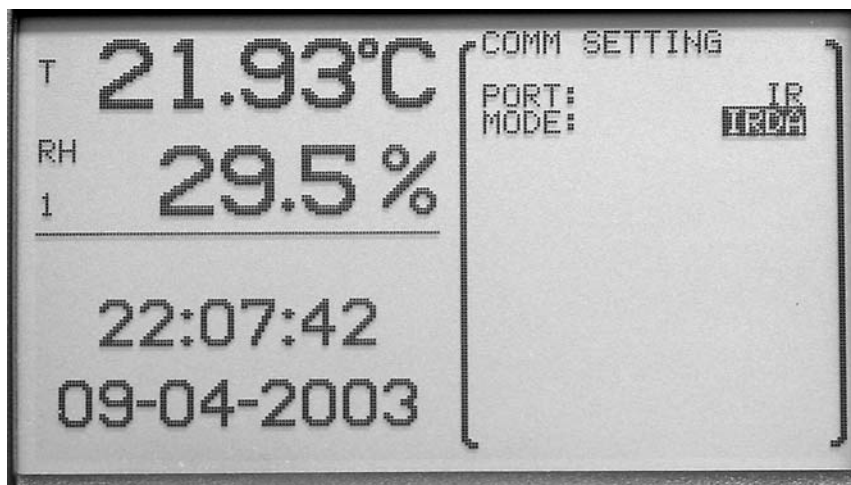


Figure 47 IR

The COMM setting allows the user to transmit data over the IR port at 9600 baud in simple ASCII format. The IRDA option allows the user to print data to an IrDA compatible printer (such as an HP LaserJet 2100). Automatic real time printing is not available with the IrDA mode. The OFF option turns the IR port off.

Press the ◀▶ buttons to select a parameter setting. Use the ▲▼ buttons to move between parameters. Press the **Enter** button to save the new setting. Press the **EXIT** button to cancel any changes and to exit to the menu.

### 7.5.4 Password

The PASSWORD function is used for changing the password required for access to password-protected parameters and for determining whether or not to password-protect those given parameters. When this function is selected, the PASS parameter is displayed.

The password must be entered correctly to access the password settings. Press the ◀▶ buttons to highlight the digit you want to change. Use the ▲▼ buttons to scroll through the numbers 0-9 to set each digit of the password. Press

the **ENTER** button to accept the password or press the **EXIT** button to cancel any changes and exit to the menu.



**Figure 48** Password

By default the password is set to “1620” when the instrument ships from the factory. We recommend the user changes the default password to secure the password-protected settings.

**NOTE:** Keep your password in a secure location.

If an incorrect password is entered, the message **WRONG PASSWORD** is displayed and access to the password-protected parameters is denied. Press the **ENTER** button to reenter the password.

If a correct password is entered, the password-protected parameters **PASS**, **SENSOR**, **RECORD**, **STATS**, **ALARM**, and **TIME** are displayed.

The **PASS** parameter allows the user to change the password and consists of a four digit number.

The **SENSOR** parameter allows the user to turn the password-protection for sensor and channel settings **ON** or **OFF**.

The **RECORD** parameter allows the user to turn the password-protection for data recording settings **ON** or **OFF**.

The **STATS** parameter allows the user to turn the password-protection of statistics and daily stats settings **ON** or **OFF**.

The **ALARM** parameter allows the user to turn the password-protection of alarm settings **ON** or **OFF**.

The **TIME** parameter allows the user to turn the password-protection of time and date settings **ON** or **OFF**.


Press the ◀▶ buttons to highlight the digit to change. Use the ▲▼ buttons to scroll through the numbers 0-9. Press the **Enter** button to save the new setting. Press the **Exit** button to cancel any changes and to move to the next parameter or exit to the menu.



*Note: Keep your password in a secure location and do not forget the password.*

## 7.5.5 System Info

The SYSTEM INFO function displays information about the thermo-hygrometer. The information includes the manufacturer, model number, serial number, firmware version, boot version, and battery level.

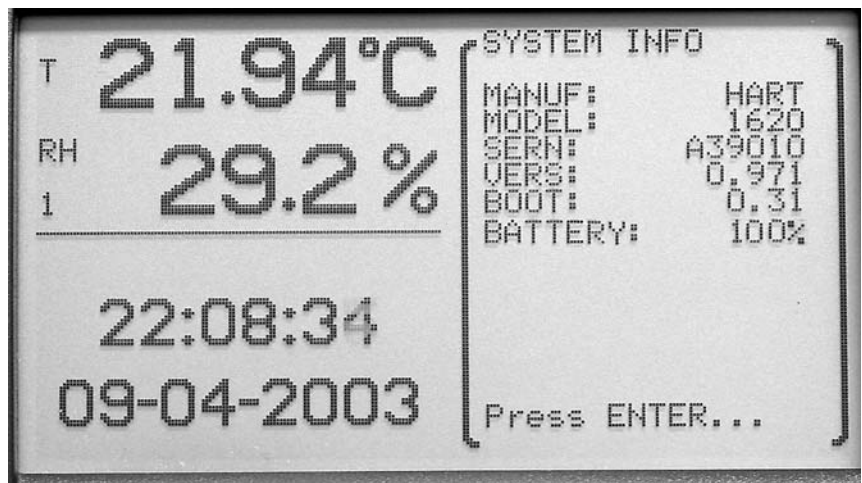

*Figure 49 System Info*

Press the **Enter** button when you are done viewing the system information or the **EXIT** button.

## 8 Digital Communications Interface


### 8.1 Overview

The communication feature allows an external device, such as a computer, to communicate with the thermo-hygrometer readout to obtain measurement data and control operation settings. Communication is accomplished by issuing commands to the thermo-hygrometer readout through RS-232 or IR communication ports.

### 8.2 Communications

The thermo-hygrometer readout is equipped with an RS-232 serial interface and an infrared window. The serial interface allows communications up to distances of approximately 50 feet. The IR interface allows close proximity, line-of-sight, wireless communications. The serial interface and infrared window allow the user to access the functions, parameters, and settings discussed in Section 7.5.3, Comm Setting.

#### 8.2.1 Serial Wiring

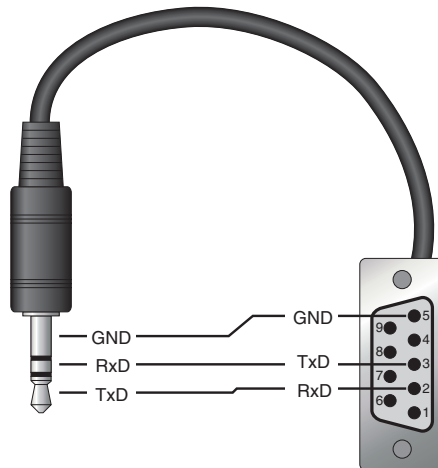

**Figure 50** Serial Cable Wiring

The serial communications cable attaches to the thermo-hygrometer readout through the RS-232 port on the left side of the instrument. Figure 50 shows the pin-out of this connector and suggested cable wiring. Note the TxD line on one side connects to the RxD line on the other side and vice-versa. To eliminate noise, the serial cable should be shielded with low resistance between the connector and the shield.

The serial period, baud rate, linefeed, and echo (duplex) are programmable. Refer to Section 7.5.3, Comm Setting, for instructions on accessing and setting these parameters.

All commands sent to the thermo-hygrometer readout through the serial interface must be terminated with a carriage return (ASCII 0D hex, 13 decimal) or new line character (ASCII 0A hex, 10 decimal).

## **8.3 Interface Commands**

### **8.3.1 Command Summary**

An alphabetical listing of the commands implemented by the thermo-hygrometer readout are shown in Table 4 starting on page 73. These commands can be used with either serial or IR communications ports.

### **8.3.2 Command Syntax**

The thermo-hygrometer readout accepts commands that set parameters, execute functions or respond with requested data. These commands are in the form of strings of ASCII-encoded characters. As far as possible, the thermo-hygrometer readout conforms to SCPI-1994. One notable exception is that compound commands are not allowed as explained below.

Commands consist of a command header and, if necessary, parameter data. All commands must be terminated with either a carriage return (ASCII 0D hex, 13 decimal) or new line character (ASCII 0A hex, 10 decimal).

Command headers consist of one or more mnemonics separated by colons (:). Mnemonics may use letter characters, the underscore character (\_), and possibly numeric digits as well. Commands are not case sensitive. Mnemonics often have alternate forms. Most mnemonics have a long form that is more readable and a short form consisting of three or four characters that is more efficient.

A mnemonic may end with a numeric suffix that specifies one of a set of independent function blocks such as input channel data paths. If a numeric suffix is omitted when a particular block must be specified, an error is generated ("Header suffix out of range").

Query commands are commands that request data in response. Query commands have a question mark (?) immediately following the command header. Responses to query commands are generated immediately and placed in the output buffer. Responses are then transmitted automatically over the RS-232 or IR ports. Responses are lost if not read before the next command is received.

Some commands require parameter data to specify values for one or more parameters. The command header is separated from the parameter data by a space (ASCII 20 hex, 32 decimal). Multiple parameters are separated by a comma (,).

The thermo-hygrometer readout does not allow compound commands (multiple commands per line separated with semicolons). All commands are sequential.

**Table 4** Alphabetical List Commands

Command	Description	Refer To
*CLS	Clear the status registers	Section 8.4.11.1
*ESE?	Returns the Standard Event Status Enable register	Section 8.4.11.2
*ESE <num>IMINIMAXIDEF	Sets the Standard Event Status Enable register	Section 8.4.11.3
*ESR?	Returns the Standard Event Status register	Section 8.4.11.4
*IDN?	Returns the instrument identification string that indicates the manufacturer, model number, serial number, and firmware version	Section 8.4.7.1
*OPT?	Returns configuration options	Section 8.4.7.2
*RST	Sets the instrument operating parameters to defined conditions	Section 8.4.7.3
*SRE?	Returns the Service Request Enable register	Section 8.4.11.5
*SRE <num>IMINIMAXIDEF	Sets the Service Request Enable register	Section 8.4.11.6
*STB?	Returns the Status Byte register	Section 8.4.11.7
*TST? [<bool>]	Returns the self-test results (0: startup test; 1: new test)	Section 8.4.11.8
ALARm:BATTery?	Returns the battery alarm event	Section 8.4.1.1
ALARm:BATTery:ENABLE?	Returns the state of the battery alarm enable	Section 8.4.1.2
ALARm:BATTery:ENABLE <bool>	Enables or disables the battery alarm	Section 8.4.1.3
ALARm:BEEP?	Returns the state of the alarm beep enable	Section 8.4.1.4
ALARm:BEEP <bool>	Enables or disables the alarm beep	Section 8.4.1.5
ALARm:CLEar	Clears the alarm events	Section 8.4.1.6
ALARm:DATE:FIRST?	Returns the date of the first alarm event	Section 8.4.1.7
ALARm:DATE:LAST?	Returns the date of the latest alarm event	Section 8.4.1.8
ALARm:DISPlay?	Returns the state of the alarm display enable	Section 8.4.1.9
ALARm:DISPlay <bool>	Enables or disables the alarm display	Section 8.4.1.10
ALARm:POWer?	Returns the power loss alarm event	Section 8.4.1.11
ALARm:POWer:ENABLE?	Returns the state of the power loss alarm enable	Section 8.4.1.12
ALARm:POWer:ENABLE <bool>	Enables or disables the power loss alarm	Section 8.4.1.13
ALARm:RHUMidity<chn>:LOW?	Returns the state of the low humidity alarm for the specified channel	Section 8.4.1.14
ALARm:RHUMidity<chn>:LOW:ENABLE?	Returns the state of the low humidity alarm enable for the specified channel	Section 8.4.1.15
ALARm:RHUMidity<chn>:LOW:ENABLE <bool>	Enables or disables the low humidity alarm enable for the specified channel	Section 8.4.1.16
ALARm:RHUMidity<chn>:RATE?	Returns the state of the humidity rate alarm for the specified channel	Section 8.4.1.19
ALARm:RHUMidity<chn>:RATE:ENABLE?	Returns the state of the humidity rate alarm enable for the specified channel	Section 8.4.1.20
ALARm:RHUMidity<chn>:RATE:ENABLE <bool>	Enables or disables the humidity rate alarm for the specified channel	Section 8.4.1.21
ALARm:RHUMidity<chn>:RATE:LIMit?	Returns the humidity rate alarm limit for the specified channel	Section 8.4.1.22
ALARm:RHUMidity<chn>:RATE:LIMit <num>IMINIMAXIDEF	Sets the humidity rate alarm limit for the specified channel	Section 8.4.1.23
ALARm:RHUMidity<chn>:SENSor?	Returns the state of the humidity sensor alarm for the specified channel	Section 8.4.1.24



Alphabetical List Commands continued

Command	Description	Refer To
ALARm:RHUMidity<chn>:SENSor:ENABLE?	Returns the state of the humidity sensor alarm enable for the specified channel	Section 8.4.1.25
ALARm:RHUMidity<chn>:SENSor:ENABLE <bool>	Enables or disables the humidity sensor alarm for the specified channel	Section 8.4.1.26
ALARm:RHUMidity<chn>:UPPer?	Returns the state of the high humidity event for the specified channel	Section 8.4.1.27
ALARm:RHUMidity<chn>:UPPer:ENABLE?	Returns the state of the high humidity alarm enable for the specified channel	Section 8.4.1.28
ALARm:RHUMidity<chn>:UPPer:ENABLE <bool>	Enables or disables the high humidity alarm for the specified channel	Section 8.4.1.29
ALARm:RHUMidity<chn>:UPPer:LIMit?	Returns the high humidity alarm limit for the specified channel	Section 8.4.1.30
ALARm:RHUMidity<chn>:UPPer:LIMit <num>IMINIMAXIDEF	Sets the high humidity alarm limit for the specified channel	Section 8.4.1.31
ALARm:TEMPerature<chn>:LOW?	Returns the state of the low temperature alarm for the specified channel	Section 8.4.1.32
ALARm:TEMPerature<chn>:LOW:ENABLE?	Returns the state of the low temperature alarm enable for the specified channel	Section 8.4.1.33
ALARm:TEMPerature<chn>:LOW:ENABLE <bool>	Enables or disables the low temperature alarm for the specified channel	Section 8.4.1.34
ALARm:TEMPerature<chn>:LOW:LIMit?	Returns the low temperature alarm limit for the specified channel	Section 8.4.1.35
ALARm:TEMPerature<chn>:LOW:LIMit <num>IMINIMAXIDEF	Sets the low temperature alarm limit for the specified channel	Section 8.4.1.36
ALARm:TEMPerature<chn>:RATE?	Returns the state of the temperature rate alarm for the specified channel	Section 8.4.1.37
ALARm:TEMPerature<chn>:RATE:ENABLE?	Returns the state of the temperature rate alarm enable for the specified channel	Section 8.4.1.38
ALARm:TEMPerature<chn>:RATE:ENABLE <bool>	Enables or disables the temperature rate alarm for the specified channel	Section 8.4.1.39
ALARm:TEMPerature<chn>:RATE:LIMit?	Returns the temperature rate alarm limit for the specified channel	Section 8.4.1.40
ALARm:TEMPerature<chn>:RATE:LIMit <num>IMINIMAXIDEF	Sets the temperature rate alarm limit for the specified channel	Section 8.4.1.41
ALARm:TEMPerature<chn>:SENSor?	Returns the state of the temperature sensor alarm for the specified channel	Section 8.4.1.42
ALARm:TEMPerature<chn>:SENSor:ENABLE?	Returns the state of the temperature sensor alarm enable for the specified channel	Section 8.4.1.43
ALARm:TEMPerature<chn>:SENSor:ENABLE <bool>	Enables or disables the temperature sensor alarm for the specified channel	Section 8.4.1.47
ALARm:TEMPerature<chn>:UPPer?	Returns the state of the high temperature alarm for the specified channel	Section 8.4.1.45
ALARm:TEMPerature<chn>:UPPer:ENABLE?	Returns the state of the high temperature alarm enable for the specified channel	Section 8.4.1.46
ALARm:TEMPerature<chn>:UPPer:ENABLE <bool>	Enables or disables the high temperature alarm for the specified channel	Section 8.4.1.47
ALARm:TEMPerature<chn>:UPPer:LIMit?	Returns the high temperature alarm limit for the specified channel	Section 8.4.1.48
ALARm:TEMPerature<chn>:UPPer:LIMit <num>IMINIMAXIDEF	Sets the high temperature alarm limit for the specified channel	Section 8.4.1.49



*Alphabetical List Commands continued*

<b>Command</b>	<b>Description</b>	<b>Refer To</b>
ALARm:TIME:FIRST?	Returns the time of first alarm event	Section 8.4.1.50
ALARm:TIME:LAST?	Returns the time of latest alarm event	Section 8.4.1.51
CALibrate<chn>:ALERT?	Returns the state of the calibration alert enable for the specified channel	Section 8.4.6.1
CALibrate<chn>:ALERT <bool>	Enables or disables the sensor alert enable for the specified channel	Section 8.4.6.2
CALibrate<chn>:DATE:CALibrate?	Returns the sensor calibration date for the specified channel	Section 8.4.6.3
CALibrate<chn>:DATE:CALibrate (<year>,<month>,<day>)	Sets the sensor calibration date for the specified channel	Section 8.4.6.4
CALibrate<chn>:DATE:DUE?	Returns the sensor calibration due date for the specified channel	Section 8.4.6.5
CALibrate<chn>:DATE:DUE (<year>,<month>,<day>)	Sets the sensor calibration due date for the specified channel	Section 8.4.6.6
CALibrate<chn>:EXPIration?	Returns the sensor calibration expiration for the specified channel	Section 8.4.6.7
CALibrate<chn>:PARAmeter:LINearity<chn>?	Returns the sensor calibration linearity for the specified channel (temperature or humidity)	Section 8.4.6.8
CALibrate<chn>:PARAmeter:LINearity<chn> <float>	Sets the sensor calibration linearity the specified channel (temperature or humidity)	Section 8.4.6.9
CALibrate<chn>:PARAmeter:OFFSets<chn>?	Returns the sensor calibration offsets for the specified channel (temperature or humidity)	Section 8.4.6.8
CALibrate<chn>:PARAmeter:OFFSets<chn> <float>	Sets the sensor calibration offsets for the specified channel (temperature or humidity)	Section 8.4.6.9
CALibrate<chn>:PARAmeter:SCALE<chn>?	Returns the sensor calibration scale for the specified channel (temperature or humidity)	Section 8.4.6.10
CALibrate<chn>:PARAmeter:SCALE<chn> <float>	Sets the sensor calibration scale for the specified channel (temperature or humidity)	Section 8.4.6.11
CALCulate:AVERAge:CLEAr	Resets all running statistics	Section 8.4.2.1
CALCulate<chn>:DEWPoint?	Returns the dew-point measurement for the specified channel	Section 8.4.2.2
CALCulate<chn>:HINDEx?	Returns the heat index measurement for the specified channel	Section 8.4.2.3
CALCulate<chn>:PARAmeter<num>:AVERAge<num>?	Returns a running statistic for the specified channel	Section 8.4.2.4
CALCulate<chn>:PARAmeter<num>:AVERAge<num>:CLEAr	Resets all running statistics	Section 8.4.2.5
CALCulate<chn>:PARAmeter<num>:AVERAge<num>:DATA?	Returns a running statistic for the specified channel	Section 8.4.2.6
CALCulate[<chn>]:PARAmeter<num>:AVERAge<num>:TYPE?	Returns statistical type for the specified channel (temperature, humidity, type)	Section 8.4.2.7
CALCulate<chn>:PARAmeter<num>:RATE?	Returns rate calculation for the specified channel	Section 8.4.2.8
CALCulate[<chn>]:PARAmeter[<num>]:RATE:TIME?	Returns the rate time span	Section 8.4.2.9
CALCulate[<chn>]:PARAmeter[<num>]:RATE:TIME <num>:IMINIMAXIDEF	Sets the rate time span	Section 8.4.2.10
CALCulate[<chn>]:PARAmeter<num>:RESolution?	Returns the display resolution	Section 8.4.2.11
CALCulate<chn>:PARAmeter<num>:RESolution <num>:IMINIMAXIDEF	Sets the display resolution)	Section 8.4.2.12
DATa:DStat:ENABLE?	Returns the state of the daily stats recording enable	Section 8.4.3.1

Alphabetical List Commands continued

Command	Description	Refer To
DATA:DSAt:ENABle <bool>	Enables or disables the daily stats recording enable	Section 8.4.3.2
DATA:DSAt:HOuR?	Returns the daily stats recording time	Section 8.4.3.3
DATA:DSAt:HOuR <num> MINIMAXIDeF	Sets the daily stats recording time	Section 8.4.3.4
DATA:DSAt:REnABle?	Returns the state of the statistics reset enable	Section 8.4.3.5
DATA:DSAt:REnABle <bool>	Enables or disables the statistics reset	Section 8.4.3.6
DATA:DSAt:RHOUr?	Returns the statistics reset time	Section 8.4.3.7
DATA:DSAt:RHOUr <num> MINIMAXIDeF	Sets the statistics reset time	Section 8.4.3.8
DATA:DSAt:RECOrd:BTIME? [<num>]	Returns the daily stats record begin time	Section 8.4.3.9
DATA:DSAt:RECOrd:CLEAr	Clears all daily stats records	Section 8.4.3.10
DATA:DSAt:RECOrd:COUnT? [MAX]	Returns the daily stats record count	Section 8.4.3.11
DATA:DSAt:RECOrd:DATE? [<num>]	Returns the daily stats record date	Section 8.4.3.12
DATA:DSAt:RECOrd:ETIME? [<num>]	Returns the daily stats record end time	Section 8.4.3.13
DATA:DSAt:RECOrd:FIND? [<year>,<month>,<day>]	Returns the daily stats record number for the given date	Section 8.4.3.14
DATA:DSAt:RECOrd:VALue? [<num>,<chn>,<type>]	Returns the daily stats statistical calculation	Section 8.4.3.15
DATA:RECOrd:CLEAr	Clears all recorded data	Section 8.4.3.16
DATA:RECOrd:FEED:RHUMidity<chn>?	Returns the state of the humidity recording for the specified channel	Section 8.4.3.17
DATA:RECOrd:FEED:RHUMidity<chn> <bool>	Enables or disables the humidity recording for the specified channel	Section 8.4.3.18
DATA:RECOrd:FEED:TEMPerature<chn>?	Returns the state of the temperature recording for the specified channel	Section 8.4.3.19
DATA:RECOrd:FEED:TEMPerature<chn> <bool>	Enables or disables the temperature recording for the specified channel	Section 8.4.3.20
DATA:RECOrd:FREE?	Returns the recording memory usage	Section 8.4.3.21
DATA:RECOrd:OPEN?	Returns the number of bytes in the open data set	Section 8.4.3.22
DATA:RECOrd:OPEN (<year>,<month>,<day>,<hour>,<minute>,<second>[,<year>,<month>,<day>,<hour>,<minute>,<second>])	Opens the range of data for reading	Section 8.4.3.23
DATA:RECOrd:READ? [<num>]	Returns a group of data	Section 8.4.3.24
DATA:RECOrd:TIME?	Returns the data recording timer	Section 8.4.3.25
DATA:RECOrd:TIME <num> MINIMAXIDeF	Sets the data recording timer	Section 8.4.3.26
FETCh? [<chn>]	Returns the temperature and humidity measurements for the specified channel	Section 8.4.2.13
FORMat:TDSTamp:STAT?	Returns the state of the date/time stamp for FETCh, MEASure, or READ command	Section 8.4.2.14
FORMat:TDSTamp:STAT? <bool>	Enables or disables the date/time stamp for FETCh, MEASure, or READ command	Section 8.4.2.15
INITiate	no action	Section 8.4.4.1
INITiate:CONTInous?	Returns the continuous state (always 1)	Section 8.4.4.2
MEASure? [<chn>]	Returns the temperature and humidity measurements for the specified channel	Section 8.4.2.16

*Alphabetical List Commands continued*

<b>Command</b>	<b>Description</b>	<b>Refer To</b>
READ? [<chn>]	Returns the temperature and humidity measurements for the specified channel	Section 8.4.2.17
ROUTE:CLOSE? [<chn>]	Returns the state of the specified channel	Section 8.4.5.1
ROUTE:CLOSE <chn>	Enables the specified channel	Section 8.4.5.2
ROUTE:OPEN? [<chn>]	Returns the channel state	Section 8.4.5.3
ROUTE:OPEN <chn>	Disables the specified channel	Section 8.4.5.4
SENSOR:AVERAGE?	Returns the state of the measurement averaging	Section 8.4.4.3
SENSOR:AVERAGE <bool>	Enables or disables the measurement averaging	Section 8.4.4.4
SENSOR<chn>:LOCK?	Returns the state of the sensor lock for the specified channel	Section 8.4.4.5
SENSOR<chn>:LOCK <bool>	Enables or disables the sensor lock for the specified channel	Section 8.4.4.6
SENSOR<chn>:IDENTIFICATION?	Returns the sensor identification for the specified channel	Section 8.4.4.7
SENSOR<chn>:IDENTIFICATION <str>	Sets the sensor identification for the specified channel	Section 8.4.4.8
SENSOR<chn>:STATUS?	Returns the sensor status for the specified channel	Section 8.4.4.9
STATUS:ALARM?	Returns and clears the alarm status event	Section 8.4.11.9
STATUS:ALARM:CONDITION?	Returns the alarm status condition	Section 8.4.11.10
STATUS:ALARM:ENABLE?	Returns the alarm status enable	Section 8.4.11.11
STATUS:ALARM:ENABLE <num>IMINIMAXIDEF	Sets the alarm status enable	Section 8.4.11.12
STATUS:MEASURE?	Returns and clears the measurement status event	Section 8.4.11.13
STATUS:MEASURE:CONDITION?	Returns the measurement status condition	Section 8.4.11.14
STATUS:MEASURE:ENABLE?	Returns the measurement status enable	Section 8.4.11.15
STATUS:MEASURE:ENABLE <num>IMINIMAXIDEF	Sets the measurement status enable	Section 8.4.11.16
STATUS:OPERATION?	Returns and clears the operation status event	Section 8.4.11.17
STATUS:OPERATION:CONDITION?	Returns the operation status condition	Section 8.4.11.18
STATUS:OPERATION:ENABLE?	Returns the operation status enable	Section 8.4.11.19
STATUS:OPERATION:ENABLE <num>IMINIMAXIDEF	Sets the operation status enable	Section 8.4.11.20
STATUS:QUESTION?	Returns and clears the questionable status event	Section 8.4.11.21
STATUS:QUESTION:CONDITION?	Returns the questionable status condition	Section 8.4.11.22
STATUS:QUESTION:ENABLE?	Returns the questionable status enable	Section 8.4.11.23
STATUS:QUESTION:ENABLE <num>IMINIMAXIDEF	Set the questionable status enable	Section 8.4.11.24
SYSTEM:BOOT:VERSION?	Returns the boot ROM version	Section 8.4.7.4

Alphabetical List Commands continued

Command	Description	Refer To
SYSTem:COMMunicate:IR:MODE?	Returns the IR mode (0: off; 1: COMM; 2: IrDA)	Section 8.4.8.1
SYSTem:COMMunicate:IR:MODE <num>	Set the IR mode	Section 8.4.8.2
SYSTem:COMMunica:SERial:BAUD?	Returns the serial port baud rate	Section 8.4.8.3
SYSTem:COMMunica:SERial:BAUD <num> MINIMAX DEF	Sets the serial port baud rate	Section 8.4.8.4
SYSTem:COMMunica:SERial:FDUPlex?	Returns the state of the serial port echo	Section 8.4.8.5
SYSTem:COMMunica:SERial:FDUPlex <bool>	Enables or disables the serial port echo	Section 8.4.8.6
SYSTem:COMMunica:SERial:FEED?	Returns the state of the serial port auto printing	Section 8.4.8.7
SYSTem:COMMunica:SERial:FEED <bool>	Enables or disables the serial port auto printing	Section 8.4.8.8
SYSTem:COMMunica:SERial:LINEfeed?	Returns the state of the serial port linefeed	Section 8.4.8.9
SYSTem:COMMunica:SERial:LINEfeed <bool>	Enables or disables the serial port linefeed	Section 8.4.8.10
SYSTem:COMMunica:SERial:TIME?	Returns the serial port auto printing timer	Section 8.4.8.11
SYSTem:COMMunica:SERial:TIME <num> MINIMAX DEF	Sets the serial port auto printing timer	Section 8.4.8.12
SYSTem:DATE?	Returns the clock date	Section 8.4.9.1
SYSTem:DATE (<year>,<month>,<day>)	Sets the clock date	Section 8.4.9.2
SYSTem:DATE:FORMat?	Returns the display date format (0: mm-dd-yy; 1: mm-dd-yyyy; 2: dd/mm/yy; 3: dd/yy/yyyy)	Section 8.4.9.3
SYSTem:DATE:FORMat <num> MINIMAX DEF	Sets the display date format	Section 8.4.9.4
SYSTem:DECimal:FORMat?	Returns the display decimal option (0: '.', 1: ',')	Section 8.4.9.5
SYSTem:DECimal:FORMat <num> MINIMAX DEF	Sets the display decimal option	Section 8.4.9.6
SYSTem:ERROR?	Returns the system error log	Section 8.4.7.5
SYSTem:KLOCKout?	Returns the state of the button panel lockout	Section 8.4.8.13
SYSTem:KLOCKout <bool>	Enables or disables the button panel lockout	Section 8.4.8.14
SYSTem:PASSword:ALARm?	Returns the state of the alarm settings password protection	Section 8.4.10.1
SYSTem:PASSword:ALARm <bool>	Enables or disables the alarm settings password protection	Section 8.4.10.2
SYSTem:PASSword:CDISable	Disables password-protected commands	Section 8.4.10.3
SYSTem:PASSword:CENable <num>	Enables password-protected commands	Section 8.4.10.4
SYSTem:PASSword:CENable:STATe?	Returns the current password-protected state	Section 8.4.10.5
SYSTem:PASSword:NEW <num> DEF	Sets the new password	Section 8.4.10.6
SYSTem:PASSword:RECOrd?	Returns the state of the data recording password protection	Section 8.4.10.7
SYSTem:PASSword:RECOrd <bool>	Enables or disables the data recording password protection	Section 8.4.10.8
SYSTem:PASSword:SENSor?	Returns the state of the sensor settings password protection	Section 8.4.10.9
SYSTem:PASSword:SENSor <bool>	Enables or disables the sensor settings password protection	Section 8.4.10.10
SYSTem:PASSword:STATistics?	Returns the state of the statistics settings password protection	Section 8.4.10.11
SYSTem:PASSword:STATistics <bool>	Enables or disables the state of the statistics settings password protection	Section 8.4.10.12
SYSTem:PASSword:TIME?	Returns the state of the date/time password protection	Section 8.4.10.13
SYSTem:PASSword:TIME <bool>	Enables or disables the date/time password protection	Section 8.4.10.14

*Alphabetical List Commands continued*

<b>Command</b>	<b>Description</b>	<b>Refer To</b>
SYSTem:POWer:BATTery?	Returns the battery level percent	Section 8.4.8.15
SYSTem:TIME?	Returns the clock time	Section 8.4.9.7
SYSTem:TIME (<hour>,<minute>,<second>)	Sets the clock time	Section 8.4.9.8
SYSTem:TIME:DAYLight?	Returns the automatic daylight saving adjustment setting	Section 8.4.9.9
SYSTem:TIME:DAYLight <num>IMINIMAXIDEF	Sets the automatic daylight saving adjustment setting	Section 8.4.9.10
SYSTem:TIME:FORMat?	Returns the display time format	Section 8.4.9.11
SYSTem:TIME:FORMat <num>IMINIMAXIDEF	Sets the display time format	Section 8.4.9.12
SYSTem:VERSion?	Returns the SCPI version number	Section 8.4.7.7
TRIGger:Time?	Returns the measurement period	Section 8.4.4.10
TRIGger:Time <num>IMINIMAXIDEF	Sets the measurement period	Section 8.4.4.11
UNIT:TEMPerature?	Returns the temperature unit	Section 8.4.7.8
UNIT:TEMPerature <unit>	Sets the temperature unit	Section 8.4.7.9

The execution of each command is completed before subsequent commands are processed.

## 8.4 Commands

Table 4, Alphabetical List of Commands, lists the commands in alphabetical order. In this section the commands are arranged into the following groups:

**Alarm Commands** - commands for alarm settings.

**Measurement Commands** - commands for reading measurement data.

**Data Commands** - commands for setting and reading data information

**Measurement Control Commands** - commands for the timing and action of the measurement process.

**Channel Commands** - commands for selecting channels.

**Calibration Commands** - commands for calibration settings.

**System Commands** - commands for general system configuration parameters.

**Communication Interface Commands** - commands for controlling the interface configuration (serial and IR ports).

**Date and Time Commands** - commands for setting the date, time and the date and time formats.

**Password Commands** - commands for enabling and disabling the password, for setting the password, and for checking the password protection state.

**Status Commands** - commands to report the status and condition of the instrument.

Each section provides the command structure (long and short format), a description of the command purpose, a command example, an example of what the command returns (as applicable to query commands), and notes specific to the command. The following apply to each group of commands:

- Upper case letters designate syntax that is required when issuing the command. Lower case letters are optional and may be omitted.
- <> indicates a required parameter.
- [] indicates an optional parameter.
- () indicates a group of parameters that must be used together.
- 'l' indicates alternate parameter values.
- <str> indicates a string of ASCII characters is required.
- <chn> indicates a channel number is required.
- <num> indicates an integer value is required.
- <bool> indicates a boolean value (0 or 1) is required. The mnemonics OFF and ON are also accepted for 0 and 1, respectively.

- <unit> indicates a temperature unit (C or F) is required.
- <float> indicates a floating point value is required.
- <pass> indicates a four digit numeric password is required.
- <port> indicates a port number is required.
- <year> indicates a four digit number for the year is required.
- <month> indicates a one or two digit number for the month is required.
- <day> indicates a one or two digit number for the day is required.
- <hour> indicates a one or two digit number for the hour (0 to 23) is required.
- <minute> indicates a one or two digit number for the minute is required.
- <second> indicates a one or two digit number for the second is required.
- <baud> indicates a valid baud rate setting is required.
- For query commands, specifying the MIN, MAX, or DEF parameter causes the instrument to respond with the minimum, maximum, or default setting respectively.
- For set commands, specifying the MIN, MAX, or DEF parameters causes the instrument to use the minimum, maximum, or default setting respectively.
- Unrecognized commands or commands with incorrect syntax or invalid parameters generate error messages that are placed in the error queue (see Section 8.4.7.5, SYST:ERR?).

## 8.4.1 Alarm Commands

### 8.4.1.1 ALARm:BATTery?

Indicates whether a battery alarm event has occurred.

Example: ALAR:BATT?

Response: 1

A value of 1 is returned if a battery alarm event has occurred. A value of 0 is returned if a battery alarm event has not occurred.

### 8.4.1.2 ALARm:BATTery:ENABLE?

Returns the state of the battery alarm enable.

Example: ALAR:BATT:ENAB?

Response: 0

A value of 1 is returned if the battery alarm is enabled. A value of 0 is returned if the battery alarm is disabled.

#### 8.4.1.3 **ALARm:BATTery:ENABLE <bool>**

Sets the state of the battery alarm enable.

Example: ALAR:BATT:ENAB 1

The <bool> parameter turns the battery alarm enable on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.1.4 **ALARm:BEEP?**

Returns the state of the audible alarm enable.

Example: ALAR:BEEP?

Response: 0

A value of 1 is returned if the alarm beep is enabled. A value of 0 is returned if the alarm beep is disabled.

#### 8.4.1.5 **ALARm:BEEP <bool>**

Sets the state of the audible alarm enable.

Example: ALAR:BEEP 1

The <bool> parameter turns the alarm beep enable on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.1.6 **ALARm:CLEAr**

Clears the alarm events.

Example: ALAR:CLE

The alarm clear command clears the alarm events.

#### 8.4.1.7 **ALARm:DATE:FIRSt?**

Returns the date of the first alarm event.

Example: ALAR:DATE:FIRS?

Response: 2003,8,10

The response is returned in the format, <year>,<month>,<day>.

If no alarm has been triggered, the response is: 2000,0,0.

#### 8.4.1.8 **ALARm:DATE:LAST?**

Returns the date of the last alarm event.

Example: ALAR:DATE:LAST?



Response: 2003,8,10

The response is returned in the format, <year>,<month>,<day>.

If no alarm has been triggered, the response is: 2000,0,0.

#### **8.4.1.9 ALARm:DISPlay?**

Returns the state of the visible alarm enable.

Example: ALAR:DISP?

Response: 0

A value of 1 is returned if the alarm display is enabled. A value of 0 is returned if the alarm display is disabled.

#### **8.4.1.10 ALARm:DISPlay <bool>**

Sets the state of the visible alarm enable.

Example: ALAR:DISP 1

The <bool> parameter turns the alarm display enable on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### **8.4.1.11 ALARm:POWer?**

Indicates whether a power loss alarm event has occurred.

Example: ALAR:POW?

Response: 0

A value of 1 is returned if a power loss alarm event has occurred. A value of 0 is returned if a power loss alarm event has not occurred.

#### **8.4.1.12 ALARm:POWer:ENABLE?**

Returns the state of the power loss alarm enable.

Example: ALAR:POW:ENAB?

Response: 0

A value of 1 is returned if the power loss alarm is enabled. A value of 0 is returned if the power loss alarm is disabled.

#### **8.4.1.13 ALARm:POWer:ENABLE <bool>**

Sets the state of the power loss alarm enable.

Example: ALAR:POW:ENAB 1

The <bool> parameter turns the power loss alarm on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.1.14 **ALARm:RHUMidity<chn>:LOWer?**

Indicates whether a lower humidity alarm event has occurred for the specified channel.

Example: ALAR:RHUM1:LOW?

Response: 0

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if a lower humidity alarm event has occurred on the specified channel. A value of 0 is returned if a lower humidity alarm event has not occurred on the specified channel.

#### 8.4.1.15 **ALARm:RHUMidity<chn>:LOWer:ENABle?**

Returns the state of the lower humidity alarm enable for the specified channel.

Example: ALAR:RHUM1:LOW:ENAB?

Response: 0

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the lower humidity alarm is enabled. A value of 0 is returned if the lower humidity alarm is disabled.

#### 8.4.1.16 **ALARm:RHUMidity<chn>:LOWer:ENABle <bool>**

Sets the state of the lower humidity alarm enable for the specified channel.

Example: ALAR:RHUM1:LOW:ENAB 1

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the lower humidity alarm enable on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.1.17 **ALARm:RHUMidity<chn>:LOWer:LIMit? [MINIMAXIDEF]**

Returns the lower humidity alarm limit for the specified channel in %RH.

Example: ALAR:RHUM1:LOW:LIM?

Response: 20.00

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

**8.4.1.18 ALARm:RHUMidity<chn>:LOWer:LIMit <float>IMINIMAXIDEF**

Sets the lower humidity alarm limit for the specified channel in %RH.

Example: ALAR:RHUM1:LOW:LIM 25.00

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). The <float> parameter specifies the value for the lower humidity alarm limit. Specifying the MIN, MAX, or DEF parameter sets the lower humidity alarm limit to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10 , Password Commands).

**8.4.1.19 ALARm:RHUMidity<chn>:RATE?**

Indicates whether a humidity rate alarm event has occurred for the specified channel.

Example: ALAR:RHUM1:RATE?

Response: 1

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if a humidity rate alarm event has occurred on the specified channel. A value of 0 is returned if a humidity rate alarm event has not occurred on the specified channel.

**8.4.1.20 ALARm:RHUMidity<chn>:RATE:ENABLE?**

Returns the state of the humidity rate alarm enable for the specified channel.

Example: ALAR:RHUM1:RATE:ENAB?

Response: 0

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the humidity rate alarm is enabled. A value of 0 is returned if the humidity rate alarm is disabled.

**8.4.1.21 ALARm:RHUMidity<chn>:RATE:ENABLE <bool>**

Sets the state of the humidity rate alarm enable for the specified channel.

Example: ALAR:RHUM1:RATE:ENAB 1

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the humidity rate alarm enable on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.22 ALARm:RHUMidity<chn>:RATE:LIMit? [MINIMAXIDEF]**

Returns the humidity rate alarm limit for the specified channel in %RH per hour.

Example: ALAR:RHUM1:RATE:LIM?

Response: 5

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### **8.4.1.23 ALARm:RHUMidity<chn>:RATE:LIMit <float>IMINIMAXIDEF**

Sets the humidity rate alarm limit for the specified channel in %RH per hour.

Example: ALAR:RHUM1:RATE:LIM 1

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). The <float> parameter specifies the value for the humidity rate alarm limit. Specifying the MIN, MAX, or DEF parameter sets the humidity rate alarm limit to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

#### **8.4.1.24 ALARm:RHUMidity<chn>:SENSor?**

Indicates whether a humidity sensor alarm event has occurred for the specified channel.

Example: ALAR:RHUM1:SENS?

Response: 1

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if a humidity sensor alarm event has occurred on the specified channel. A value of 0 is returned if a humidity sensor alarm event has not occurred on the specified channel.

#### **8.4.1.25 ALARm:RHUMidity<chn>:SENSor:ENABLE?**

Returns the state of the humidity sensor alarm enable for the specified channel.

Example: ALAR:RHUM1:SENS:ENAB?

Response: 0

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the humidity sensor alarm is enabled. A value of 0 is returned if the humidity sensor alarm is disabled.

#### **8.4.1.26 ALARm:RHUMidity<chn>:SENSor:ENABLE <bool>**

Sets the state of the humidity sensor alarm for the specified channel.

Example: ALAR:RHUM1:SENS:ENAB 1

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the humidity sensor alarm on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.27 ALARm:RHUMidity<chn>:UPPer?**

Indicates whether an upper humidity alarm event has occurred for the specified channel.

Example: ALAR:RHUM1:UPP?

Response: 0

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if an upper humidity alarm event has occurred on the specified channel. A value of 0 is returned if an upper humidity alarm event has not occurred on the specified channel.

**8.4.1.28 ALARm:RHUMidity<chn>:UPPer:ENABLE?**

Returns the state of the upper humidity alarm enable for the specified channel.

Example: ALAR:RHUM1:UPP:ENAB?

Response: 0

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the upper humidity alarm is enabled. A value of 0 is returned if the upper humidity alarm is disabled.

**8.4.1.29 ALARm:RHUMidity<chn>:UPPer:ENABLE <bool>**

Sets the state of the upper humidity alarm enable for the specified channel.

Example: ALAR:RHUM1:UPP:ENAB 1

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the upper humidity alarm on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.30 ALARm:RHUMidity<chn>:UPPer:LIMit? [MINIMAXIDEF]**

Returns the upper humidity alarm limit for the specified channel in %RH.

Example: ALAR:RHUM1:UPP:LIM?

Response: 70.00

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

**8.4.1.31 ALARm:RHUMidity<chn>:UPPer:LIMit <float>IMINIMAXIDEF**

Sets the upper humidity alarm limit for the specified channel in %RH.

Example: ALAR:RHUM1:UPP:LIM 65.00

The RHUMidity suffix, <chn>, specifies the channel (1 or 2). The <float> parameter specifies the value for the upper humidity alarm limit. Specifying the MIN, MAX, or DEF parameter sets the upper humidity alarm limit to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.1.32 **ALARm:TEMPurature<chn>:LOWer?**

Indicates whether a lower temperature alarm event has occurred for the specified channel.

Example: ALAR:TEMP1:LOW?

Response: 1

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if a lower temperature alarm event has occurred on the specified channel. A value of 0 is returned if a lower temperature alarm event has not occurred on the specified channel.

#### 8.4.1.33 **ALARm:TEMPurature<chn>:LOWer:ENABle?**

Returns the state of the lower temperature alarm enable for the specified channel.

Example: ALAR:TEMP1:LOW:ENAB?

Response: 0

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the lower temperature alarm is enabled. A value of 0 is returned if the lower temperature alarm is disabled.

#### 8.4.1.34 **ALARm:TEMPurature<chn>:LOWer:ENABle <bool>**

Sets the state of the lower temperature alarm enable for the specified channel.

Example: ALAR:TEMP1:LOW:ENAB 1

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the lower temperature alarm on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.1.35 **ALARm:TEMPurature<chn>:LOWer:LIMit? [MINIMAXIDEF]**

Returns the lower temperature alarm limit for the specified channel in degrees C or F.

Example: ALAR:TEMP1:LOW:LIM?

Response: 18.00

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The value returned is always in the current temperature units (C or F). Specifying the MIN,

MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

**8.4.1.36 ALARm:TEMPurature<chn>:LOWer:LIMit <float>IMINIMAXIDF**

Sets the lower temperature alarm limit for the specified channel in degrees C or F.

Example: ALAR:TEMP1:LOW:LIM 20.00

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The <float> parameter specifies the value for the lower temperature alarm limit. Specifying the MIN, MAX, or DEF parameter sets the lower temperature alarm limit to the minimum, maximum, or default value respectively. The <float> value is always in the current temperature units (C or F). This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.37 ALARm:TEMPurature<chn>:RATE?**

Indicates whether a temperature rate alarm event has occurred.

Example: ALAR:TEMP1:RATE?

Response: 0

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if a temperature rate alarm event has occurred on the specified channel. A value of 0 is returned if a temperature rate alarm event has not occurred on the specified channel.

**8.4.1.38 ALARm:TEMPurature<chn>:RATE:ENABLE?**

Returns the state of the temperature rate alarm enable for the specified channel.

Example: ALAR:TEMP1:RATE:ENAB?

Response: 0

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the temperature rate alarm is enabled. A value of 0 is returned if the temperature rate alarm is disabled.

**8.4.1.39 ALARm:TEMPurature<chn>:RATE:ENABLE <bool>**

Sets the state of the temperature rate alarm enable for the specified channel.

Example: ALAR:TEMP1:RATE:ENAB 1

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the temperature rate alarm on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.40 ALARm:TEMPurature<chn>:RATE:LIMit? [MINIMAXIDeF]**

Returns the temperature rate alarm limit for the specified channel in degrees (C or F) per hour.

Example: ALAR:TEMP1:RATE:LIM?

Response: 5

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The value returned is always in the current temperature units (C or F). Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

**8.4.1.41 ALARm:TEMPurature<chn>:RATE:LIMit <float>IMINIMAXIDeF**

Sets the temperature rate alarm limit for the specified channel in degrees (C or F) per hour.

Example: ALAR:TEMP1:RATE:LIM 10.00

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The <float> parameter specifies the value for the temperature rate alarm limit. The <float> value is always in the current temperature units (C or F). Specifying MIN, MAX, or DEF parameter sets the temperature rate alarm limit to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.42 ALARm:TEMPurature<chn>:SENSor?**

Indicates whether a temperature sensor alarm event has occurred for the specified channel.

Example: ALAR:TEMP1:SENS?

Response: 0

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if a temperature sensor alarm event has occurred on the specified channel. A value of 0 is returned if a temperature sensor alarm event has not occurred on the specified channel.

**8.4.1.43 ALARm:TEMPurature<chn>:SENSor:ENABle?**

Returns the state of the temperature sensor alarm enable for the specified channel.

Example: ALAR:TEMP1:SENS:ENAB?

Response: 0

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the temperature sensor alarm is enabled. A value of 0 is returned if the temperature sensor alarm is disabled.



**8.4.1.44 ALARm:TEMPurature<chn>:SENSor:ENABle <bool>**

Sets the state of the temperature sensor alarm enable for the specified channel.

Example: ALAR:TEMP1:SENS:ENAB 1

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the temperature sensor alarm on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.45 ALARm:TEMPurature<chn>:UPPer?**

Indicates whether an upper temperature alarm event has occurred.

Example: ALAR:TEMP1:UPP?

Response: 0

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if an upper temperature alarm event has occurred on the specified channel. A value of 0 is returned if an upper temperature alarm event has not occurred on the specified channel.

**8.4.1.46 ALARm:TEMPurature<chn>:UPPer:ENABle?**

Returns the state of the upper temperature alarm enable for the specified channel.

Example: ALAR:TEMP1:UPP:ENAB?

Response: 0

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the upper temperature alarm is enabled. A value of 0 is returned if the upper temperature alarm is disabled.

**8.4.1.47 ALARm:TEMPurature<chn>:UPPer:ENABle <bool>**

Sets the state of the upper temperature alarm enable for the specified channel.

Example: ALAR:TEMP1:UPP:ENAB 1

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the upper temperature alarm on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.1.48 ALARm:TEMPurature<chn>:UPPer:LIMit? [MINIMAXIDEF]**

Returns the upper temperature alarm limit for the specified channel in degrees C or F.

Example: ALAR:TEMP1:UPP:LIM?

Response: 28.00

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The value returned is always in the current temperature units (C or F). Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### **8.4.1.49 ALARm:TEMPurature<chn>:UPPer:LIMit <float>IMINIMAXIDEF**

Sets the upper temperature alarm limit for the specified channel in degrees C or F.

Example: ALAR:TEMP1:UPP:LIM 26.00

The TEMPerature suffix, <chn>, specifies the channel (1 or 2). The <float> parameter specifies the value for the upper temperature alarm limit. The <float> value is always in the current temperature units (C or F). Specifying the MIN, MAX, or DEF parameter sets the upper temperature alarm limit to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

#### **8.4.1.50 ALARm:TIME:FIRSt?**

Returns the time of the first alarm event.

Example: ALAR:TIME:FIRS?

Response: 15,43,13

The response is returned in the format, <hour>,<minute>,<second>.

#### **8.4.1.51 ALARm:TIME:LAST?**

Returns the time of the last alarm event.

Example: ALAR:TIME:LAST?

Response: 15,43,19

The response is returned in the format, <hour>,<minute>,<second>.

### **8.4.2 Measurement Commands**

The measurement commands are used to read information on the statistical calculations and for reading the most recent measurement for a specified channel.

#### **8.4.2.1 CALCulate:AVERage:CLEar**

Resets all running statistics for both channels.

Example: CALC1:AVER:CLE

This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.2.2 **CALCulate<chn>:DEWPoint?**

Returns the dewpoint measurement on the specified channel in degrees C or F.

Example: CALC1:DEWP?

Response: 3.5

The CALCulate suffix, <chn>, specifies the channel (1 or 2). The value returned is always in the current temperature units (C or F).

#### 8.4.2.3 **CALCulate<chn>:HINdex?**

Returns the heat index calculation for the specified channel in degrees C or F.

Example: CALC1:HIND?

Response: 28.4

The CALCulate suffix, <chn>, specifies the channel (1 or 2). The value returned is always in the current temperature units (C or F).

#### 8.4.2.4 **CALCulate<chn>:PARAmeter<num>:AVERAge<type>?**

Returns the specified statistical calculation for the specified channel.

Example: CALC1:PAR1:AVER4?

Response: 25.186

The CALCulate suffix, <chn>, specifies the channel (1 or 2). The PARAmeter suffix, <num>, specifies temperature (1) or relative humidity (2). The AVERAge suffix, <type>, specifies the statistic: average (1), standard deviation (2), minimum (3), maximum (4), spread (5), maximum rate (7), or alarm count (8). Temperature values are in the current temperature unit, C of F.

#### 8.4.2.5 **CALCulate[<chn>]:PARAmeter[<num>]:AVERAge[<type>]:CLEAr**

Resets all of the running statistics for both channels.

This is the same as the CALCulate:AVERAge:CLEAr command (see Section 8.4.2.1).

#### 8.4.2.6 **CALCulate[<chn>]:PARAmeter[<num>]:AVERAge[<type>]:DATA?**

Returns the specified statistical calculation for the specified channel.

This is the same as the CALCulate,chn.:PARAmeter<num>:AVERAge<type>? command (see 8.4.2.4).

#### 8.4.2.7 **CALCulate[<chn>]:PARAmeter<num>:AVERAge<type>:TYPE?**

Returns the name of the specified statistical type for the specified channel.

Example: CALC1:PAR1:AVER4:TYPE?

Response: "T MAX"

The CALCulate suffix, <chn>, specifies the channel (1 or 2). The PARAmeter suffix, <num>, specifies temperature (1) or relative humidity (2). The AVERage suffix, <type>, specifies the statistic: average (1), standard deviation (2), minimum (3), maximum (4), spread (5), maximum rate (7), or alarm count (8). Temperature values are in the current temperature unit, C of F.

#### 8.4.2.8 **CALCulate<chn>:PARAmeter<num>:RATE?**

Returns the rate calculation for the specified channel in degrees C or F per hour for temperature or % per hour for relative humidity.

Example: CALC1:PAR1:RATE?

Response: -0.74

The CALCulate suffix, <chn>, specifies the channel (1 or 2). The PARAmeter suffix, <num>, specifies temperature (1) or relative humidity (2).

#### 8.4.2.9 **CALCulate[<chn>]:PARAmeter[<num>]:RATE:TIME? [MINIMAXIDEF]**

Returns the rate time span in seconds.

Example: CALC:PAR:RATE:TIME?

Response: 300

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### 8.4.2.10 **CALCulate[<chn>]:PARAmeter[<num>]:RATE:TIME <num>IMINIMAXIDEF**

Sets the rate time span for the specified channel in seconds.

Example: CALC:PAR:RATE:TIME 600

Specifying MIN, MAX, or DEF parameter sets the rate time span to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.2.11 **CALCulate[<chn>]:PARAmeter<num>:RESolution? [MINIMAXIDEF]**

Returns the display resolution.

Example: CALC:PAR1:RES?

Response: 3

The PARAmeter suffix, <num>, specifies either temperature resolution (1) or relative humidity resolution (2). The value returned indicates the number of decimal places. Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### 8.4.2.12 **CALCulate[<chn>]:PARAmeter<num>:RESolution <num>|MIN|MAX|DEF**

Sets the display resolution.

Example: CALC:PAR2:RES 2

The PARAmeter suffix, <num>, specifies either temperature resolution (1) or relative humidity resolution (2). The <num> parameter specifies the number of decimal places to use. Specifying the MIN, MAX, or DEF parameter sets the display resolution to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.2.13 **FETCh? [<chn>]**

Returns a comma-delimited list of the most recent measurements for the specified channel or for both channels.

Example 1: FETC? 1

Response: 25.576,29.30

or

Response: 1,1,25.629,C,29.32,%,2003,9,16,11,2,38

Example 2: FETC?

Response: 25.582,29.32,26.341,37.96

or

Response: 1,1,25.629,C,29.29,%,2,0,C,0,%,2003,9,16,11,1,42

The <chn> parameter is optional and specifies the channel (1 or 2). If the <chn> parameter is omitted, the most recent measurements on both channels are returned. If a channel is disabled or no sensor is connected, the measurement values returned for that channel are 0. This command does not affect the measurement action.

If the extended format setting is OFF (see Section 8.4.2.15, FOR-Mat:TDST:STAT), the measurement values are returned in a comma-delimited format as follows:

<Ch1Temp>,<Ch1Humid>[,<Ch2Temp>,<Ch2Humid>]

The temperature values are always in the current temperature units. The humidity values are always in %RH.

If the extended format setting is ON, the measurements are returned in a comma-delimited format as follows:

<MeasStatus>,<ChX>,<ChXTemp>,<TempUnits>,<ChXHumid>,%[,<ChY>,<ChYTemp>,<TempUnits>,<ChYHumid>,%],<year>,<month>,<day>,<hour>,<minute>,<second>

The measure status (<MeasStatus>) is 0 if these measurement values have been read previously or 1 if these are new measurement values. If no channel number was specified, the measurements on both channels are returned (X = 1; Y = 2). Otherwise, only the measurements on the specified channel are returned. If only new readings are desired, the FORM:TDST:STAT command can be used to enable the extended format option and any readings in which the value of the first field is 0 can be ignored.

#### 8.4.2.14 **FORMat:TDST:STATe?**

Returns the time and date stamp enable for the FETC?, MEAS?, and READ? commands.

Example: FORM:TDST:STAT?

Response: 0

A value of 1 is returned if the time and date stamp is enabled. A value of 0 is returned if the time and date stamp is disabled.

#### 8.4.2.15 **FORMat:TDST:STATe <bool>**

Sets the time and date stamp enable for the FETC?, MEAS?, and READ? commands.

Example: FORM:TDST:STAT 1

The <bool> parameter turns the time and date stamp enable on (1 or ON) or off (0 or OFF).

#### 8.4.2.16 **MEASure? [<chn>]**

Returns a comma delimited list of the most recent measurements for the specified channel or for both channels.

Example: MEAS? 1

Example 1: MEAS? 1

Response: 25.576,29.30

or

Response: 1,1,25.629,C,29.32,%,2003,9,16,11,2,38

Example 2: MEAS?

Response: 25.582,29.32,26.341,37.96

or

Response: 1,1,25.629,C,29.29,%,2,0,C,0,%,2003,9,16,11,1,42

This command is equivalent to the FETC? command.

#### 8.4.2.17 **READ? [<chn>]**

Returns a comma delimited list of the most recent measurements for the specified channel or for both channels.

Example 1: READ? 1

Response: 25.576,29.30

or

Response: 1,1,25.629,C,29.32,%,2003,9,16,11,2,38

Example 2: READ?

Response: 25.582,29.32,26.341,37.96

or

Response: 1,1,25.629,C,29.29,%,2,0,C,0,%,2003,9,16,11,1,42

This command is equivalent to the FETC? command.

### 8.4.3 **Data Commands**

The data commands are used to access daily statistics or recorded measurements.

#### 8.4.3.1 **DATa:DStatistics:ENABLE?**

Returns the state of the daily statistics recording enable.

Example: DAT:DST:ENAB?

Response: 0

A value of 1 is returned if the daily statistics recording is enabled. A value of 0 is returned if the daily statistics recording is disabled.

#### 8.4.3.2 **DATa:DStatistics:ENABLE <bool>**

Sets the state of the daily statistics recording.

Example: DAT:DST:ENAB 1

The <bool> parameter turns the daily statistics recording on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.3.3 **DATa:DStatistics:HOuR? [MINIMAXIDEf]**

Returns the daily statistics recording time.

Example: DAT:DST:HOuR?

Response: 12

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### 8.4.3.4 **DATA:DStatistics:HOuR <num>|MIN|MAX|DEF**

Sets the state of the daily statistics recording time.

Example: DAT:DST:HOuR 1

The <num> parameter specifies the hour for the daily statistics recording time. Specifying MIN, MAX, or DEF parameter sets the daily statistics recording time to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10 , Password Commands).

#### 8.4.3.5 **DATA:DStatistics:REnAbLe?**

Returns the state of the daily statistics reset enable.

Example: DAT:DST:REn?

Response: 0

A value of 1 is returned if the daily statistics reset is enabled. A value of 0 is returned if the daily statistics reset is disabled.

#### 8.4.3.6 **DATA:DStatistics:REnAbLe <bool>**

Sets the state of the daily statistics reset enable.

Example: DAT:DST:REn 1

The <bool> parameter turns the daily statistics reset on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.3.7 **DATA:DStatistics:RHouR? [MIN|MAX|DEF]**

Returns the daily statistics reset time.

Example: DAT:DST:RHouR?

Response: 12

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### 8.4.3.8 **DATA:DStatistics:RHouR <num>|MIN|MAX|DEF**

Sets the daily statistics reset time.

Example: DAT:DST:RHouR 0

The <num> parameter specifies the hour for the daily statistics reset time. Specifying MIN, MAX, or DEF parameter sets the daily statistics reset time to



the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.3.9      DATa:DStatistics:RECOrd:BTIME? [<num>]**

Returns the reset time for a daily statistics set.

Example: DAT:DST:REC:BTIM?

Response: 0,0,0

The <num> parameter specifies the daily statistics record number. If none is specified then record 1 is assumed. The response is returned in the format, <hour>,<minute>,<second>.

**8.4.3.10     DATa:DStatistics:RECOrd:CLEAr**

Clears all daily statistics records.

Example: DAT:DST:REC:CLE

This command may be password protected (see Section 8.4.10, Password Commands).

**8.4.3.11     DATa:DStatistics:RECOrd:COUNt? [<MAX>]**

Returns the daily statistics record count.

Example: DAT:DST:REC:COUN?

Response: 64

Specifying the MAX parameter returns the maximum number of daily statistics records that can be held in memory.

**8.4.3.12     DATa:DStatistics:RECOrd:DATE? [<num>]**

Returns the daily statistics recording date.

Example: DAT:DST:REC:DATE?

Response: 2003,9,12

The <num> parameter specifies the daily statistics record number. If none is specified, record 1 is assumed. The response is returned in the format, <year>,<month>,<day>.

**8.4.3.13     DATa:DStatistics:RECOrd:ETIME? [<num>]**

Returns the daily statistics recording end time.

Example: DAT:DST:REC:ETIM?

Response: 23,59,59

The <num> parameter specifies the daily statistics record number. If none is specified, record 1 is assumed. The response is returned in the format, <hour>,<minute>,<second>.

**8.4.3.14      DATa:DSTatistics:RECOrd:FIND? (<year>,<month>,<day>)**

Returns the daily statistics record number for the given date.

Example: DAT:DST:REC:FIND? 2003,9,13

Response: 25

If no daily statistics were recorded for the given date a 0 is returned.

**8.4.3.15      DATa:DSTatistics:RECOrd:VALue? <num>,<chn>,<type>**

Returns the daily statistics statistical calculation.

Example: DAT:DST:REC:VAL? 1,1,1

Response: 25.559,0.733,23.097,27.203,4.106,43200,17.16,0

The <num> parameter specifies the daily statistics record number. The <chn> parameter specifies the channel (1 or 2). The <type> parameter specifies the statistic: average (1), standard deviation (2), minimum (3), maximum (4), spread (5), maximum rate (7), or alarm count (8). Temperature values are in the current temperature unit, C of F.

**8.4.3.16      DATa:RECOrd:CLEAR**

Clears all recorded measurement data.

Example: DAT:REC:CLEAR

This command is password protected. To access this command when the SYST:PASS:REC is enabled, the password must be successfully entered using the SYST:PASS:CEN <pass> command (see Section 8.4.10, Password Commands).

**8.4.3.17      DATa:RECOrd:FEED:RHUMidity<chn>?**

Returns the state of the humidity recording enable for the specified channel.

Example: DAT:REC:FEED:RHUM1?

Response: 1

The RHUMidity suffix <chn>, specifies the channel (1 or 2). A value of 1 is returned if the humidity recording for the specified channel is enabled. A value of 0 is returned if the humidity recording for the specified channel is disabled.

**8.4.3.18      DATa:RECOrd:FEED:RHUMidity<chn> <bool>**

Sets the state of the humidity recording enable for the specified channel.

Example: DAT:REC:FEED:RHUM1 0

The RHUMidity suffix <chn>, specifies the channel (1 or 2). The <bool> parameter turns the humidity recording for the specified channel on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.3.19 **DATA:RECORD:FEED:TEMPERATURE<chn>?**

Returns the state of the temperature recording enable for the specified channel.

Example: DAT:REC:FEED:TEMP1?

Response: 1

The TEMPERATURE suffix <chn>, specifies the channel (1 or 2). A value of 1 is returned if temperature recording for the specified channel is enabled. A value of 0 is returned if temperature recording for the specified channel is disabled.

#### 8.4.3.20 **DATA:RECORD:FEED:TEMPERATURE<num> <bool>**

Sets the state of the temperature recording enable for the specified channel.

Example: DAT:REC:FEED:TEMP1 0

The TEMPERATURE suffix <chn>, specifies the channel (1 or 2). The <bool> parameter turns temperature recording for the specified channel on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.3.21 **DATA:RECORD:FREE?**

Returns the recording memory usage.

Example: DAT:REC:FREE?

Response: 3282, 449070

The response indicates the number of bytes remaining and the number of bytes used, separated by a comma.

#### 8.4.3.22 **DATA:RECORD:OPEN?**

Returns the number of bytes of memory in the open set of data.

Example: DAT:REC:OPEN?

Response: 1203

This command must be preceded by the DATA:REC:OPEN command (see Section 8.4.3.23) which is used to open a set of data using a date/time range. The response to this command indicates the number of unread bytes in the date/time range specified by the last DATA:RECORD:OPEN command. If the response is 0, there are no readings stored in memory over the specified date/time range. Use the DATA:RECORD:READ? command to read the data from memory.

**8.4.3.23      DATa:RECOrd:OPEN [(*<year>*,*<month>*,*<day>*,*<hour>*,*<minute>*,*<second>*),(*<year>*,*<month>*,*<day>*,*<hour>*,*<minute>*,*<second>*)]]**

Opens a set of data in memory over the specified date/time range for reading.

Example: DAT:REC:OPEN 2003,9,15,0,0,0,2003,9,15,23,59,59

The first set of *<year>*, *<month>*, *<day>*, *<hour>*, *<minute>*, and *<second>* parameters indicate the "from" date and time of the block to open. This set of parameters is optional, but if specified, all parameters are required. If not specified, all data in memory is opened for reading. The second set of *<year>*, *<month>*, *<day>*, *<hour>*, *<minute>*, and *<second>* parameters may only be specified if the first set are specified, and indicate the "to" date and time of the block to open. This set of parameters is optional, but if specified, all parameters are required. If not specified, the "to" date and time default to the current date and time. If not specified, the actual time/date range of the data will likely include more data than requested because of the sizes of the data blocks in memory. Use this command in conjunction with the DATa:RECOrd:OPEN? and DATa:RECOrd:READ? commands to extract data from memory.

**8.4.3.24      DATa:RECOrd:READ? [*<num>*]**

Reads a block of data from memory.

Example: DAT:REC:READ?

Response: *<bytes>*,#11*<binary data>*

The *<num>* parameter is optional and defines the group size (number of bytes) to read from memory. If not specified, 256 bytes is used as the default group size. The response to this command consists of the number of bytes of data in this response (*<bytes>*), followed by a marker (#11), followed by a string of binary data (*<binary data>*). The number of bytes in the *<binary data>* portion of the response may be anywhere between 1 and *<num>* bytes (256 if *<num>* is not specified). Use the DATa:RECOrd:OPEN? command to determine the exact number of bytes in the open set of data.

**8.4.3.25      DATa:RECOrd:TIME? [MINIMAXIDEF]**

Returns the data recording period in seconds.

Example: DAT:REC:TIME?

Response: 120

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

**8.4.3.26      DATa:RECOrd:TIME *<num>*|MINIMAXIDEF**

Sets the data recording period setting in seconds.

Example: DAT:REC:TIME 60

The <num> parameter indicates the number of seconds between recording readings to memory. Specifying the MIN, MAX, or DEF parameter sets the data recording period to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

## 8.4.4 Measurement Control Commands

The measurement control commands are used to access settings related to the sensors and the measurement activities.

### 8.4.4.1 INITiate

Provided for compatibility but has no effect.

### 8.4.4.2 INITiate:CONTinuous?

Returns the continuous state, which is always 1.

Example: INIT:CONT?

Response: 1

### 8.4.4.3 SENSor:AVERage?

Returns the measurement average setting.

Example: SENS:AVER?

Response: 1

A value of 1 is returned if the measurement averaging is enabled. A value of 0 is returned if the measurement averaging is disabled.

### 8.4.4.4 SENSor:AVERage <bool>

Sets the measurement average setting.

Example: SENS:AVER 1

The <bool> parameter turns the measurement averaging on (1 or ON) or off (0 or OFF). This command may be password protected (see Section 8.4.10, Password Commands).

### 8.4.4.5 SENSor<chn>:LOCK?

Returns the sensor lock state for the given channel number.

Example: SENS1:LOCK?

Response: 1

A value of 1 is returned if the sensor lock is enabled. A value of 0 is returned if the sensor lock is disabled.

#### 8.4.4.6 **SENSor<chn>:LOCK <bool>**

Sets the sensor lock for the specified channel.

Example: SENS1:LOCK 1

The <bool> parameter turns the sensor lock on (1 or ON) or off (0 or OFF).

This command is password protected. To access this command when the SYST:PASS:SENS is enabled, the password must be successfully entered using the SYST:PASS:CEN <pass> command (see Section 8.4.10, Password Commands).

#### 8.4.4.7 **SENSor<chn>:IDENtification?**

Returns the sensor identification for the specified channel.

Example: SENS1:IDEN?

Response: "LABORATORY"

The SENSor suffix, <chn>, specifies the channel (1 or 2). The response to this command is enclosed in double quotes and indicates the current ID string for the sensor on the specified channel.

#### 8.4.4.8 **SENSor<chn>:IDENtification <str>**

Sets the sensor identification for the specified channel.

Example: SENS1:IDEN CHAMBER3

The SENSor suffix, <chn>, specifies the channel (1 or 2). The sensor identification field is set to the value indicated by <str>. The sensor identification can be up to 16 characters in length and consist of any combination of numbers, letters, underscores, and spaces.

This command may be password protected (see Section 8.4.10, Password Commands)

#### 8.4.4.9 **SENSor<chn>:STATe?**

Returns the sensor status for the specified channel.

Example: SENS1:STAT?

Response: 0

The SENSor suffix, <chn>, specifies the channel (1 or 2). The response to this command is a number that indicates the state of the sensor on the specified channel. A value of 0 indicates a sensor is connected and reading properly. The table below details all other possible values. Note that the response may indicate more than one of the following conditions.

---

Bit	Value	Definition
0	1	Sensor not attached

---

Bit	Value	Definition
1	2	Sensor read error
2	4	Sensor checksum error
3	8	Sensor calibration parameter error
4	16	Sensor calibration date error
5	32	Invalid sensor ID
6	64	Invalid sensor serial number
7	128	Sensor lock is enabled and the wrong sensor is connected

#### 8.4.4.10 TRIGger:TiMER? [MINIMAXIDEF]

Returns the measurement period setting in seconds.

Example: TRIG:TIM?

Response: 1

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### 8.4.4.11 TRIGger:TiMER <num>IMINIMAXIDEF

Sets the measurement period setting in seconds.

Example: TRIG:TIM 30

The <num> parameter can be one of the following values: 1, 2, 5, 10, 15, 30, 60, 120, 300, 600, 900, 1200, 1800 or 3600. If a value other than one listed here is used, the instrument automatically selects the nearest acceptable value that is less than the value entered. Values greater than 3600 or less than 1 are ignored and cause a -222, "Data out of range" error. Specifying the MIN, MAX, or DEF parameter sets the measurement interval timer to the minimum, maximum, or default value respectively. The \*RST command sets the measurement period to 2 seconds. This command may be password protected (see Section 8.4.10, Password Commands).

### 8.4.5 Channel Commands

The channel commands are used for switching channels on and off.

#### 8.4.5.1 ROUTe:CLoSe? <chn>

Returns the state of the specified channel.

Example: ROUT:CLoS? 1

Response: 0

The <chn> parameter specifies the channel (1 or 2). A value of 1 is returned if the specified channel is on. A value of 0 is returned if the specified channel is off.

#### 8.4.5.2 **ROUTe:CLOSE <chn>**

Switches on the specified channel.

Example: ROUT:CLOS 1

The <chn> parameter specifies the channel (1 or 2) to switch on. This command may be password protected (see Section 8.4.10, Password Commands)

#### 8.4.5.3 **ROUTe:OPEN? <chn>**

Returns the state of the specified channel.

Example: ROUT:OPEN? 1

Response: 0

The <chn> parameter specifies the channel (1 or 2). A value of 1 is returned if the specified channel is off. A value of 0 is returned if the specified channel is on.

#### 8.4.5.4 **ROUTe:OPEN <chn>**

Switches off the specified channel.

Example: ROUT:OPEN 1

The <chn> parameter specifies the channel (1 or 2) to switch off. This command may be password protected (see Section 8.4.10, Password Commands)

### 8.4.6 **Calibration Commands**

The calibration commands are used to access the sensor calibration parameters. The calibration commands are always password protected.

#### 8.4.6.1 **CALibrate<chn>:ALERT?**

Returns the state of the sensor calibration expired alert enable for the specified channel.

Example: CAL1:ALER?

Response: 0

The CALibrate suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the calibration alert is enabled for the specified channel. A value of 0 is returned if the calibration alert is disabled for the specified channel.

#### 8.4.6.2 **CALibrate<chn>:ALERT <bool>**

Sets the state of the sensor alert enable for the specified channel.



Example: CAL1:ALER 1

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The <bool> parameter turns the sensor alert on (1 or ON) or off (0 or OFF). This command is password protected (see Section 8.4.10, Password Commands).

#### 8.4.6.3 **CALibrate<chn>:DATE:CALibrate?**

Returns the sensor calibration date for the specified channel.

Example: CAL1:DATE:CAL?

Response: 2003,9,17

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The response is returned in the format, <year>,<month>,<day>.

#### 8.4.6.4 **CALibrate<chn>:DATE:CALibrate (<year>,<month>,<day>)**

Sets the sensor calibration date for the specified channel.

Example: CAL1:DATE:CAL 2003,9,17

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The <year>, <month>, and <day> parameters must all be specified. The <year> parameter is a four-digit number. The <month> parameter is a one or two-digit number (1 to 12). The <day> parameter is a one or two-digit number (1 to 31). This command is password protected (see Section 8.4.10, Password Commands).

#### 8.4.6.5 **CALibrate<chn>:DATE:DUE?**

Returns the sensor calibration due date for the specified channel.

Example: CAL1:DATE:DUE?

Response: 2004,9,17

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The response is returned in the format, <year>,<month>,<day>.

#### 8.4.6.6 **CALibrate<chn>:DATE:DUE (<year>,<month>,<day>)**

Sets the sensor calibration due date for the specified channel.

Example: CAL1:DATE:DUE 2004,9,17

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The <year>, <month>, and <day> parameters must all be specified. The <year> parameter is a four-digit number. The <month> parameter is a one or two-digit number (1 to 12). The <day> parameter is a one or two-digit number (1 to 31). This command is password protected (see Section 8.4.10, Password Commands).

#### 8.4.6.7 **CALibrate<chn>:EXPIred?**

Returns the sensor calibration expiration state for the specified channel.

Example: CAL1:EXP?

Response: 0

The CALibrate suffix, <chn>, specifies the channel (1 or 2). A value of 1 is returned if the sensor calibration has expired. A value of 0 is returned if the sensor calibration has not expired.

#### **8.4.6.8 CALibrate<chn>:PARAmeter:OFFSet<num>?**

Returns the sensor calibration offset parameter for the specified channel.

Example: CAL1:PAR:OFFS2?

Response: -0.210

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The OFFSet suffix, <num>, specifies either temperature (1) or humidity (2).

#### **8.4.6.9 CALibrate<chn>:PARAmeter:OFFSet<num> <float>**

Sets the sensor calibration offset parameter for the specified channel.

Example: CAL1:PAR:OFFS2 -0.025

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The OFFSet suffix, <num>, specifies either temperature (1) or humidity (2). The <float> parameter specifies the value for the offset parameter. This command is password protected (see Section 8.4.10, Password Commands).

#### **8.4.6.10 CALibrate<chn>:PARAmeter:SCALe<num>?**

Returns the sensor calibration scale parameter for the specified channel.

Example: CAL2:PAR:SCAL1?

Response: -0.564

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The SCALe suffix, <num>, specifies either temperature (1) or humidity (2).

#### **8.4.6.11 CALibrate<chn>:PARAmeter:SCALe<num> <float>**

Sets the sensor calibration scale parameter for the specified channel.

Example: CAL2:PAR:SCAL1 0.002

The CALibrate suffix, <chn>, specifies the channel (1 or 2). The SCALe suffix, <num>, specifies either temperature (1) or humidity (2). The <float> parameter specifies the value for the scale parameter. This command is password protected (see Section 8.4.10, Password Commands).

## 8.4.7 System Commands

The system commands are used for querying instrument identification parameters, temperature units, and for setting operating parameters to the defined default values.

### 8.4.7.1 \*IDN?

Returns the instrument identification string that indicates the manufacturer, model number, serial number, and firmware version.

Example: \*IDN?

Response: HART,1620,A39001,1.00

### 8.4.7.2 \*OPT?

Returns a list of sensor models currently connected to the inputs.

Example: \*OPT?

Response: "2626-S", "0"

The model number of the sensor connected to input 1 is reported first. The model number of the sensor connected to input 2 is reported second. If no sensor is connected to an input, the model number is reported as "0". The sensor model numbers are enclosed in quotes and separated by a comma.

### 8.4.7.3 \*RST

Sets the instrument settings to defined conditions.

Example: \*RST

The following parameters are set when this command is issued.

- Sets the measurement period to 2 seconds.
- Sets the measurement averaging on.
- Sets printing to the serial port
- Sets the temperature units to C.
- Sets the temperature resolution to 2 decimal places and the relative humidity resolution to 1 decimal place.
- Stops auto logging.
- Sets the statistical functions.

### 8.4.7.4 SYSTem:BOOT:VERSion?

Returns the boot ROM version.

Example: SYST:BOOT:VERS?

Response: 0.31

#### 8.4.7.5 **SYSTem:ERRor?**

Returns a message from the system error queue.

Example: SYST:ERR?

Response: 0,"No error"

The error queue may contain up to ten messages. The messages are reported in the order they occurred. Reading a message from the queue removes the message so the next message can be read. If more than ten errors occur before being read, the tenth error in the queue is -350,"Queue overflow" and all but the first nine errors are discarded. All errors cause the Error Bit (ERR, bit 2) for the Status BYTE Register to be set (see Section 8.4.11.7). Refer to Troubleshooting section for the error messages.

#### 8.4.7.6 **SYSTem:CODE:VERSion?**

Returns the firmware version.

Example: SYST:CODE:VERS?

Response: 1.00

#### 8.4.7.7 **SYSTem:VERSion?**

Returns the SCPI version number.

Example: SYST:VERS?

Response: 1994.0

#### 8.4.7.8 **UNIT:TEMPerature?**

Returns the system temperature unit.

Example: UNIT:TEMP?

Response: C

The response is either C for Celsius or F for Fahrenheit.

#### 8.4.7.9 **UNIT:TEMPerature <unit>**

Sets the system temperature unit.

Example: UNIT:TEMP C

The <unit> parameter must be either C or CEL for Celsius or F or FAR for Fahrenheit. The \*RST command sets the temperature unit to Celsius.

### 8.4.8 **Communication Interface Commands**

The communication interface commands are used for querying and setting serial port and IR configuration parameters.

**8.4.8.1      SYSTem:COMMunicate:IR:MODE?**

Returns the IR mode setting.

Example: SYST:COMM:IR:MODE?

Response: 0

A value of 0 is returned if the IR mode is off (IR port is disabled). A value of 1 is returned if the IR mode is in communications mode (COMM). A value of 2 is returned if the IR port is in IRDA mode (IRDA).

**8.4.8.2      SYSTem:COMMunicate:IR:MODE <num>**

Sets the IR mode setting.

Example: SYST:COMM:IR:MODE 1

The <num> parameter specifies the IR mode setting. A value of 0 turns IR mode off (IR port is disabled). A value of 1 sets the IR mode to communications mode (COMM). A value of 2 sets the IR mode to IRDA mode (IRDA).

**8.4.8.3      SYSTem:COMMunicate:SERial:BAUD? [MINIMAXIDEF]**

Returns the serial port baud rate setting.

Example: SYST:COMM:SER:BAUD?

Response: 2400

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

**8.4.8.4      SYSTem:COMMunicate:SERial:BAUD <baud>IMINIMAXIDEF**

Sets the serial port baud rate setting.

Example: SYST:COMM:SER:BAUD 9600

The <baud> parameter can be one of the following values: 1200, 2400, 4800, 9600, 19200, 38400, or 57600. Specifying the MIN, MAX or DEF parameter sets the baud rate to the minimum, maximum, or default value respectively. A baud rate of 57600 suspends echo (full duplex).

**8.4.8.5      SYSTem:COMMunicate:SERial:FDUPlEx?**

Returns the state of the serial port echo (duplex) setting.

Example: SYST:COMM:SER:FDUP?

Response: 1

A value of 1 is returned if serial port echo (duplex) is ON. A value of 0 is returned if serial port echo (duplex) is OFF.

**8.4.8.6      SYSTem:COMMunicate:SERial:FDUPlex <bool>**

Sets the serial port echo (duplex) setting.

Example: SYST:COMM:SER:FDUP 1

The <bool> parameter turns serial port echo (duplex) mode on (1 or ON) or off (0 or OFF). A baud rate of 57600 suspends echo (full duplex).

**8.4.8.7      SYSTem:COMMunicate:SERial:FEED?**

Returns the state of the serial port auto printing.

Example: SYST:COMM:SER:FEED?

Response: 0

A value of 1 is returned if serial port auto printing is enabled. A value of 0 if returned is serial port auto printing is disabled.

**8.4.8.8      SYSTem:COMMunicate:SERial:FEED <bool>**

Sets the state of the serial port auto printing.

Example: SYST:COMM:SER:FEED 1

The <bool> parameter turns serial port auto printing on (1 or ON) or off (0 or OFF). The \*RST command sets the serial port auto printing to OFF.

**8.4.8.9      SYSTem:COMMunicate:SERial:LINEfeed?**

Returns the state of the serial port linefeed setting.

Example: SYST:COMM:SER:LIN?

Response: 1

A value of 1 is returned if the serial port linefeed is enabled. A value of 0 is returned if serial port linefeed is disabled.

**8.4.8.10     SYSTem:COMMunicate:SERial:LINEfeed <bool>**

Sets the state of the serial port linefeed setting.

Example: SYST:COMM:SER:LIN 1

The <bool> parameter turns serial port linefeed on (1 or ON) or off (0 or OFF).

**8.4.8.11     SYSTem:COMMunicate:SERial:TIME? [MINIMAXIDEF]**

Returns the serial port auto printing period in seconds.

Example: SYST:COMM:SER:TIM?

Response: 10

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### 8.4.8.12 **SYSTem:COMMunicate:SERial:TIME <num>|MIN|MAX|DEF**

Sets to serial port sample period setting in seconds.

Example: SYST:COMM:SER:TIM 120

The <num> parameter can be one of the following values: 1, 2, 5, 10, 15, 30, 60, 120, 300, 600, 900, 1200, 1800, or 3600. If a value other than one listed here is used, the instrument automatically selects the nearest acceptable value that is less than the value entered. Values greater than 3600 or less than 1 are ignored. Specifying the MIN, MAX or DEF parameter sets the sample period setting to the minimum, maximum, or default value respectively.

#### 8.4.8.13 **SYSTem:KLOCKout?**

Returns the state of the button panel lockout.

Example: SYST:KLOC?

Response: 0

A value of 1 is returned if the button panel is locked out. A value of 0 is returned if the button panel is enabled (unlocked).

#### 8.4.8.14 **SYSTem:KLOCKout <bool>**

Sets the state of the button panel lockout.

Example: SYST:KLOC 1

The <bool> parameter turns the button panel lockout on (1 or ON) or off (0 or OFF)..

#### 8.4.8.15 **SYSTem:POWer:BATTery?**

Returns the current battery charge level.

Example: SYST:POW:BATT?

Response: 90

The returned value indicates the current percentage of charge remaining in the battery. The battery charge level is approximate and should be used only as a guideline.

### 8.4.9 **Date and Time Commands**

The date and time commands are used for accessing the date and time related settings.

#### 8.4.9.1 **SYSTem:DATE?**

Returns the clock date.

Example: SYST:DATE?

Response: 2003,9,1

The response is returned in the format, <year>,<month>,<day>.

#### 8.4.9.2 **SYSTem:DATE (<year>,<month>,<day>)**

Sets the clock date to the specified year, month, and day.

Example: SYST:DATE 2003,9,17

The <year>, <month>, and <day> parameters must all be supplied. The <year> parameter is a four-digit number. The <month> parameter is a one or two-digit number (1 to 12). The <day> parameter is a one or two-digit number (1 to 31). This command may be password protected (see Section 8.4.10, Password Commands)

#### 8.4.9.3 **SYSTem:DATE:FORMat? [MINIMAXIDEF]**

Returns the date format used for the display.

Example: SYST:DATE:FORM?

Response: 1

Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively. Section 8.4.13, Date and Time Formats, shows the supported date formats.

#### 8.4.9.4 **SYSTem:DATE:FORMat <num>IMINIMAXIDEF**

Sets the date format used for the display.

Example: SYST:DATE:FORM 0

The <num> parameter can be any of the values indicated in Section 8.4.13, Date and Time Formats. Specifying the MIN, MAX or DEF parameter sets the date format to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

#### 8.4.9.5 **SYSTem:DECimal:FORMat? [MINIMAXIDEF]**

Returns the decimal format used for the display.

Example: SYST:DEC:FORM?

Response: 1

A value of 0 is returned if the decimal format is using a period ('.'). A value of 1 is returned if the decimal format is using a comma (','),. Specifying the MIN,



MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### 8.4.9.6 **SYSTem:DECimal:FORMat <num>IMINIMAXIDeF**

Sets the decimal format used for the display.

Example: SYST:DEC:FORM 0

The <num> parameter can be 0 (‘.’) or 1 (‘,’). If a value other than one listed here is used, the instrument automatically selects the nearest acceptable value that is less than the value entered. Specifying the MIN, MAX or DEF parameter sets the decimal format to the minimum, maximum, or default value respectively.

#### 8.4.9.7 **SYSTem:TIME?**

Returns the clock time.

Example: SYST:TIME?

Response: 11,43,23

The response is returned in the format, <hour>,<minute>,<second>.

**Note:** The system time is always returned using 24-hour format regardless of the clock time format setting.

#### 8.4.9.8 **SYSTem:TIME (<hour>,<minute>,<second>)**

Sets the clock time to the specified hour, minute, and second.

Example: SYST:TIME 11,43,28

The <hour>, <minute>, and <second> parameters must all be specified. The <hour> parameter is a one or two-digit number (0 to 23). The <minute> parameter is a one or two-digit number (0 to 59). The <second> parameter is a one or two-digit number (0 to 59). This command may be password protected (see Section 8.4.10, Password Commands).

**Note:** The system time is always set using 24-hour format regardless of the clock time setting.

#### 8.4.9.9 **SYSTem:TIME:DAYLight? [MINIMAXIDeF]**

Returns the automatic daylight saving adjustment setting.

Example: SYST:TIME:DAYL?

Response: 1

A value of 0 is returned if the daylight saving adjustment is disabled. A value of 1 is returned if the daylight saving adjustment is set to North America (N AMER). A value of 2 is returned if the daylight saving adjustment is set to Eu-

rope (EUROPE). Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### **8.4.9.10      SYSTem:TIME:DAYLight <num>IMINIMAXIDEF**

Sets the automatic daylight saving adjustment setting.

Example: SYST:TIME:DAYL 1

The <num> parameter sets the automatic daylight saving adjustment setting to off (0), North America (1), or Europe (2). This command may be password protected (see Section 8.4.10, Password Commands).

#### **8.4.9.11      SYSTem:TIME:FORMat? [MINIMAXIDEF]**

Returns the time format used for the display.

Example: SYST:TIME:FORM?

Response: 1

A value of 0 is returned if the time format is set to 12 hour. A value of 1 is returned if the time format is set to 24 hour. Specifying the MIN, MAX, or DEF parameter returns the minimum, maximum, or default value respectively.

#### **8.4.9.12      SYSTem:TIME:FORMat <num>IMINIMAXIDEF**

Sets the time format.

Example: SYST:TIME:FORM 0

The <num> parameter can be 0 (12 HR) or 1 (24 HR). Specifying the MIN, MAX or DEF parameter sets the time format to the minimum, maximum, or default value respectively. This command may be password protected (see Section 8.4.10, Password Commands).

### **8.4.10      Password Commands**

The password commands are used for enabling and disabling the password-protected commands, for querying and setting the password-protected state, and for setting a new password. These commands are always password protected.

#### **8.4.10.1      SYSTem:PASSword:ALARm?**

Returns the state of the alarm settings password protection.

Example: SYST:PASS:ALAR?

Response: 0

A value of 1 is returned if the alarm settings are password protected; otherwise a value of 0 is returned.

**8.4.10.2      SYSTem:PASSword:ALARm <bool>**

Sets the state of the alarm settings password.

Example: SYST:PASS:ALAR 1

The <bool> parameter turns the alarm settings password protection on (1 or ON) or off (0 or OFF). This command is password protected. Commands protected with this setting are any of the ALAR... commands

**8.4.10.3      SYSTem:PASSword:CDISable**

Disables access to password-protected settings.

Example: SYST:PASS:CDIS

Sending this command prevents the user from changing any password-protected settings.

**8.4.10.4      SYSTem:PASSword:CENable <pass>**

Enables access to password protected settings.

Example: SYST:PASS:CEN 1234

The <pass> parameter must match the current system password. This command must be sent to allow the user to change and password-protected settings. After sending this command, use the SYST:PASS:CEN:STAT? command to verify access.

**8.4.10.5      SYSTem:PASSword:CENable:STATe?**

Returns the current password protection state.

Example: SYST:PASS:CEN:STAT?

Response: 0

The response is either 0 (disabled) or 1 (enabled). A response of 0 indicates password-protected settings cannot be changed. A response of 1 indicates the password was successfully entered and password-protected settings can be changed.

**8.4.10.6      SYSTem:PASSword:NEW <pass>IDEF**

Sets the current system password to a new password.

Example: SYST:PASS:NEW 1212

The <pass> parameter must be a 4-digit number (0000 to 9999). Specifying the DEF parameter resets the password to the default password (1620). This command is password protected.



*Note: If the password is forgotten, the thermo-hygrometer must be returned to an Authorized Service Center to have the password restored.*

#### **8.4.10.7      SYSTem:PASSword:RECORD?**

Returns the state of data recording settings password-protection.

Example: SYST:PASS:REC?

Response: 0

A value of 1 is returned if data recording password settings are password-protected; otherwise a value of 0 is returned.

#### **8.4.10.8      SYSTem:PASSword:RECORD <bool>**

Sets the state of data recording settings password-protection.

Example: SYST:PASS:REC 1

The <bool> parameter turns the data recording password-protection on (1 or ON) or off (0 or OFF). This command is password protected. Commands protected with this setting are: DATA:REC:CLE, DATA:REC:FEED:RHUM, DATA:REC:FEED:TEMP, and DATA:REC:TIM.

#### **8.4.10.9      SYSTem:PASSword:SENSOR?**

Returns the state of the sensor settings password-protection.

Example: SYST:PASS:SENS?

Response: 0

A value of 1 is returned if the sensor settings password-protection is enabled. Otherwise, a value of 0 is returned.

#### **8.4.10.10     SYSTem:PASSword:SENSOR <bool>**

Sets the state of the sensor settings password-protection.

Example: SYST:PASS:SENS 1

The <bool> parameter turns the sensor settings password-protection on (1 or ON) or off (0 or OFF). This command is password protected. Commands protected with this setting are: CALC:PAR:DATE:TIME, CALC:PAR:RES, ROUT:CLOS, ROUT:OPEN, SENS:AVER, SENS:IDEN, SENS:LOCK, and TRIG:TIME.

#### **8.4.10.11     SYSTem:PASSword:STATistics?**

Returns the state of the statistics settings password-protection.

Example: SYST:PASS:STAT?

Response: 0

A value of 1 is returned if the statistics settings password-protection is enabled, otherwise, a value of 0 is returned.

**8.4.10.12      **SYSTem:PASSword:STATistics <bool>****

Sets the state of the statistics settings password-protection.

Example: SYST:PASS:STAT 1

The <bool> parameter turns the statistics settings password-protection on (1 or ON) or off (0 or OFF). This command is password protected. Commands protected with this setting are: CALC:AVER:CLE and DATA:DST... ,

**8.4.10.13      **SYSTem:PASSword:TIME?****

Returns the state of the date and time password-protection.

Example: SYST:PASS:TIME?

Response: 0

A value of 1 is returned if the date and time password-protection is enabled, otherwise, a value of 0 is returned.

**8.4.10.14      **SYSTem:PASSword:TIME <bool>****

Sets the state of the date and time password-protection.

Example: SYST:PASS:TIME 1

The <bool> parameter turns the date and time password-protection on (1 or ON) or off (0 or OFF). This command is password protected. Commands protected with this setting are: SYST:DATE, SYST:DATE:FORM, SYST:TIME, SYST:TIME:DAYL, and SYST:TIME:FORM.

**8.4.11          **Status Commands****

The status commands are used for querying and setting the state of the instrument registers. For details on the operation of the status registers refer to the SCPI standards.

**8.4.11.1        **\*CLS****

Clears the status registers.

Example: \*CLS

This clears the error queue, Event Status Register, Operation Status Register, Questionable Status Register, Alarm Status Register, and Measurement status Register.

**8.4.11.2        **\*ESE?****

Returns the Event Status Enable Register. (See \*ESE <num> command below.)

Example: \*ESE?

Response: 189

### 8.4.11.3 \*ESE <num>IMINIMAXIDEF

This command sets the Event Status Enable Register. This register determines which event bits of the Event Status Register affect the ESB Event Summary-Message Bit of the Status Byte Register. If any event bit of the Event Status Register is set (1) while its corresponding mask bit of the Event Status Enable Register is set, the ESB Event Summary-Message Bit of the Status Byte Register will be set. The value of the <numeric\_value> parameter is a number from 0 to 255 that is the sum of the binary-weighted values of each mask bit. The Event Status Register is described in Section below. The following example causes the ESB bit in the Status Byte Register to be set whenever a command error or execution error occurs.

Example: \*ESE 32

### 8.4.11.4 \*ESR?

This query command returns the Event Status Register. It also clears the Event Status Register and the ESB bit of the Status Byte Register. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

- 0 Operation complete (OPC). Execution of the last command is completed.
- 1 Request control (RQC). No function for this instrument.
- 2 Query error (QYE). An attempt has been made to read data when none is available or pending.
- 3 Device dependent error (DDE). A hardware error condition occurred.
- 4 Execution error (EXE). An invalid parameter for a command has been received or the command could not be executed under existing conditions.
- 5 Command error (CME). An unrecognized command or a command with improper syntax has been received.
- 6 User request (URQ). No function for this instrument.
- 7 Power on (PON). Always set after the power is switched on.

The ESB bit of the Status Byte Register (Section 8.4.11.7) is set (1) whenever any bit of the Event Status Register is set and its corresponding mask bit in the Event Status Enable Register (Section 8.4.11.2) is set. The Event Status Register is cleared when queried with the ESR? command or when the \*CLS command is received. The response in the following example would be given after an invalid command is received by the 1620 and no other error occurred.

Example command: \*ESR?

Example response: 32

#### 8.4.11.5 \*SRE?

Returns the Service Request Enable Register. (See \*SRE <num> command below.)

Example: \*SRE?

Response: 0

#### 8.4.11.6 \*SRE <num>IMINIMAXIDEF

This command sets the Service Request Enable Register. This register determines which event bits of the Status Byte Register affect the MSS Master Summary Status message bit of the Status Byte Register. If any event bit of the Status Byte Register is set (1) while its corresponding mask bit of the Service Request Enable Register is set, the MSS Master Summary Status message bit of the Status Byte Register will be set and a service request generated. The value of the <numeric\_value> parameter is a number from 0 to 255 that is the sum of the binary-weighted values of each mask bit. The Status Byte Register is described in section 8.4.11.7 below. The following example causes the MSS bit in the Status Byte Register to be set and a service request to be generated whenever the ESB bit of the Status Byte Register is set.

Example command: \*SRE 32

#### 8.4.11.7 \*STB?

This query command returns the Status Byte Register. Reading this register does not affect it or the output queue. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

- Bit 0     Measurement Status Bit. Indicates that a bit in the Measurement Status Event Register is set and its corresponding mask bit in the Measurement Status Enable Register is set. It is cleared when the Measurement Status Event Register is read.
- Bit 1     Alarm Status Bit. Indicates that a bit in the Alarm Status Event Register is set and its corresponding mask bit in the Alarm Status Enable Register is set. It is cleared when the Alarm Status Event Register is read.
- Bit 2     Error Bit. Indicates there is an error in the error queue.
- Bit 3     Questionable Status Bit. Indicates that a bit in the Questionable Status Event Register is set and its corresponding mask bit in the Questionable Status Enable Register is set. It is cleared when the Questionable Status Even Register is read.
- Bit 4     Message Available Bit. Indicates that data is present in the output queue.
- Bit 5     Standard Event Bit. Indicates that a bit in the Standard Event Register is set and its corresponding mask bit in the Standard Event Enable Register is set. It is cleared when the Standard Event Register is read.
- Bit 6     Master Summary Bit. Indicates that any other bit in the Status Byte Register is set and its corresponding mask bit in the Service Request Enable Register is set.

Bit 7      Operation Status Bit. Indicates that a bit in the Operation Status Event Register is set and its corresponding mask bit in the Operation Status Enable Register is set. It is cleared when the Operation Status Event Register is read.

The Status Byte Register can not be set or cleared directly but always reflects the current state of the reported conditions.

Example: \*STB?

Response: 4

#### 8.4.11.8      **\*TST? [<bool>]**

Reports the results of the self test.

Example: \*TST?

Response: 1,1,0,2,0,0,0,0,0

This <bool> parameter is optional. If it is not given or if it is 1 a new self-test is performed and the results returned (the self-test can take several seconds to complete). If the parameter is 0, the results of the power-on self-test are reported. Ten results are reported in comma-separated numbers between 0 and 65535. 0 indicates no error or abnormal condition. Non-zero numbers, when converted to binary values, give specific information on the type of error depending on which bits are set. The meaning of the results are as follows:

1st number: sensor status

0: sensors are attached and operating properly

bit 0 is 1: channel 1 sensor is unattached, locked out, or not operating properly

bit 1 is 1: channel 2 sensor is unattached, locked out, or not operating properly

2nd number: channel 1 sensor test

0: no error

bit 0 is 1: sensor unattached

bit 1 is 1: sensor memory read failure

bit 2 is 1: sensor parameter checksum error

bit 3 is 1: sensor calibration parameters out of range

bit 4 is 1: sensor calibration date is invalid

bit 5 is 1: sensor identification is invalid

bit 6 is 1: sensor version number is incompatible

bit 7 is 1: sensor is locked out



3rd number: channel 2 sensor test (see channel 1 sensor test)

4th number: sensor calibration expired

0: sensor calibration has not yet expired

bit 0 is 1: channel 1 sensor calibration has expired

bit 1 is 1: channel 2 sensor calibration has expired

5th number: clock status

0: operating properly

bit 0 is 1: time/date is invalid

bit 1 is 1: clock is not operating

6th number: serial port status

0: operating properly

bit 0 is 1: failure

7th number: IR port status

0: operating properly

bit 0 is 1: failure

8th number: data card socket status

0: operating properly

bit 0 is 1: no data card is inserted

bit 1 is 1: an invalid or improperly formatted data card is inserted

bit 4 is 1: controller read error

bit 5 is 1: controller write error

bit 6 is 1: invalid controller

9th number: battery monitor test

0: no error

bit 15 is 1: error

10th number: button status (power-on test only)

0: no button press detected

bit 0 is 1: EXIT pressed during power on

bit 1 is 1: <up> pressed during power on

bit 2 is 1: <down> pressed during power on

bit 3 is 1: <right> pressed during power on

bit 4 is 1: <left> pressed during power on

bit 5 is 1: ENTER pressed during power on

#### 8.4.11.9 **STATus:ALARm?**

This command reads and clears the Alarm Status Event Register. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

0:	no alarm
Bit 0	Channel 1 temperature alarm bit.
Bit 1	Channel 1 humidity alarm bit.
Bit 2	Channel 2 temperature alarm bit.
Bit 3	Channel 2 humidity alarm bit.
Bit 4	Low battery alarm bit.
Bit 5	Power failure alarm bit.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:ALAR?

Response: 32

#### 8.4.11.10 **STATus:ALARm:CONDition?**

This command reads the Alarm Status Condition Register. Reading this register does not affect it. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

0:	no alarm
Bit 0	Channel 1 temperature alarm bit.
Bit 1	Channel 1 humidity alarm bit.
Bit 2	Channel 2 temperature alarm bit.
Bit 3	Channel 2 humidity alarm bit.
Bit 4	Low battery alarm bit.
Bit 5	Power failure alarm bit.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:ALAR?

Response: 32

#### 8.4.11.11 **STATus:ALARm:ENABle?**

This command returns the Alarm Status Enable Register (see STATus:ALARm:ENABle <num> command below).

Example: STAT:ALAR:ENAB?

Response: 32

#### 8.4.11.12 **STATus:ALARm:ENABle <num>IMINIMAXIDEF**

This command sets the Alarm Status Enable Register. This register determines which event bits of the Alarm Status Event Register affect the Alarm Status Bit of the Status Byte Register. If any bit in the Alarm Status Event Register is set (1) while its corresponding mask bit in the Alarm Status Enable Register is set, the Alarm Status Bit in the Status Byte Register will be set. The value of the <num> parameter is a number from 0 to 63 that is the sum of the binary-weighted values of each mask bit. The Alarm Status Event Register is described in Section 8.4.11.9, STATus:ALARm?. The following example causes the Alarm Status Bit in the Status Byte Register to be set when a power failure alarm has been triggered.

Example: STAT:ALAR:ENAB 32

Response: 32

#### 8.4.11.13 **STATus:MEASure?**

This command reads and clears the Measure Status Event Register. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

Bit 0	Channel 1 temperature measure bit.
Bit 1	Channel 1 humidity measure bit.
Bit 2	Channel 2 temperature measure bit.
Bit 3	Channel 2 humidity measure bit.
Bit 4	Channel 1 sensor attached/detached.
Bit 5	Channel 2 sensor attached/detached.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:MEAS?

Response: 3

#### 8.4.11.14 **STATus:MEASure:CONDition?**

This command reads the Measurement Status Condition Register. Reading this register does not affect it. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

Bit 0	Channel 1 temperature measure bit.
Bit 1	Channel 1 humidity measure bit.
Bit 2	Channel 2 temperature measure bit.
Bit 3	Channel 2 humidity measure bit.
Bit 4	Channel 1 sensor attached.
Bit 5	Channel 2 sensor attached.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:MEAS:COND?

Response: 15

#### 8.4.11.15 **STATus:MEASure:ENABLE?**

This command returns the Measurement Status Enable Register (see STATus:MEASure:ENABLE <num> command below).

Example: STAT:MEAS:ENAB?

Response: 15

#### 8.4.11.16 **STATus:MEASure:ENABLE <num>IMINIMAXIDEF**

This command sets the Measure Status Enable Register. This register determines which event bits of the Measure Status Event Register affect the Measure Status Bit of the Status Byte Register. If any bit in the Measure Status Event Register is set (1) while its corresponding mask bit in the Measure Status Enable Register is set, the Measure Status Bit in the Status Byte Register will be set. The value of the <num> parameter is a number from 0 to 15 that is the sum of the binary-weighted values of each mask bit. The Measure Status Event Register is described in Section 8.4.11.13, STATus:MEASure?. The following example causes the Measure Status Bit in the Status Byte Register to be set when measurements on both channels have been completed.

Example: STAT:MEAS:ENAB 15

Response: 15

**8.4.11.17 STATus:OPERation?**

This command reads and clears the Operation Status Event Register. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

0:	no measurement
Bit 0	Not used.
Bit 1	Not used.
Bit 2	Not used.
Bit 3	Not used.
Bit 4	Measurement Complete bit.
Bit 5	Not used.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:OPER?

Response: 16

**8.4.11.18 STATus:OPERation:CONDition?**

This command reads the Operation Status Condition Register. Reading this register does not affect it. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

0:	no operation
Bit 0	Not used.
Bit 1	Not used.
Bit 2	Not used.
Bit 3	Not used.
Bit 4	Measurement complete bit.
Bit 5	Not used.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:OPER:COND?

Response: 16

#### 8.4.11.19 **STATus:OPERation:ENABle?**

This command returns the Operation Status Enable Register (see STATus:OPERation:ENABle <num> command below).

Example: STAT:OPER:ENAB?

Response: 16

#### 8.4.11.20 **STATus:OPERation:ENABle <num>IMINIMAXIDEF**

This command sets the Operation Status Enable Register. This register determines which event bits of the Operation Status Event Register affect the Operation Status Bit of the Status Byte Register. If any bit in the Operation Status Event Register is set (1) while its corresponding mask bit in the Operation Status Enable Register is set, the Operation Status Bit in the Status Byte Register will be set. The value of the <num> parameter is a number from 0 to 15 that is the sum of the binary-weighted values of each mask bit. The Operation Status Event Register is described in Section 8.4.11.13, STATus:OPERation?. The following example causes the Operation Status Bit in the Status Byte Register to be set when measurements on both channels have been completed.

Example: STAT:OPER:ENAB 16

Response: 16

#### 8.4.11.21 **STATus:QUEStionable?**

This command reads and clears the Questionable Status Event Register. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

0:	no problem
Bit 0	Not used.
Bit 1	Not used.
Bit 2	Not used.
Bit 3	Not used.
Bit 4	Measurement Invalid bit.
Bit 5	Not used.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:QUES?

Response: 16

**8.4.11.22 STATus:QUEStionable:CONDition?**

This command reads the Questionable Status Condition Register. Reading this register does not affect it. The value returned indicates the condition of each of the eight bits of the register by adding the binary-weighted values of each bit. The meaning of each bit, when set (1), is as follows where 0 is the least significant and 7 is the most significant:

0:	no problem
Bit 0	Not used.
Bit 1	Not used.
Bit 2	Not used.
Bit 3	Not used.
Bit 4	Measurement invalid bit.
Bit 5	Not used.
Bit 6	Not used.
Bit 7	Not used.

Example: STAT:QUES:COND?

Response: 16

**8.4.11.23 STATus:QUEStionable:ENABLE?**

This command returns the Questionable Status Enable Register (see STATus:QUEStionable:ENABle <num> command below).

Example: STAT:QUES:ENAB?

Response: 16

**8.4.11.24 STATus:QUEStionable:ENABLE <num>IMINIMAXIDEF**

This command sets the Questionable Status Enable Register. This register determines which event bits of the Questionable Status Event Register affect the Questionable Status Bit of the Status Byte Register. If any bit in the Questionable Status Event Register is set (1) while its corresponding mask bit in the Questionable Status Enable Register is set, the Questionable Status Bit in the Status Byte Register will be set. The value of the <num> parameter is a number from 0 to 15 that is the sum of the binary-weighted values of each mask bit. The Questionable Status Event Register is described in Section 8.4.11.21, STATus:QUEStionable?. The following example causes the Questionable Status Bit in the Status Byte Register to be set when a measurement is invalid.

Example: STAT:QUES:ENAB 16

Response: 16

### 8.4.12 Port Numbers

The following table lists the communication ports and their number setting.

Number	Port
0	Serial (default)
1	IR

### 8.4.13 Date and Time Formats

The following tables list the acceptable date and time formats and their number setting.

Date Formats	
Number	Format
0	MM-DD-YY
1	MM-DD-YYYY
2	DD/MM/YY
3	DD/MM/YYYY

Time Formats	
Number	Format
0	H:MM:SSAM/PM (12-hour format)
1	HH:MM:SS (24-hour format)



## 9 Calibration Procedure

2626-x sensors used with the thermo-hygrometer should be periodically calibrated to ensure accuracy. A six-month calibration interval for the first year, and one-year thereafter, is recommended. The thermo-hygrometer display unit does not require calibration, and the sensor can be sent to a qualified service center for calibration without the thermo-hygrometer display unit. Contact a Hart Scientific Authorized Service Center for return instructions prior to returning the probe for calibration. Ensure that the probe is packaged adequately to ensure safe transport. It is recommended that you acquire and use the optional probe case for transport.

For those who wish to perform their own calibration, the calibration procedure is outlined as follows.

### 9.1 Equipment

- Temperature/humidity chamber to use as a relative humidity reference and a stable-temperature environment (0.37% RH uncertainty or better is recommended)
- PRT and associated readout to use as the reference thermometer (0.03°C uncertainty or better is recommended)
- 1620 Thermo-Hygrometer to use to read the 2626-x sensor
- An extension cable to connect with the 2626-x sensor placed inside the temperature/humidity chamber

### 9.2 Preparation

Allow the 2626-x sensor to “dry out” in air with relative humidity between 20 and 50% and temperature between 16 and 30°C for 24 hours before calibration. Place the 2626-x sensor inside the temperature/humidity chamber, near the center, attached to an extension cable that runs to the 1620 outside the chamber. Place the PRT inside the chamber with the tip close to the tip of the 2626-x sensor. Run the probe cable to the outside of the chamber and connect it to the PRT readout.

### 9.3 Calibration Points

Each measurement parameter, both temperature and relative humidity, is calibrated at three points throughout its range with the other parameter held constant at the center of its range. The following tables list the calibration points for the two sensor models and for both measurement parameters.

#### 2626-S Temperature Calibration Points

Temperature	at Relative Humidity
15°C	45%
25°C	45%
35°C	45%

#### 2626-S Relative Humidity Calibration Points

Relative Humidity	at Temperature
20%	25°C
45%	25°C
70%	25°C

#### 2626-H Temperature Calibration Points

Temperature	at Relative Humidity
16°C	45%
20°C	45%
24°C	45%

#### 2626-H Relative Humidity Calibration Points

Relative Humidity	at Temperature
20%	20°C
45%	20°C
70%	20°C

## 9.4 Temperature and Humidity Measurement Errors

The temperature and humidity measurement errors for the sensor are obtained at each of the calibration points. This test is performed to obtain as found data for the calibration report, if necessary, and adjustment data, and then repeated after adjustments are made to obtain as left data for the calibration report. Temperature measurements are in degrees Celsius. For each calibration point  $T_n$  and  $RH_n$ , do the following:

1. Set the temperature and humidity set-point.
2. Allow four hours for settling after the temperature and humidity set-points are reached before collecting data.

3. Measure the temperature with the 2626 probe and compare it with the temperature read from the reference thermometer in the chamber to obtain the temperature measurement error:

$$Error(T_n) = T_{2626}(T_n) - T_{reference}(T_n)$$

or

Measure the relative humidity using the 2626 probe and compare it with the relative humidity read from the chamber to obtain the humidity measurement error:

$$RH_{error}(RH_n) = RH_{2626}(RH_n) - RH_{chamber}(RH_n)$$

## 9.5 Temperature and Humidity Adjustments

Adjustments to the 2626-x calibration parameters are required when measurement errors are excessive or outside of the specification. The calibration parameters can be accessed using the SENSOR CAL function in the CHANNEL menu. The password is required to change the parameters. Calculation of new calibration parameters requires that the measurement errors first be obtained according to the procedure above in section **Temperature and Humidity Measurement Errors**. After the **Temperature and Humidity Adjustments** procedure is completed, perform the **Temperature and Humidity Measurement Errors** procedure again to verify the calibration.

1. Calculate the adjustment  $\Delta TSL$  to the temperature slope parameter TSL, and the new temperature slope parameter:

$$\Delta TSL = -10^\circ\text{C} \times \frac{[Error(T_3) - Error(T_1)]}{(T_3 - T_1)}$$

$$TSL' = TSL + \Delta TSL$$

2. Calculate the slope-adjusted temperature errors:

$$Error(T_n)' = Error(T_n) + \Delta TSL \times \frac{(T_n - 25^\circ\text{C})}{10^\circ\text{C}}$$

3. Calculate the median slope-adjusted temperature error, the adjustment  $\Delta TOS$  to the temperature offset parameter TOS, and the new temperature offset parameter:

$$T_{median}' = \frac{Error(T_3)' + Error(T_2)'}{2}$$

$$\Delta TOS = -T_{median}'$$

$$TOS' = TOS + \Delta TOS$$

4. Calculate the adjustment  $\Delta HSL$  to the humidity slope parameter HSL, and the new humidity slope parameter:

$$\Delta HSL = -25\% \times \frac{[RHerror(RH3) - RHerror(RH1)]}{(RH3 - RH1)}$$

$$HSL' = HSL + \Delta HSL$$

5. Calculate the slope-adjusted humidity errors:

$$RHerror(RHn)' = RHerror(RHn) + \Delta HSL \times \frac{(RHn - 45\%)}{25\%}$$

6. Calculate the median slope-adjusted humidity error, the adjustment  $\Delta HOS$  to the humidity offset parameter HOS, and the new humidity offset parameter:

$$RHmedian' = \frac{[RHerror(RH3)' + RHerror(RH2)']}{2}$$

$$\Delta HOS = -RHmedian'$$

$$HOS' = HOS + \Delta HOS$$

7. Enter the new values for TOS (TOS'), TSL (TSL'), HOS (HOS'), and HSL (HSL') into the thermo-hygrometer. Also set the DATE to the current date and set the DUE date for the next calibration. If a power-on warning message is desired when the DUE date expires, set ALERT to ON. Do not change the serial number. Press ENTER when prompted to write the new values to the sensor.

## 10 Maintenance

- The calibration instrument has been designed ease of operation and simplicity of maintenance as the central theme in the product development. Therefore, with proper care the instrument should require very little maintenance. Avoid operating the instrument in oily, wet, dirty, or dusty environments.
- If the outside of the instrument becomes soiled, it may be wiped clean with a damp cloth and mild detergent. Do not use harsh chemicals on the surface, which may damage the LCD or the plastic front panel.
- If a hazardous material is spilt on or inside the equipment, the user is responsible for taking the appropriate decontamination steps as outlined by the national safety council with respect to the material.
- Before using any cleaning or decontamination method except those recommended by Hart, users should check with an Authorized Hart Scientific Service Center to be sure that the proposed method will not damage the equipment.
- If the AC adapter becomes damaged, have it replaced immediately. Never disassemble the AC adapter or attempt to repair it.
- If the instrument is used in a manner not in accordance with the equipment design, the operation of the thermo-hygrometer may be impaired or safety hazards may arise.
- Periodic calibration of the sensors at regular intervals is required to ensure that it continues to measure with proper accuracy. Calibration should only be performed by qualified authorized personnel.

# 11 Troubleshooting

In case you run into difficulty while operating the thermo-hygrometer, this section provides some suggestions that may help you solve the problem. Below are several situations that may arise followed by possible causes and suggested actions you might take.

## 11.1 Troubleshooting

The following sections list possible situations, their causes, and suggested actions.

### 11.1.1 Incorrect temperature or humidity reading

While attempting to measure temperature or humidity, the display shows an incorrect value or no value at all ( . . . . . ).

- Check to see if the sensor is properly seated in the correct sockets.
- If the actual temperature is too low or too high there may be a problem with the sensor.
- The measure period may be set to a long interval. Check the measure period setting.
- Refer to Section 6.12, Sensors, for information on proper sensor handling and situations that can affect accuracy.

### 11.1.2 Missing or Scattered Graph Data

If a graph is empty or consists of only scattered points, it may be due to data recording not being enabled or the recording period set too large. See Section 7.3.1.1, Record Setting.

### 11.1.3 Blank screen

The screen appears blank when switched on.

Ensure the power adapter is attached properly and the power is switched on.

This problem can also be caused by improper adjustment of the contrast. After the power is switched on allow the thermo-hygrometer at least one minute to complete its self-test and power on sequence. Then, try to adjust the contrast using the ▲▼ buttons.

### 11.1.4 Error message at power up

The thermo-hygrometer reports an error during the power up self-test.

The display will remain inoperable during a power outage to preserve battery life. Measurements will continue to be recorded as long as the battery has a charge.

On power up the thermo-hygrometer performs a series of self-tests to check the operation of all its components and each of the sensors. The results of the self-tests are reported on the screen. Normally, all tests report 'OK'. Below is a table of error messages and recommended actions to correct the error. Often these errors can be corrected by completing the actions listed. A failure of one or more component causes error messages to be reported.

Contact a Hart Scientific Authorized Service Center for assistance (see Section 1.3).

### 11.1.5 Self-Test Error Messages

SYSTEMS: SERIAL PORT FAILURE	Cycle the power. Contact an Authorized Service Center.
SYSTEMS: IR PORT FAILURE	Cycle the power. Contact an Authorized Service Center.
SYSTEMS: DATA CARD FAILURE	Cycle the power. Contact an Authorized Service Center.
BATTERY: FAILURE	Cycle the power. Contact an Authorized Service Center.
BATTERY: NOT INSTALLED	Check that a battery is properly installed. Replace the battery.
CLOCK: INVALID TIME	Set the time/date.
MEMORY DATA: EMPTY	Contact an Authorized Service Center.
MEMORY DATA: QUESTIONABLE	Cycle the power. Contact an Authorized Service Center.
SENSOR <n>: NOT ATTACHED	Check that the sensors are properly inserted into their sockets or attached with an undamaged extension cable.
SENSOR <n>: LOCKED	Attach the correct sensor or, if a new sensor is to be used, unlock the sensor using CHANNEL-SENSOR LOCK.
SENSOR <n>: CALIBRATION INVALID	Cycle the power. Try a different sensor. Contact an Authorized Service Center.
SENSOR <n>: CALIBRATION EXPIRED	Contact an Authorized Service Center to have the sensor recalibrated. Check the time/date to make sure it is correct.
POWER DOWN: CALCULATION ERROR	Contact an Authorized Service Center.
POWER DOWN: SOFTWARE RESET	Contact an Authorized Service Center.
POWER DOWN: HARDWARE RESET	Contact an Authorized Service Center.
BUTTONS: <button name>...	Check to make sure the buttons are not being pressed. Cycle the power. Contact an Authorized Service Center.

### 11.1.6 Start-up Error Messages

Error messages may appear after the self-test. If this happens, contact a Hart Scientific Authorized Service Center for assistance.

### 11.1.7 Error Messages during Normal Operation

If an error (e.g. math error) occurs during normal operation, the DewK automatically goes into a safe state, switching off the offending sensor. The internal

memory of the DewK is cleared of the sensor's information to try to prevent the error from recurring.

NOTE: The ID and calibration parameters stored in the sensor should not be affected. Only the memory of the DewK is cleared, not the memory of the sensor.

An error message and important troubleshooting information will be displayed. Record all error messages and information displayed. This information will help the Service Center in troubleshooting and solving the problem that has occurred. Without this information, it can be difficult to find the cause of the error.

Before contacting an Authorized Service Center for assistance, the following steps can be followed to restore normal operation of the DewK:

1. Disconnect the sensors.
2. Switch the DewK power off; wait 10 seconds.
3. Switch the DewK power on and wait until it is ready.
4. Connect the sensors.
5. Enable measuring on the sensor if it was disabled.
6. Check the ID and calibration parameters of the sensors.

## 11.2 Downloading Recorded Data

The thermo-hygrometer stores up to 400,000 readings in its memory. These readings can be downloaded to a computer using the RS-232 serial port.

The following steps should be followed to download logged data using the serial port:

1. Connect the thermo-hygrometer to a COM port on the computer using the serial cable.
2. Run a terminal program such as Windows(r) Terminal or HyperTerminal(r).
  - a) Set up the terminal program to use the correct COM port and baud rate. Configure the communication settings to use 8 data bits, 1 stop bit, no parity and no flow control.
  - b) If you want to save the downloaded data to a file, configure your terminal program to capture the incoming text and save it to a text file. Refer to your terminal program's documentation for details on how to do this.
3. Begin downloading the data.
  - a) Use the menu function DATA RECORD - DATA PRINT to begin sending recorded data using text format. See Section 7.3.1.3, Data Print.



- b) The thermo-hygrometer should immediately begin sending the data. If no readings have been stored, the thermo-hygrometer will not respond to these commands.
- 4. If the terminal program was set to capture the incoming data to a file, wait until no more data is being received, then stop capturing.

The recorded data can also be transferred using the IR port with LogWare III software, or written to a file with a data card (see Section 7.3.3.1, File Write).

## 11.3 Placement of IR Dongle for Transfer of Data

The thermo-hygrometer can be used with the LogWare III software to collect data via the IR interface. Place your device near the IR port of the thermo-hygrometer between 3 and 6 inches (8 and 16 cm) and pointed directly at and perpendicular to the IR window.



*Note: When using IRCOMM and an IR dongle, the data transfer can be susceptible to interference from fluorescent lighting.*

## 11.4 CE Comments

### 11.4.1 EMC Directive

Hart Scientific's equipment has been tested to meet the European Electromagnetic Compatibility Directive (EMC Directive, 89/336/EEC). The Declaration of Conformity for your instrument lists the specific standards to which the unit was tested.

The instrument was designed specifically as a test and measuring device.

Compliance to the EMC directive is through IEC 61326-1 Electrical equipment for measurement, control and laboratory use - EMC requirements (1998).

As noted in the IEC 61326-1, the instrument can have varying configurations.

The instrument was tested in a typical configuration with shielded, grounded probe and RS-232 cables. Emissions may, in non-typical applications, exceed the levels required by the standard. It is not practical to test all configurations, as the manufacturer has no control over the probes the user may connect to the instrument.

#### 11.4.1.1 Immunity Testing

The instrument was tested to the requirements for industrial locations.

This allows the instrument to be used in all types of locations from the laboratory to the factory floor. Criterion B was used for Radiated RF (IEC 61000-4-3) and Conducted RF (IEC 61000-4-6). Therefore, the operation of the instrument may be affected by excessive electromagnetic interference and the instrument

may not perform within the normal specification limits in such an environment. Criterion C was used for Electrostatic Discharge

(ESD, IEC 61000-4-2) and Electric Fast Transit (EFT, Burst, IEC 61000-4-4). If the instrument is subjected to EFT conditions at 2kV, the instrument may require the user to cycle the power to return to normal operation.

#### 11.4.1.2 Emission Testing

The instrument fulfills the limit requirements for Class A equipment but does not fulfill the limit requirements for Class B equipment. The instrument was not designed to be used in domestic establishments.

#### 11.4.2 Low Voltage Directive (Safety)

In order to comply with the European Low Voltage Directive (73/23/EEC),

Hart Scientific equipment has been designed to meet the IEC 1010-1 (EN 61010-1) and the IEC 1010-2-010 (EN 61010-2-010) standards.

### 11.5 Frequently Asked Questions

Q. Can the 1620 operate on battery power?

A. No. The 1620 requires AC power to be fully functional. However, it does utilize a 9V backup battery that runs the data collection in the event of a power outage. When AC power is interrupted, the display will go blank and an audible alarm will sound to alert you that the 1620 is running on backup power. The 1620 will continue to collect data on backup power for approximately 16 hours. When AC power is restored, the display will come back on and show a message stating the AC power was interrupted. See Section 6.2 Battery.

Q. Can I swap out sensors in the field?

A. Yes. The sensor's calibration information is stored in the sensor itself. When you change out the sensor, this information is automatically downloaded to the 1620. There is no need to reprogram probe coefficients into the 1620. See 6.12 Sensors.

Q. How many readings can the 1620 store in onboard memory?

A. The 1620 can store 400,000 date- & time-stamped data points.

Q. What happens when memory is full?

A. The oldest block of data is discarded to allow the most recent measurements to be recorded. See Section 7.3.1 Data Record.

Q. How do I tell how much memory has been used?

A. The memory usage expressed as a percent filled is found in the DATA menu under DATA RECORD and DATA STORAGE. See Section 7.3.1 Data Record.

Q. How do I get data from the 1620?

A. The 1620 allows you to download data using a RS232 or IR connection to a computer or printer. You may also use a data card to transfer data to and from the 1620 and a computer. See Section 7.5.3 Comm Setting.

Q. Is the IR output on the 1620 compatible with my IR printer?

A. The IR port on the 1620 is compatible with any IrDA compatible device. See Section 7.5.3.2 IR.

Q. Can I change the data stored in memory?

A. No. Data stored in memory cannot be changed. It can be downloaded, but the original data file cannot be changed. Memory can be cleared of all readings.

Q. Does the 1620 utilize password protection?

A. Yes. Refer to section 7.5.4 in this manual.

Q. What is the recommended calibration interval of the 1620?

A. The 1620 does not require calibration. The 2626-X probes used with the 1620 should be calibrated annually.

# Index

## A

AC adapter 2, 17, 21  
accessories 13, 19  
accuracy 9, 24, 137  
air velocity 24  
alarm 56  
alarm screen 23  
average 28, 36, 48, 50

## B

battery 3, 13, 18, 21, 58, 69  
baud rate 66, 72  
beep 56  
buttons 15, 18

## C

calibration 31, 131  
cautions 3  
channel 16, 28  
clear data 47  
clear statistics 52  
clock 62  
commands 72  
communication 64, 71  
condensation 25  
contrast 22, 33

## D

daily statistics 48 - 50, 52, 64  
data card 53  
data, recorded 41, 54  
date 34, 36, 62

daylight saving 63  
decimal 33  
delta 37  
dew point 37  
display 23, 33  
display layout 34

## E

environmental conditions 10  
error message 65, 137  
extension cable 22

## F

fields, display 36  
file, data card 54

## G

graph 34, 38, 42, 45, 55, 64

## H

heat index 37

## I

ID, sensor 30  
IR port 67, 71  
IrDA mode 67

## L

layout, display 34  
lock, sensor 30

## M

maintenance 135  
measurement period 28  
measuring 23, 28  
menu functions 27, 29, 31, 33, 35, 37, 39, 41, 43, 45, 47, 49, 51, 53, 55, 57, 59, 61, 63, 65, 67, 69

## O

operation 21

## P

password 67  
period, measurement 28  
period, printing 66  
period, recording 42  
ports 64  
power 17 - 18, 59  
power switch 18, 22  
printing 45, 50, 66

## Q

quick buttons 18  
quick start 13

## R

rate of change 29, 36, 58  
rate time 29  
recording 23, 42  
recording period 42  
reset display 40  
reset statistics 49, 51  
resolution 33  
response time 25  
RS-232 65, 71

## S

safety information 2  
self-heating 24  
self-test 22, 137  
sensor 14, 16, 19, 22 - 24, 58  
sensor accuracy 24  
sensor calibration 31, 131  
sensor identification 29 - 30, 36  
sensor lock 30  
serial number 36  
serial port 65, 71  
service centers 3  
specifications 9  
stabilization 25  
stand 18  
statistics 36, 48 - 49  
storage capacity 43, 46  
switch 22  
system information 69

## T

temperature unit 33, 61  
time 34, 36, 62  
troubleshooting 137, 139, 141

## U

unit of temperature 23, 33, 61

## V

version 69

## W

warnings 2  
warranty 10 - 11

## **Z**

zones, display 34